P2P IPCAM User Manual

(For Windows OS)

IP camera User Manual

Our products penetrate the P2P technology, such as computer plug and play with networking so it makes Telecom, China Netcom, 3G smooth exchange of visits, which achieve Internet Interworking ideal target.

Note: The picture is for reference only.

1.Hardware Installation

•1.1 Open the package and take the ip cam and accessories out, First install the ipcam wireless antenna



•1.2 Fix the ip camera, insert one end of the network cable to the camera tail Ethernet card interface, on the other end of the RJ45 network interface connected to a router or switch..



•1.3 The software of IP Camera support windows XP/Vista/windows7 etc. operation system, Pls use the power adapter to connect the DC5V port on the back of the ip camera. Plug the other end to an electrical outlet. Check the card's power indicator light (yellow) and the network indicator (green) is working properly, the camera pan and tilt rotate automatically..



2 .Software Installation

•2.1Please insert CD into your computer's CD-ROM driver, it will operate automatically, if not, pls double click the "autorun.exe", the file can be opened.




Click "search.exe", Follow the tips, LAN tool is installed into the system and generated

on the desktop"IP Camera Search "

•2.2 Search the device and login

The LAN run search tools "IP Camera Search", the program will find the network cameras and displays the search to the IP address, port number, the name. If WIFI wireless connected, it will display the IP address of the wireless. As shown,

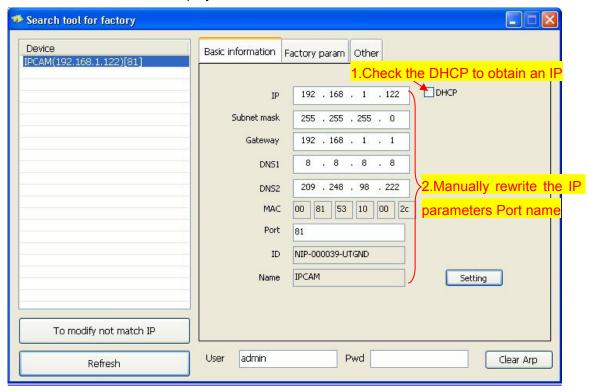



To select Basic information can change the parameters, click Set to save the changes

•and enter the IP address directly open the login authentication page (for example, enter: http://192.168.1.122: 81)to open the login screen as shown below shown,



•After entering the correct user name and password and click "OK" to open the monitor screen click on the appropriate browser model.

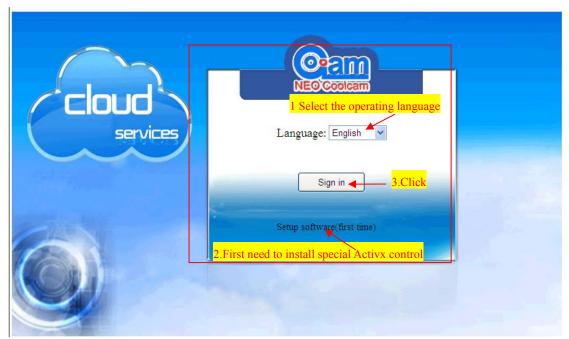

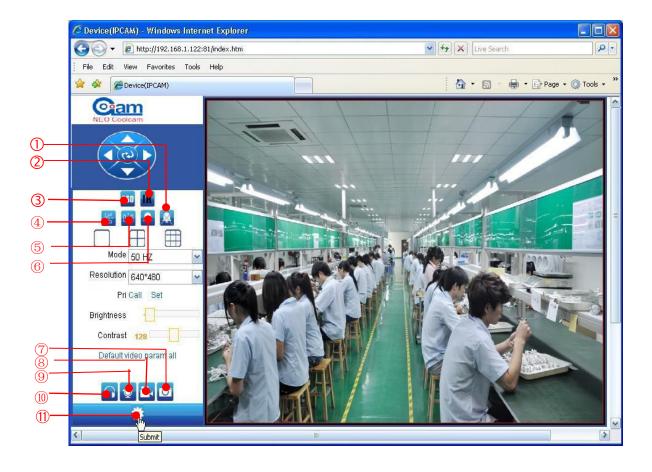


- 1.Alarm open 2.Software control lamp 3.Display date time 4.Upside down 5.About flip
- 6.Alarm 7, Capture 8. Video 9. Intercom 10. Voice 11. Set
- Into the picture settings




Basic equipment

Device Status
81.2.64.132
20.26.1.0.28
200ZX
NIP-111401-EBAFF
None
UPnP Succeed
No Action
00:6E:06:44:4A:3F
00:6E:06:44:4A:40
Externwifi Error
0 M
0 M
sd card is not inserted
English 💌


• Device name setting

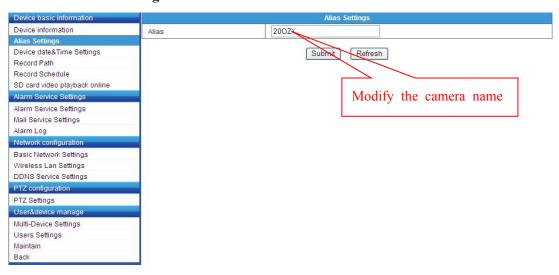


• Device's clock settings

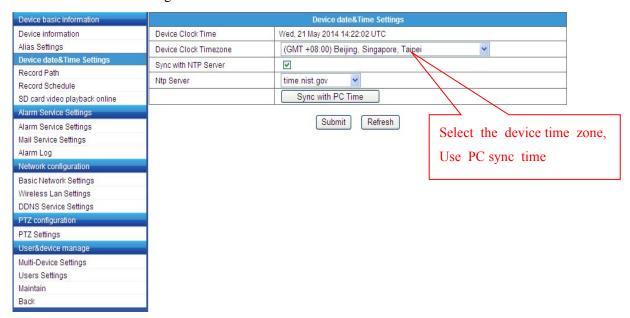


• Local video

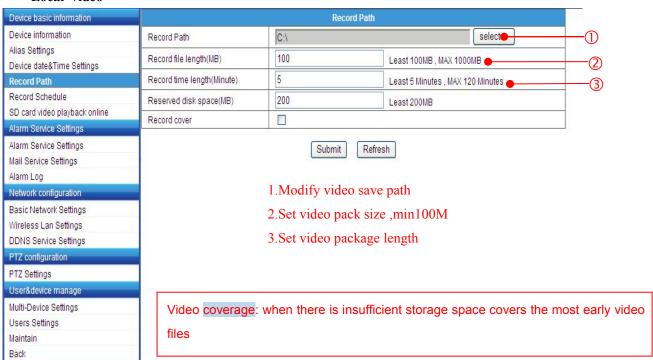


• SD card recording scheme

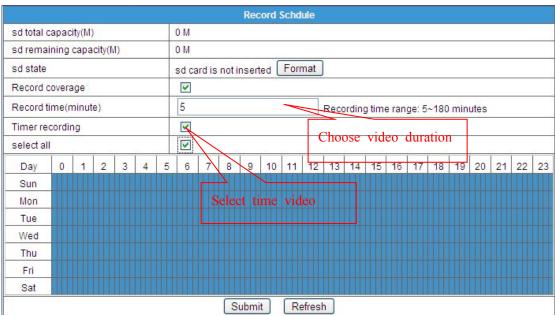


SD card playback

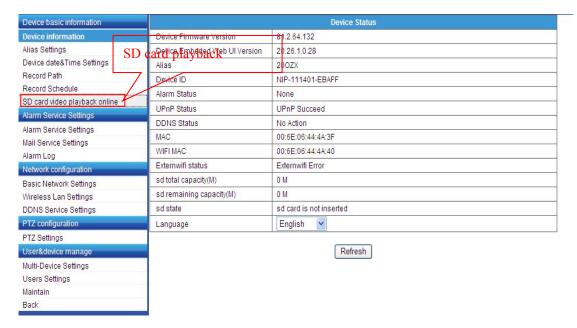


Alarm service settings

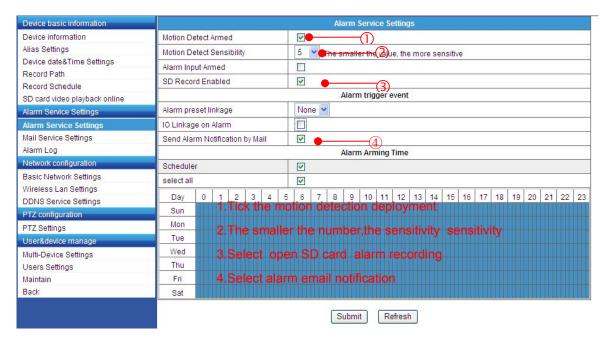


• Mail service settings

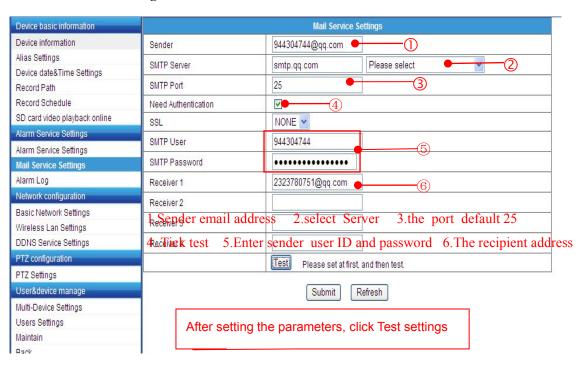

Alarm Log

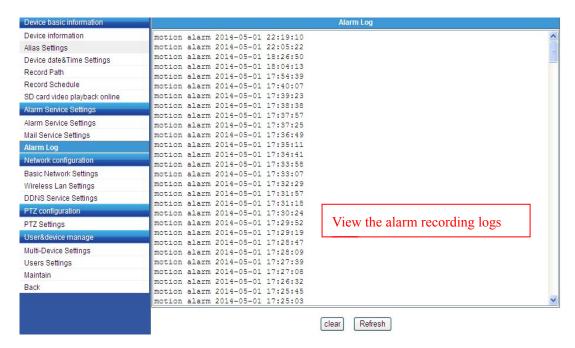


Basic network settings

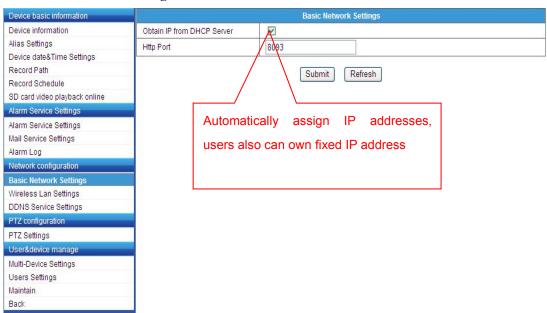

2.3 Wireless network settings

Tick in the " wireless LAN " behind . You want to connect to and select SSID , the input selection SSID password , as shown below:

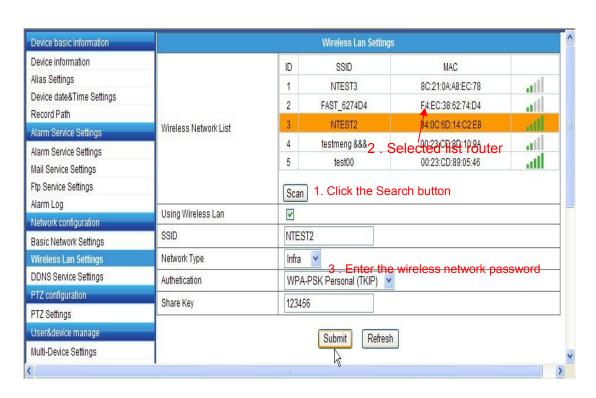


•2.4 DDNS settings

ipcam(DDNS built-in) no need settings

Select service providers: Please select a server of the service provider, such as: dyndns.org、3322.org、365home.org

Application domain address: Fill in the user application domain address, as shown below:(Demo.dyndns.org)

User name and password: fill in the the DDNS account number and password, if you use the ipcam domain name, you can find the username and password in the camera tab: DDNS account and password.

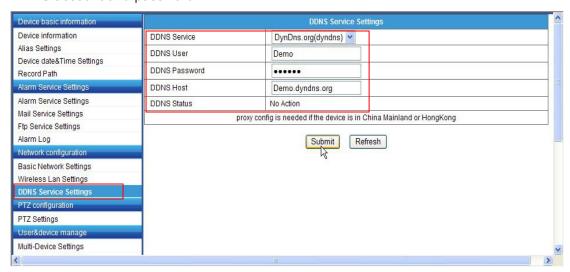


Extranet landing camera simply in the browser address bar and transportation equipment DDNS domain name address plus port number of the camera you can access the IP camera!

• PTZ




Multi -channel device settings

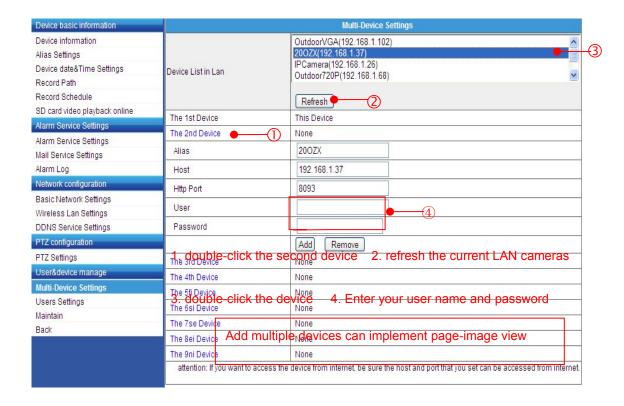

User setting s for the device




Maintain

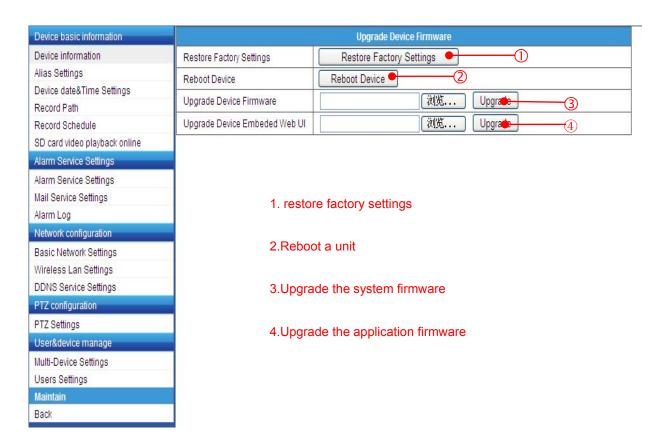



3. Installation plug-and-play software.


Install the plug and play software DeviceClient ,After installed, the icon will display

on the screen, click to open it to view. Click "Devices list" ,Double-click search camera ID Online to add LAN camera in the pop-up box click "Open search interface

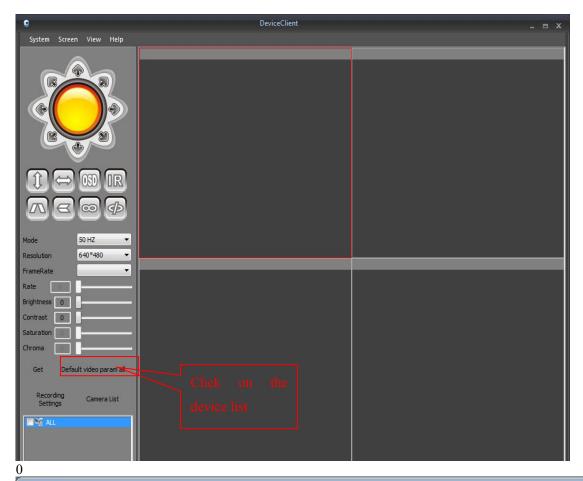


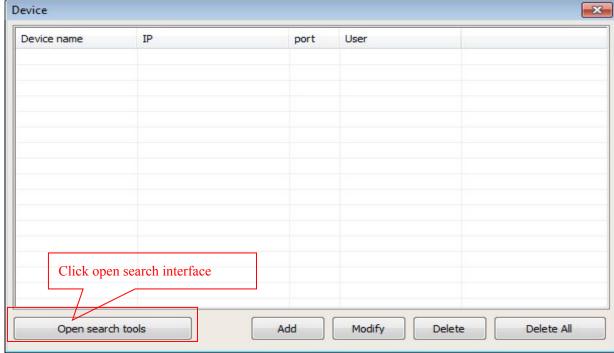


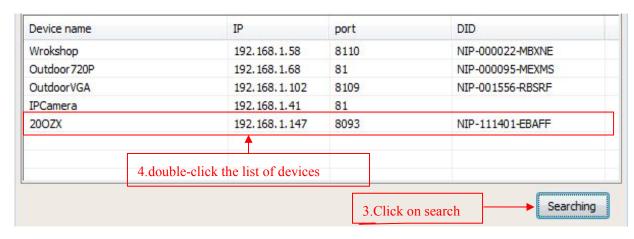

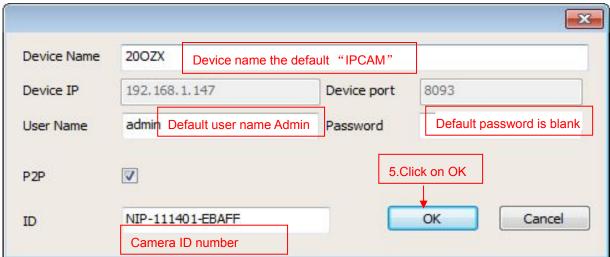

Note: using a video camera for the first time users are advised to go to the client "user management" set a security password for the camera, or use IE browser to access the camera's settings "device settings" to set your password.

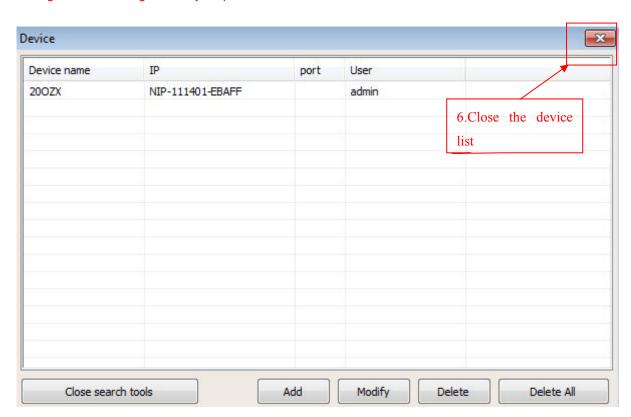

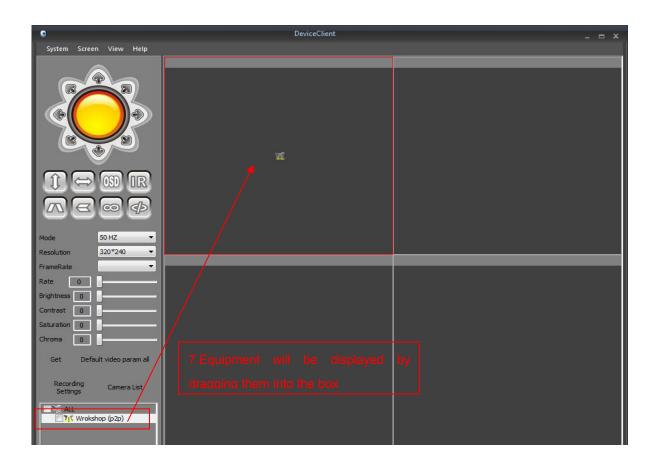


Now we can watch the monitor screen

• Monitor interface button descriptions

1.Displays the time the cameras and names 2.About cruising 3.Cruise 4.About flip


5. Upside down 6. Alarm switch is closed 7. Alarm switch opens 8. Sound

9.Intercom 10.Video 11.Capture

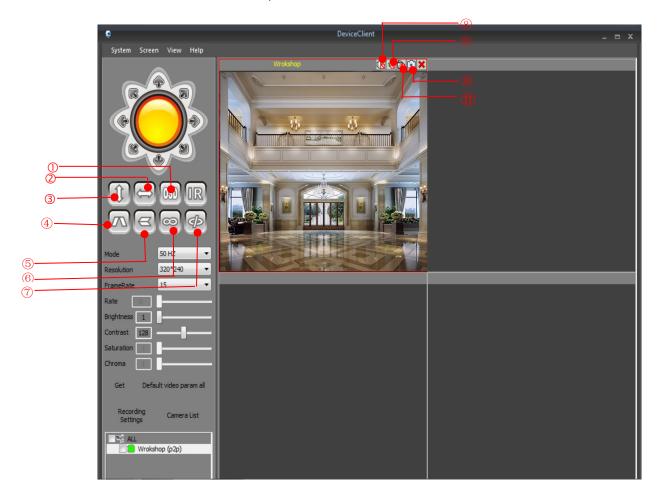


4.Delete, modify the camera

Click on the "devices list" in the "device" interface, click on the "modify" camera camera information can be modified.

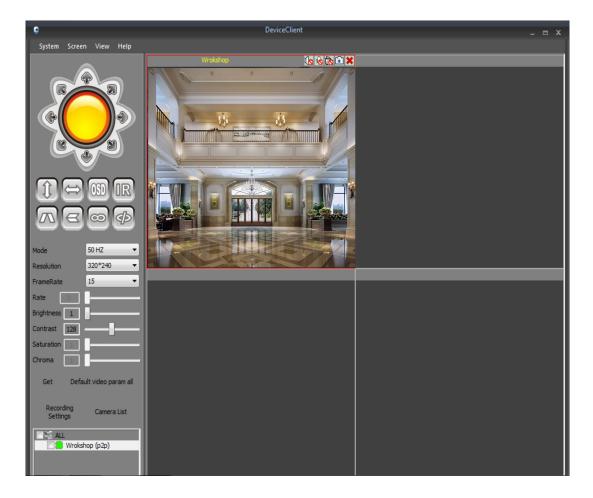


Modify the information

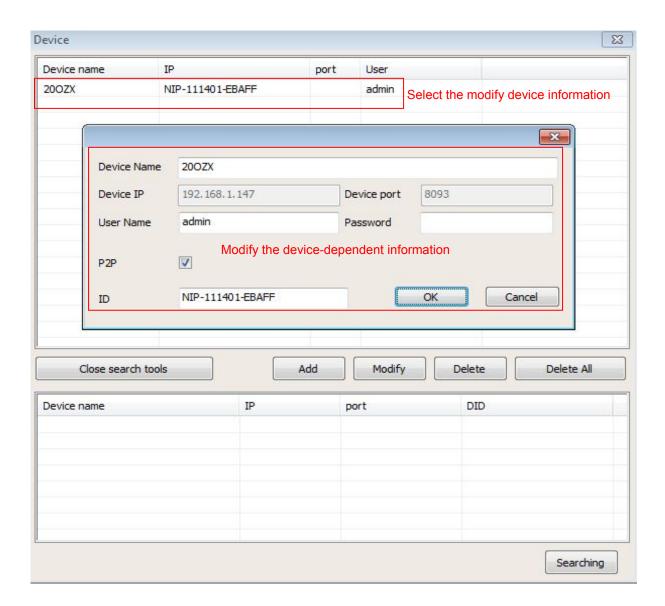


• Remove the device


Click on the "devices list" in the "device" interface, click on the "delete", a device can be deleted

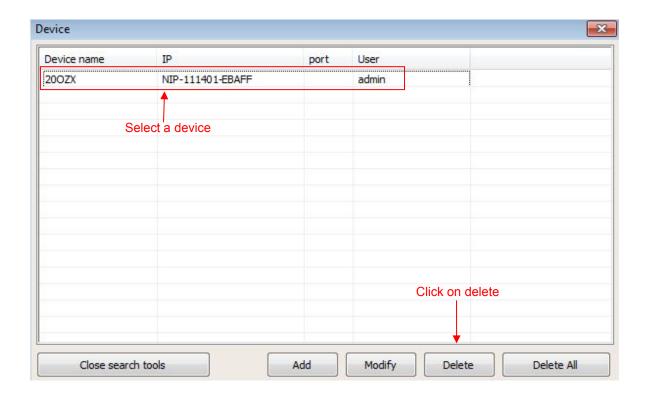


4.1 Add remote access video camera

Add remote access video camera

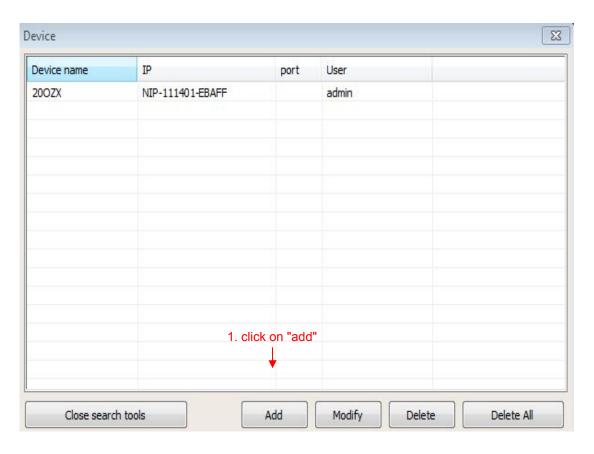

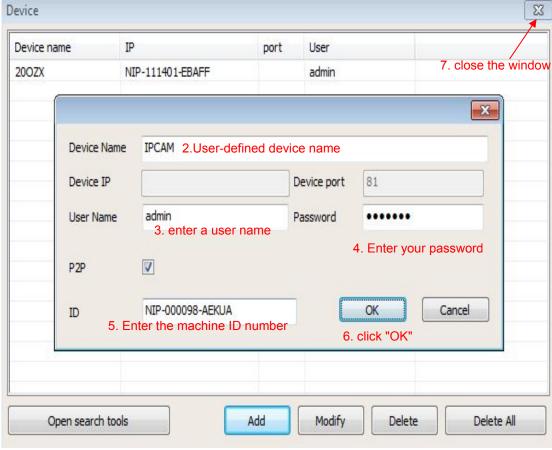

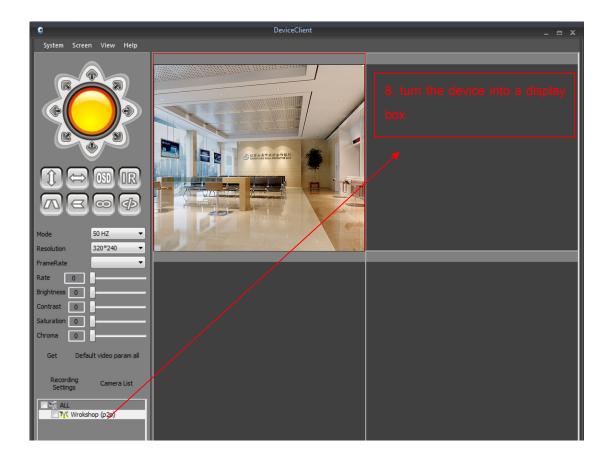


Now we can watch the monitor screen




4.1 Voice intercom, video, camera


Device to take pictures, and video viewing

Click on the "system settings" viewing photos and videos

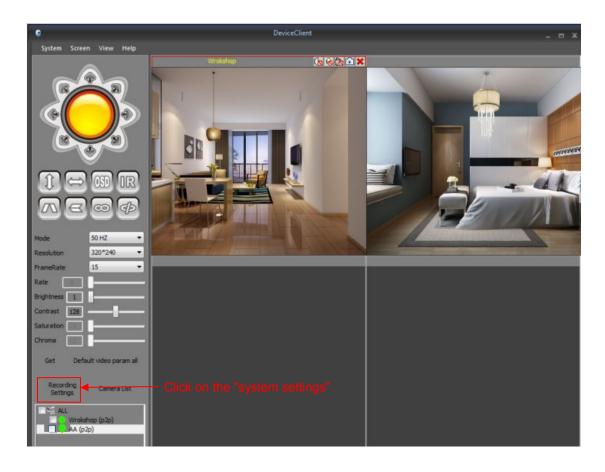


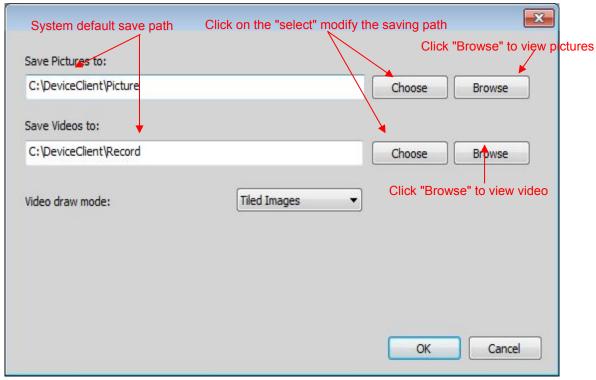


5.Set

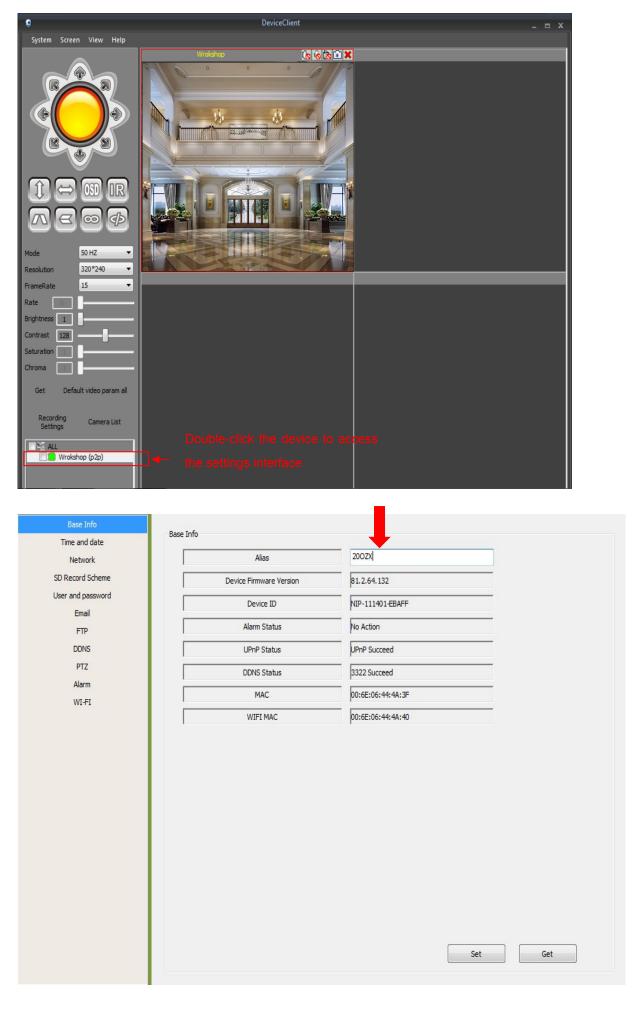


5.1 The date and time

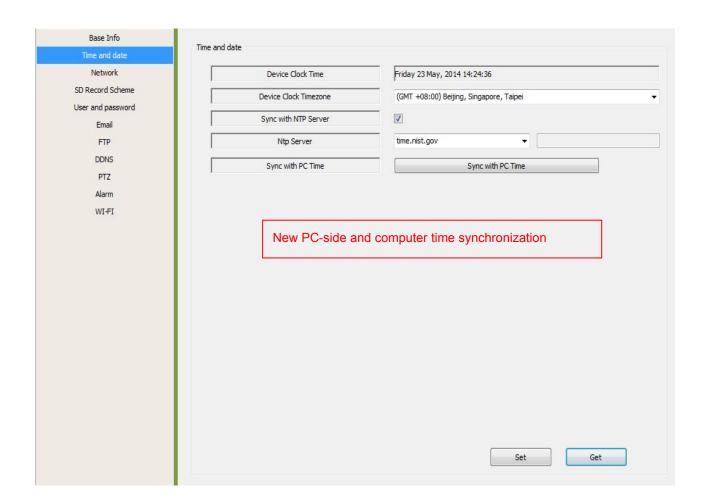

5.2 Network parameters

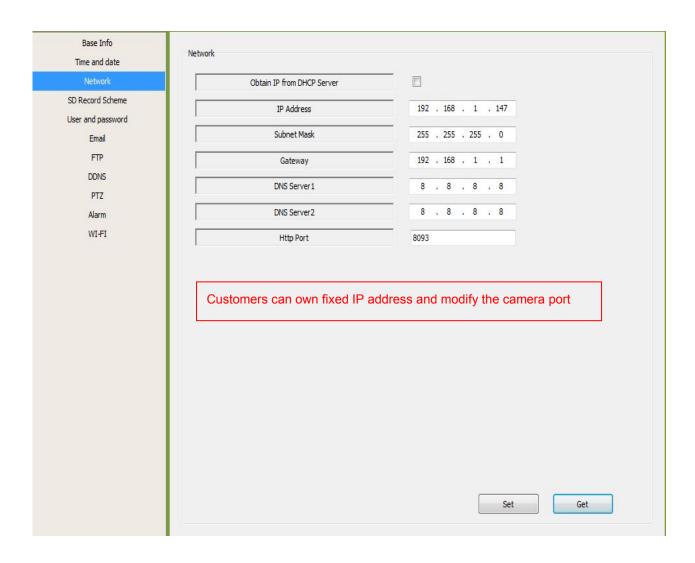


5.3 Recording schedule

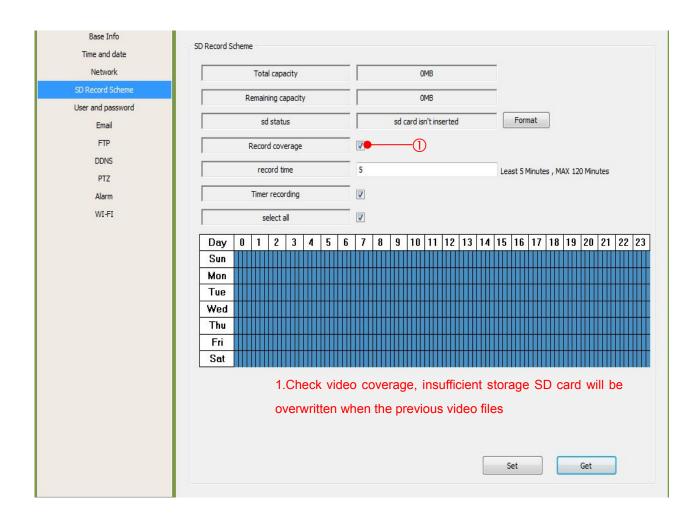


Video coverage: when the storage space is low, a video file will overwrite the earliest recorded file.

Video duration: minimum 5 minutes, maximum 120 minutes.


5.4 User management

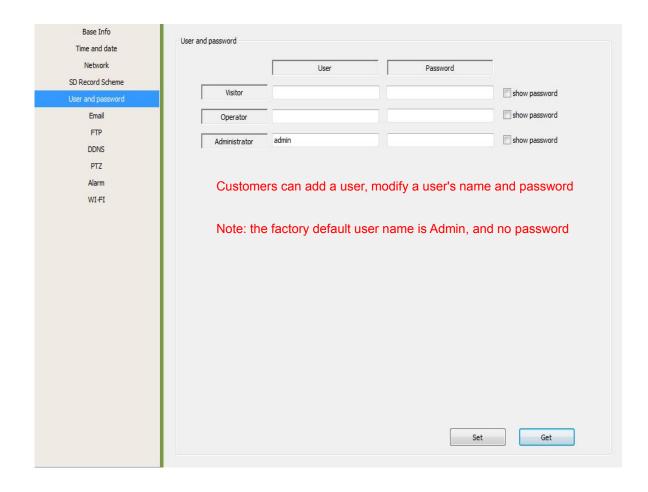


5.5 Maill Box settings

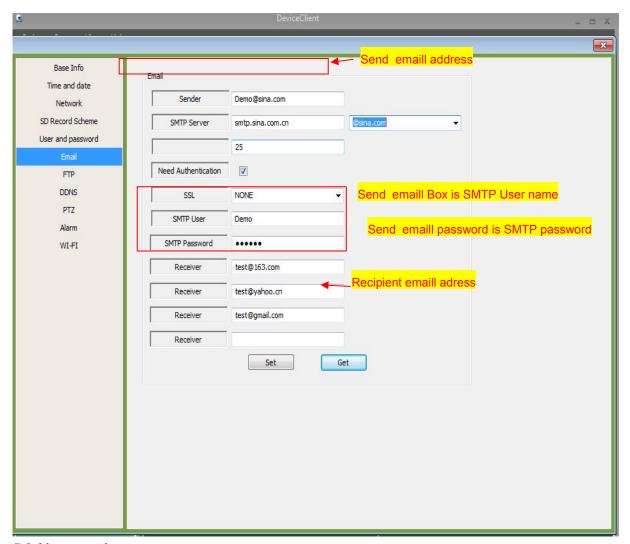


5.6 Alarm setting

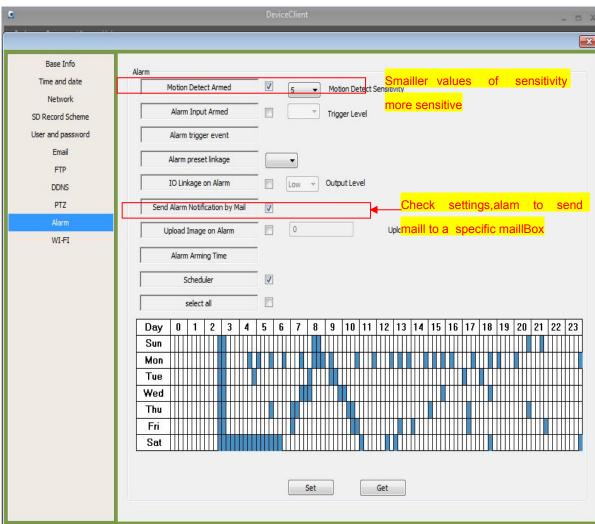


5.7 WIFI setting

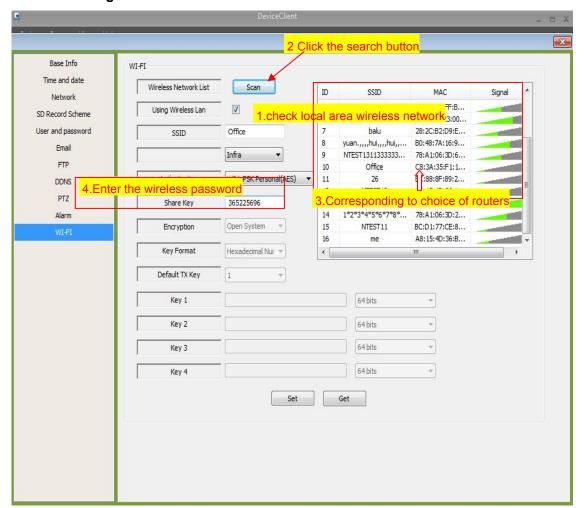

5.8 FTP Setting

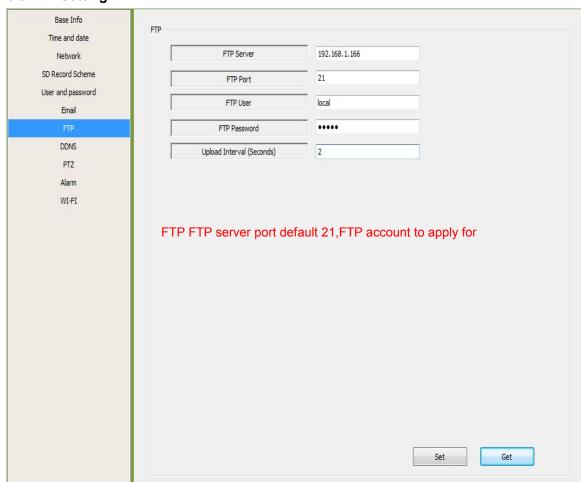

5.9.DDNS setting

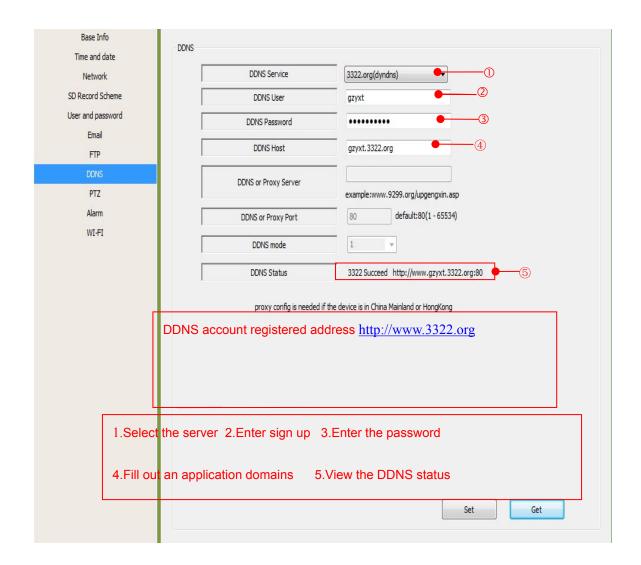

• PTZ setting

