

WIRELESS PEEPHOLE VIDEO DOORBELL




USER MANUAL

Please make full charge before use it!

This smart battery Wifi
Video Doorbell lets you
answer the door from

anywhere,whether you're
halfway across the world,
or just too busy to walk to
the door. It lets you see,
hear and speak to visitors
with ease using your smart
phone or tablet.

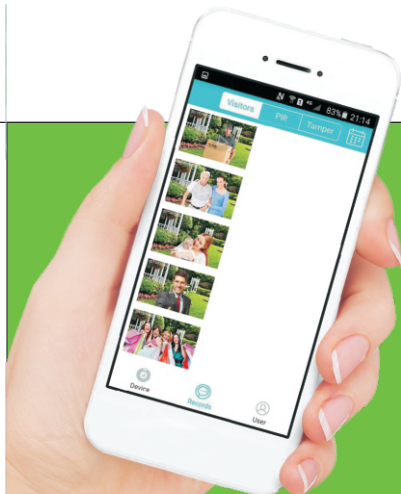

Note: If any security apps have been installed in
your phone/tablet that could affect the
“WeCSee”app,please be sure to
grant it the appropriate permissions.


STEP 1 INSTALL APP



NOTE: Search for **WeCSee** on the
Google Play/iPhone app stores.


STEP 2 CREATE ACCOUNT

Open the app.Follow the
prompts and tap
“Sign Up”to create an
account. Be sure to allow
all permissions requested
by the app.

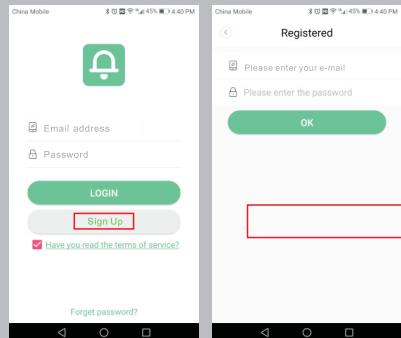

STEP 3 ADD DEVICE

Tap the ⊕ to add
a new device.

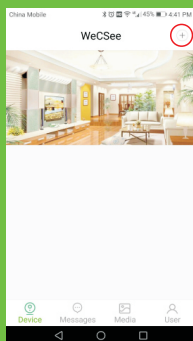

STEP 4 SCAN QR CODE




Scan the QR Code
located behind the
device using the app.

STEP 5 Wi-Fi CONFIGURATION

Note: Make sure your
phone/tablet is connected to your
Wi-Fi internet prior to configuring
the Wi-Fi for the doorbell.



Configure Wi-Fi within 10 feet and
in sight of your Wi-Fi router.

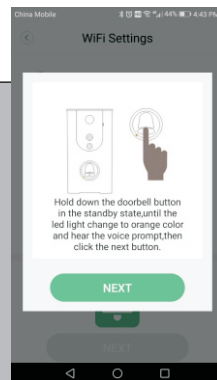

Hold down the doorbell
button for 5 seconds
to initiate Wi-Fi
configuration mode.The
LED light will illuminate
orange and once you hear
the voice prompt, tap
“Next.”

STEP 6 Wi-Fi SET UP FOR iOS & ANDROID


- 1.Tap “CONNECT IBELL”
button and chose network
“IBELL” in Wi-Fi settings.
- 2.Return to the app
and tap “Next”.

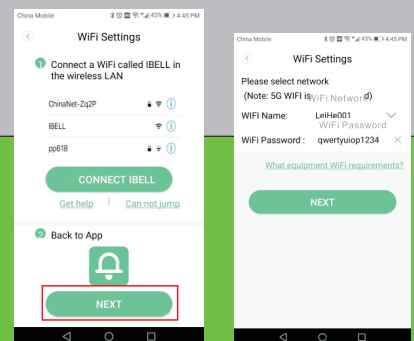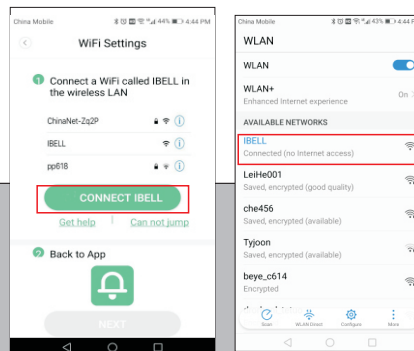

TIP:
Wi-Fi SET UP
NOT WORKING
Try restarting
your router.

STEP 7 APP/DEVICE CONNECT

Once the Wi-Fi set up is complete and
you hear the voice prompt confirming
that the Wi-Fi configuration was
successful, tap “Done”.

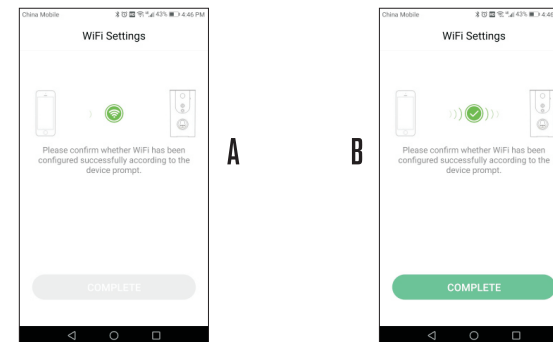


DONE!

DEVICE INSTALLATION

Simply press the
doorbell button to start.



FLIP OVER
FOR MORE
DETAILS!

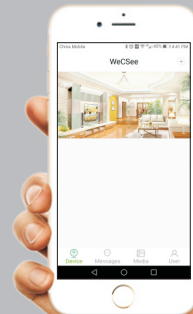

REMOTE VIEWING NOTIFICATIONS




When the doorbell button is pressed, the app will send the following notifications, depending on the mode it's on.

STANDBY MODE

Android will receive a phone call.

iPhone will receive a push notification. Tap to continue.

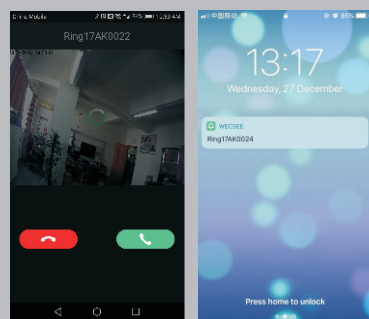


APP INTERFACE FUNCTIONALITY

- TAP TO TAKE A SNAPSHOT
- TAP AND HOLD DOWN TO TALK
- TAP TO RECORD VIDEO
- BATTERY LIFE: Runs up to 8 months after 1 full charge

PIR SETTINGS

This function can only be enabled AFTER the app has been successfully added to your phone.

When pir alarm(PIR) are turned on, you'll be notified on your phone whenever motion is detected or when theft is attempted.

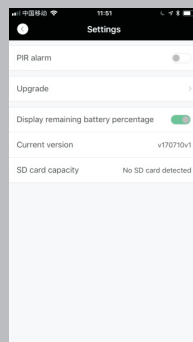

SHARING WITH OTHER PHONES

Shared users: Please download and install the app before proceeding.

This device can support 4 users. The shared users can add the device by scanning the shared QR Code provided by the Administrator(owner of device).

ADMINISTRATOR:

Setp 1: Choose the device you want to share.

Setp 2: Tap SCAN QR CODE SHARING. A QR Code will pop up.

SHARED USER: Setp 3: Tap on ADD NEW DEVICE and click on


icon to scan the QR Code.

Setp 4: Scan the QR CODE that appears on the app of Administrator.

Setp 5: Tap "OK".

Setp 6: "Admin" Choose "AGREE."


Refresh Device List.

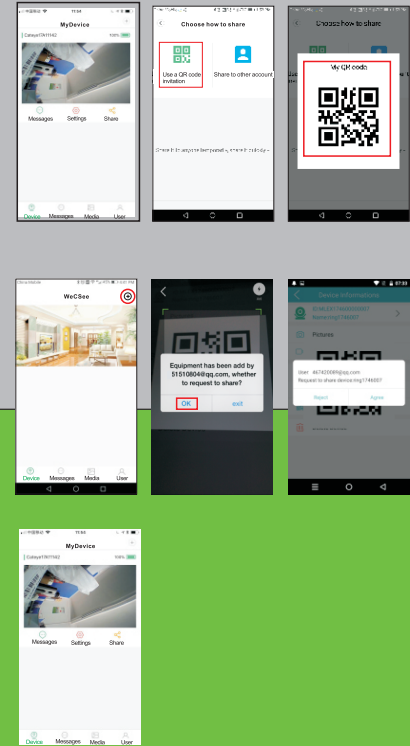

DEVICE APP FUNCTIONS

After installing the app, go into your device'

information by tapping on the added device. Here you may review your pictures, videos, change your Wi-Fi settings, share the device or delete the device.

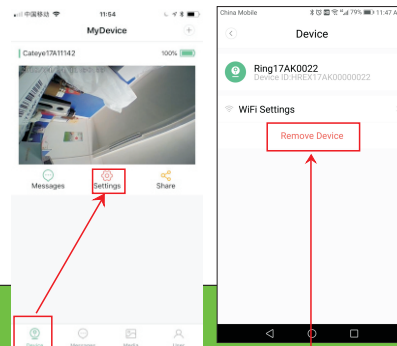

Note: If you wish to no longer use the device, please delete it from your phone using this option.

TROUBLE SHOOTING

WONT TURN ON: Please ensure that the device is properly charged.




DEVICE WONT TURN ON AFTER INITIAL USE:

If you remove the device from the mounting plate while the Tamper Alarm function is turned on, you may disable the device. Simply put it back on the mounting plate and press the doorbell button. GO to the app settings to turn off the Tamper Alarm. Only support 2.4G Router

DEVICE WONT TURN ON AFTER INITIAL USE:

If prompted with "The Connection Failed, Please Check The Wi-Fi Configuration is Correct" when ringing the doorbell after the device has been successfully configured, there may be too many barriers (typically walls) between your Wi-Fi router and the device which has weakened the signal.

MOUNTING WALL INSTALLATION

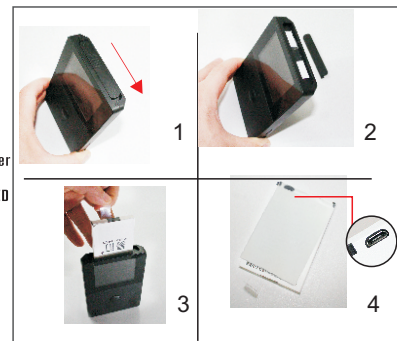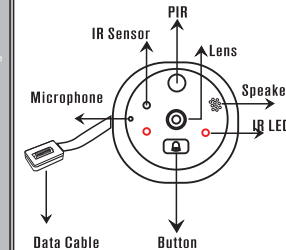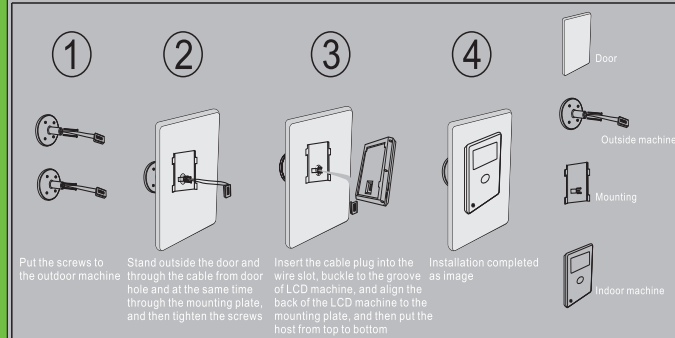

SPECIFICATION:
MATERIAL: Aluminum Alloy
LCD SIZE: 2.8 Inch
DISPLAY RESOLUTION: 720P
BY PHONE: Android, iOS
ANGLE OF VIEW: 130°
MOTION DETECTION: Support PIR
WI-FI MODE: 802.11 b/g/n
INPUT/OUTPUT: Built-in microphone, two-way audio
NIGHT VISIBILITY: 2pc IR-LEDS, Night vision 1-2 meters
STORAGE: Cloud storage and TF Card(32GB Max.)
BATTERY: 3000mAh battery, charged by USB(5V, 1A)
USER ACCOUNTS: Total 4 Users(Admin user and shared user)
CERTIFICATION: CE, FCC, RoHS