

Instruction Manual

(Plug -in Chime)

Thank you for choosing our Plug-in Chime. Please read this instruction carefully before assembling & using the product. Keep your owner's manual for future reference.

Safety Instructions:

1. Please install the Chime according to this manual to avoid any malfunctions or damage.
2. The Chime is designed for indoor use only.
3. The Chime is not user serviceable, there is a danger of electric shock if opened.
4. Do not expose to rain/dripping or immerse in water.
5. Do not mount it close to a fireplace or expose to high temperature.
6. Never use any cleaning chemicals or wet cloth to clean the unit. Only use a dry, clean and soft cloth/micro fiber cloth.

What' s Included in your Kit

1 x Plug-in Chime

1xinstruction manual

Specifications:

| | | | |
|--------------|-----------|---------------|--------------------|
| Voltage | AC90~260V | Frequency | 433MHz |
| Output Power | 0.15W | Standby Power | $\leq 10\text{mW}$ |
| Sensitivity | -112dbm | Volume | Up to 100db |

Overview

 
A: Volume control

B: Forward Button


C: Backward Button

D: Music Selection

E: LED indicator

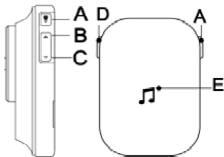

 Note: Diagrams are only for information, take practicality as standard.

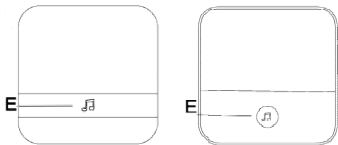

Installing Plug-in Chime

Plug into any regular household socket.

(Please tear metal strip protective film off before using).

1. Melody Selection

This Chime provides more than 50 pieces of music (it's up to the Plug-in Chime you bought). When it is plugged in, press the music select button to choose desired music or press forwards to play previous music and backwards

to play next music until you hear a chime you like. (If you want the Chime to remember selected music, please refer to below point 5~6 if any expanded units exist).

2. Sound Volume Selection

Press the volume control repeatedly until the desired volume is achieved – 5 levels are available as a circle, lowest level is mute.

3. Pairing with your Wi-Fi video doorbell

Press and hold Volume button for 4 seconds until the LED indicator lights up, Wi-Fi enters into pairing status. Then press the button on the Wi-Fi video doorbell within 5 seconds, pairing is completed once LED indicator on the Chime is flashing. When above procedure is finished, pairing is quit automatically.

4. Two or above Wi-Fi video doorbells pairing with the Same Music or Same Chime Unit

Choose one favorite music by pressing music select button, then long press Volume button for 4 seconds to enter pairing status. Press the Wi-Fi video doorbell within 5 seconds to get connection, once LED indicator on Chime is flashing, pairing is completed. Repeat this operation to get other required Wi-Fi video doorbell connected with same music or same Chime unit. When above procedure is finished, quits automatically.

5. Two or above Wi-Fi video doorbells Pairing with different Music

Choose one favorite melody first, long press 4 seconds on Volume button to enter pairing status, then press the first Wi-Fi video doorbell to pair. Press music select button to change

melody and pair with different Wi-Fi video doorbell one by one. When above procedure is finished, pairing is quit automatically.

6. Two or above Chimes Unit Pairing with Same Wi-Fi video doorbell

Long press Volume button on first Chime Unit for 4 seconds to enter pairing status, press the Wi-Fi video doorbell within 5 seconds to get connection. Repeat above operation to pair Wi-Fi video doorbell with required Chime Unit one by one.

7. All Pairing Memory Clearance

Press and hold Volume button until plug into household socket for 5~10 seconds to erase all pairing memory, when Plug-in Chime LED indicator long light up that means setting successfully, thus program returns to default.