


Water-proof and Lower Power Consumption WIFI Battery Door Bell

Quick Guide


\* Before using the product, please read the Quick Guide carefully and keep it well.

Packing List


After opening the package, please check the door bell (the "Equipment") to verify whether the following parts are complete

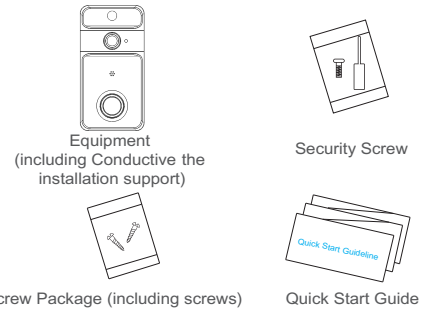

Appearance

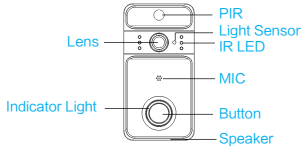




- IR LED** In the event of inadequate ambient light, turn on the IR LED to increase the brightness
- Light Sensor** Used to collect ambient light. When luminance is lower than 2 Lux, turn on the IR LED
- MIC** Used to collect ambient sound and achieve vocal dialogue
- Button** Used to wake up the Equipment to notify the user of any visitor and link to the buzz responder
- PIR** When someone moves in front of the equipment, triggers a signal that is generated and sent to the cell phone
- Lens** Used to collect the image and video
- Indicator Light** When the Blue Indicator Light is blinking, the Equipment is in the configuration status; When the Red Indicator Light is always ON, the WiFi connection has failed; When the Blue Indicator Light is always ON, the Equipment is successfully connected; When the Red and Blue Indicator Lights are ON at the same time, the Equipment is connected to WiFi;
- Speaker** Used to send out a system prompting sound and achieve vocal dialogue

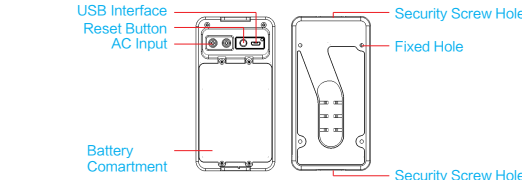




- USB Interface** Used to charge the Equipment through the USB Interface
- AC Input** Used to supply power to the Equipment through the AC Input hole on the Installation Support
- Reset Button** When the Equipment is working, press this button for 5 seconds to reset to the default settings
- Battery Compartment** Used to install the original battery (pay attention to the positive and negative poles) (the Equipment can be disconnected from the power)
- Fixed Hole** Installation Screws in the accessories pack are used to install the Support on the wall
- Security Screw Hole** Security Screws are installed to prevent the Equipment from being dismantled

Installation Guide

As shown by the following pictures, remove the rear panel

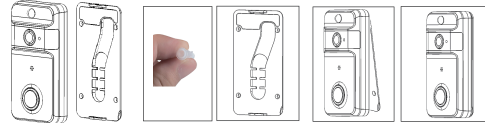

- The Installation screws in the accessories pack are used to install the Support on the wall (or 3M glue is sued to stick it on tempered glass or stainless steel)
- The Conductive Screws in the accessories pack are used to connect the AC (16-24V) wire to the AC Input hole (if no AC power is available, this step can be omitted)

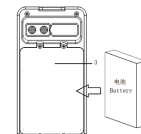

- Take out the battery cover, install the lithium battery, and put the four cover screws in place
- Long press the Reset Button for 3 seconds, and wait for the Red Indicator Light to blink slowly
- Align and clamp the door bell and the Support. Lock 2 Security Screws to complete installation

Buzzer Matching

Matching:1) Press and hold the buzzer volume key for 4 seconds. The LED Light is will be ON. Then press the doorbell button within 5 seconds. When the buzzer LED blinks quickly, the matching is done

Reset: 1) Press and hold the buzzer volume key until the socket is inserted for 10 seconds. The matching is clearly completed.

Equipment Connection

Thanks for choosing our product. To start with, scan the following QR codes to install the app. After completion, set up your Equipment by following the steps below

1. Download the Mobile App




- Scan the QR codes to download it
- For Apple users, search "XSH cam" in the App Store to download it
- For Android users, search "XSH cam" in Google Play to down the app

2.Setting up New Equipment

Power on the Equipment and wait for the system voice prompting: "Enter the Configuration Status". (If not in this status, please press and hold the Reset Button for 5 seconds after waking up the Equipment, and release it after the Equipment's LED is OFF. The system is automatically restarted.) After the Equipment enters the configuration status, please ensure that the cell phone is connected to the available WiFi. After that, open the XSH cam app to install the doorbell lens

Click to add the Equipment



Click to install the lens




Before setting, ensure that the Equipment is in the configuration status. Under the configuration status, there will be a voice prompt to "enter the configuration status"



If no prompting voice is heard, please press the Reset Button for 5 seconds and wait until the LED is OFF, and then release it. The Equipment will be restarted to enter the configuration status




The app will automatically complete the name of the WiFi. Please input the corresponding WiFi password, turn up the volume, and then click "Next". If this is the second time you are connecting to the same WiFi, the app will automatically complete the password. It is not necessary to re-enter the password



The cell phone will send out a sound wave. Please keep quiet at this moment. Please put the cell phone 30cm away from the Equipment, and wait for the Equipment to configure the network



The Equipment has been connected with the network. Please enter the name and password of the Equipment. The password must be at least 8 characters long (including upper case letters, lowercase letters and digits) (the password listed is for reference only)




The setting is done. The Equipment will automatically enter the List of Equipment interface. Congratulations! The Equipment has been successfully installed



3.Instructions on Use of Equipment

1) In the List of Equipment interface, click the Setting icon at the upper-right corner of the Equipment to enter the setting interface of the Equipment

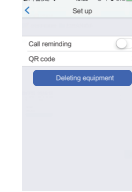

Open the call reminder, when someone presses the power button or calling, you can receive a reminder, And you will not receive the reminder after turn it off

Call reminding


If the Equipment is already set up, and you expect to share it with friends and family members, you may choose to send the QR code to them

QR code

Delete the Equipment in the List of Equipment. After deletion, the Equipment will not be in the List, and calling will not be received any more, but the lens will not be affected. The Equipment can still be checked by other connected cell phones

Delete equipment

Instructions on PIR  
The PIR function is supported. To activate it, just choose PIR in the setting menu

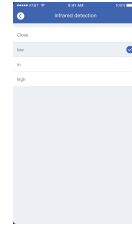

Inactivated- In this status, PIR is closed  
Lowered Sensitivity - In this status, continuous 7-second body induction will wake up the recording of the Equipment and call the cell phone  
Moderate Sensitivity - In this status, continuous 5-second body induction will wake up the recording of the Equipment and call the cell phone  
High Sensitivity - In this status, continuous 1-second body induction will wake up the recording of the Equipment and call the cell phone

Note: If used in a higher traffic environment, OFF or Lowered Sensitivity is suggested in order to reduce the waking up of the Equipment and call times, thus prolonging the battery life

4.Attention!

- The Equipment uses a polymer battery. When charged full, it is estimated to last 6 months. When it is running out of power, the cell phone app will prompt you. Please recharge the Equipment in a timely manner after receiving the prompt.
- During installation, please ensure that the network is normal in the installation environment, and especially outdoors, please check whether WiFi covers the area. In the case of a weak WiFi signal, it is required to add a WiFi signal relay amplifier
- The Equipment is a kind of smart product with low power consumption. Remote app waking up, PIR waking up and bell press are supported. 15 seconds after waking up, it will enter the dormant status until it is woken up the next time

Technical Specification

Resolution	1280* 720
Field of Angle View	166° (opposite angle)
IR LEDIR LED	6 lights, 850mm
Wi-Fi	802.11b/g/n supported
Audio	Two-say speaking, with echo removal function
Recording	T F Card (15 seconds/time)
Battery	Polymer battery 6000mAh
Push	Quick push for 2 seconds to wake up for 600ms
Prompting	Press/PIR/cell phone positive waking up
power	Standby current 120uA/working current170uA.
Waterproof grade	IP53 (rain proof )

\*1 polymer battery (6000mAh), 10 minutes working each day, and 6 months in total.

Q&A

Q:Why can't the Equipment be connected to WIFI?

A:1. Please confirm that the WiFi connection is under the 2.4G protocol.

2. Confirm that the Red Indicator Light is blinking slowly.

3. Check whether the account name and password are correct, and whether there are excessive spaces

Q:The Equipment is online, and there is a trigger event, but the cell phone does receive any push messages

A:Check whether the app has "automatic starting" activated, and whether the "application authority" has the notification function activated

Disable "battery optimization" and "close the app when in the background and Always On Display" (depending upon the actual situations, considering different optimization modes for different cell phone manufacturers)

Q: What kinds of power supply modes are supported?

A:1. The Equipment can use the battery independently to work.

2. AC (16-24V) may be used to charge the built-in battery.

3. USB is available to charge the Equipment.

Q: Does the Equipment support 3G?

A: 3G cell phones are not supported, only 4G is supported

Introduction to Functions

One original 6000mAh battery for 6-months of working.

A million HD pixels matched with a 1.7MM wide-angle lens

Cell phone waking up supported

2.4G WiFi connection supported

Clear two-way speaking

PIR supported. When someone is wandering outdoors, warning information is immediately pushed to the cell phone app

Automatic switching of Day/Night mode, all with clear pictures, safeguarding you and your family members

Tip: There will be no further notification of any change of the above functions. Please take the actual object as the standard. Thanks!