

A stylized world map in light blue, overlaid with a network of white lines and dots, suggesting global connectivity. The background is filled with a pattern of binary code (0s and 1s) in a lighter blue shade.

Smarteck Electronics
Telecommunications & Security Solutions

A cluster of colored dots in shades of blue, green, and yellow, arranged in a roughly circular pattern.

USER MANUAL

RUT950 LTE Router



Legal notice

Copyright © 2014 TELTONIKA Ltd. All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of TELTONIKA Ltd is prohibited. The manufacturer reserves the right to modify the product and manual for the purpose of technical improvement without prior notice.

Other product and company names mentioned herein may be trademarks or trade names of their respective owners.

Attention



Before using the device we strongly recommend reading this user manual first.



Do not rip open the device. Do not touch the device if the device block is broken.



All wireless devices for data transferring may be susceptible to interference, which could affect performance.



The device is not water-resistant. Keep it dry.



Device is powered by low voltage +9V DC power adaptor.

Table of Contents

Legal notice.....	2
Attention.....	2
SAFETY INFORMATION	7
Device connection	8
1 Introduction	9
1.1 Specifications	9
1.1.1 LTE.....	9
1.1.2 UMTS.....	9
1.1.3 GSM/GPRS/EDGE	9
1.1.4 Ethernet	9
1.1.5 Wi-Fi.....	9
1.1.6 Hardware	10
1.1.7 Software.....	10
1.1.8 Electrical, Mechanical & Environmental	10
1.1.9 Applications	11
2 Setting up your router	12
2.1 Installation	12
2.1.1 Front Panel and Back Panel	12
2.1.2 Hardware installation	12
2.2 Logging in.....	13
3 Operation Modes.....	16
4 Powering Options	16
4.1 Powering the device from higher voltage.....	17
5 Status	18
5.1 Overview	18
5.2 System Information	19
5.3 Network Information	20
5.4 Device information	31
5.5 Services	32
5.6 Routes	32
5.6.1 ARP.....	32
5.6.2 Active IP-Routes.....	33
5.6.3 Active IPv6-Routes	33
5.7 Realtime Graphs	34

5.7.1	Mobile Signal Strenght.....	34
5.7.2	Realtime Load	35
5.7.3	Traffic	36
5.7.4	Realtime Wireless	37
5.7.5	Realtime Connections	38
5.8	Mobile Traffic.....	39
5.9	Speed Test.....	39
5.10	Events Log	40
5.10.1	All Events	40
5.10.2	System Events.....	41
5.10.3	Network Events	42
5.10.4	Events Reporting	43
5.10.5	Reporting Configuration	45
6	Network	47
6.1	Mobile.....	47
6.1.1	General.....	47
6.1.2	SIM Management	49
6.1.3	Network Operators	50
6.1.4	Mobile Data Limit.....	51
6.2	WAN.....	52
6.2.1	Operation Mode	52
6.2.2	Common configuration	52
6.3	LAN.....	58
6.3.1	Configuration	58
6.3.2	DHCP Server	58
6.4	Wireless	60
6.5	Backup WAN	63
6.6	Firewall.....	65
6.6.1	General Settings.....	65
6.6.2	DMZ.....	66
6.6.3	Port Forwarding	66
6.6.4	Traffic Rules.....	68
6.6.5	Custom Rules	73
6.6.6	DDOS Prevention	74
6.7	Static Routes	77

7	Services	78
7.1	VRRP.....	78
7.1.1	VRRP LAN Configuration Settings	78
7.1.2	Advanced settings.....	78
7.2	Web filter.....	79
7.2.1	Site blocking.....	79
7.2.2	Proxy based URL content blocker	79
7.3	NTP.....	80
7.4	VPN	81
7.4.1	OpenVPN.....	81
7.4.2	IPSec.....	83
7.4.3	GRE Tunnel.....	86
7.4.4	PPTP	88
7.4.5	L2TP.....	89
7.5	Dynamic DNS.....	90
7.6	SNMP	91
7.6.1	SNMP Settings.....	91
7.6.2	TRAP Settings	93
7.7	SMS Utilities.....	94
7.7.1	SMS Utilities	94
7.7.2	Call Utilities	97
7.7.3	User Groups	97
7.7.4	SMS Management.....	97
7.7.5	Remote Configuration.....	97
7.8	SMS Gateway	101
7.8.1	Post/Get Configuration	101
7.8.2	Email to SMS	102
7.8.3	Scheduled Messegas.....	103
7.8.4	Auto Reply Configuration.....	105
7.9	Hotspot	106
7.9.1	General settings	106
7.9.2	Internet Access Restriction Settings	107
7.9.3	Logging.....	108
7.9.4	Landing Page	109
7.9.5	Radius server configuration	110

7.10	Auto Reboot.....	111
7.10.1	Ping Reboot	111
7.10.2	Periodic Reboot	112
7.11	QoS.....	113
8	System.....	114
8.1	Configuration Wizard	114
8.2	Configuration profiles	116
8.3	Administration	117
8.3.1	General.....	117
8.3.2	Troubleshoot.....	118
8.3.3	Backup.....	119
8.3.4	Diagnostics	121
8.3.5	MAC Clone	121
8.3.6	Overview	122
8.4	User scripts	122
8.5	Safe mode	123
8.6	Firmware	124
8.6.1	Firmware	124
8.6.2	FOTA.....	125
8.7	Restore point	125
8.7.1	Restore point create	125
8.7.2	Restore point load.....	126
8.8	Reboot.....	126
9	Functionality not listed in menu	126
9.1	SMS by HTTP POST/GET	126
9.1.1	Syntax of HTTP POST/GET string.....	126
9.1.2	Parameters of HTTP POST/GET string.....	126
9.1.3	Possible responses after command execution	127
9.1.4	HTTP POST/GET string examples	127
10	Device Recovery.....	127
10.1	Reset button	127
10.2	Safemode	128
10.3	Bootloader's WebUI.....	128
11	Glossary:.....	129

SAFETY INFORMATION

In this document you will be introduced on how to use a RUT950 router safely. We suggest you to adhere to the following recommendations in order to avoid personal injuries and or property damage.

You have to be familiar with the safety requirements before using the device!

To avoid burning and voltage caused traumas, of the personnel working with the device, please follow these safety requirements.



The device is intended for supply from a Limited Power Source (LPS) that power consumption should not exceed 15VA and current rating of overcurrent protective device should not exceed 2A.



The highest transient overvoltage in the output (secondary circuit) of used PSU shall not exceed 36V peak.



The device can be used with the Personal Computer (first safety class) or Notebook (second safety class). Associated equipment: PSU (power supply unit) (LPS) and personal computer (PC) shall comply with the requirements of standard EN 60950-1.



Do not mount or service the device during a thunderstorm.



To avoid mechanical damages to the device it is recommended to transport it packed in a damage-proof pack.




Protection in primary circuits of associated PC and PSU (LPS) against short circuits and earth faults of associated PC shall be provided as part of the building installation.

To avoid mechanical damages to the device it is recommended to transport it packed in a damage-proof pack. While using the device, it should be placed so, that its indicating LEDs would be visible as they inform in which working mode the device is and if it has any working problems.

Protection against overcurrent, short circuiting and earth faults should be provided as a part of the building installation.

Signal level of the device depends on the environment in which it is working. In case the device starts working insufficiently, please refer to qualified personnel in order to repair this product. We recommend forwarding it to a repair center or the manufacturer. There are no exchangeable parts inside the device.

Device connection

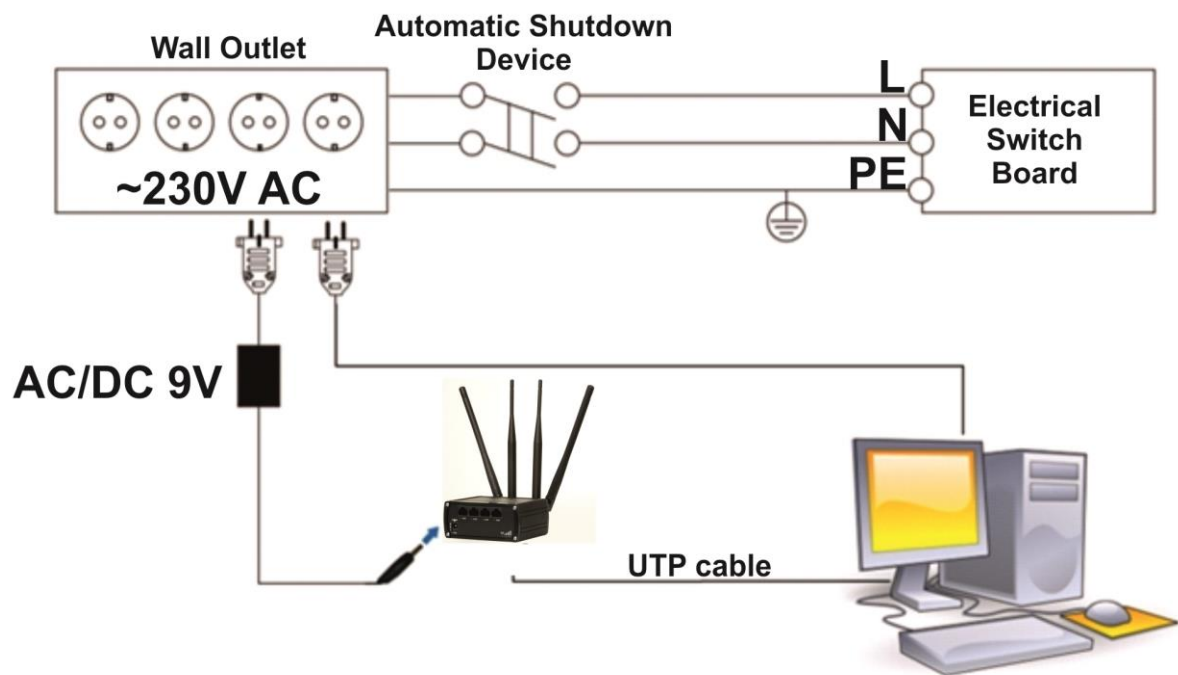

1 Introduction

Thank you for purchasing a RUT950 LTE router!

RUT950 is part of the RUT9xx series of compact mobile routers with high speed wireless and Ethernet connections.

This router is ideal for people who'd like to share their internet on the go, as it is not restricted by a cumbersome cable connection. Unrestricted, but not forgotten: the router still supports internet distribution via a broadband cable, simply plug it in to the wan port, set the router to a correct mode and you are ready to browse.

1.1 Specifications

1.1.1 LTE

- FDD 800(B20)/850(B5)/900(B8)/1800(B3)/1900(B2)/2100(B1)/2600(B7) MHz
- Up to 100 Mbps downlink speed
- Up to 50 Mbps uplink speed
- All bands with diversity

1.1.2 UMTS

- 850/900/1900/2100 MHz
- DC-HSPA+ mode: DL up to 43.2 Mbps, UL 5.76 Mbps
- HSPA+ mode: DL up to 21.6 Mbps, UL 5.76 Mbps
- UMTS mode: 384 kbps DL/384 kbps UL
- All bands with diversity

1.1.3 GSM/GPRS/EDGE

- 850/900/1800/1900 MHz
- Power Class 4 (2 W, 33 dBm) GSM/GPRS 850/900 MHz
- Power Class 1 (1 W, 30 dBm) GSM/GPRS 1800/1900 MHz
- Power Class E2 (0.5 W, 27 dBm) for EDGE 850/900 MHz
- GPRS: 85.6 kbps DL/85.6 kbps UL (class 12)
- EDGE: 236.8 kbps DL/236.8 kbps UL (class 12)

1.1.4 Ethernet

- IEEE 802.3, IEEE 802.3u standards
- 3 x LAN 10/100Mbps Ethernet ports
- 1 x WAN 10/100Mbps Ethernet port
- Supports Auto MDI/MDIX

1.1.5 Wi-Fi

- IEEE 802.11b/g/n WiFi standards
- 2x2 MIMO
- AP and STA modes
- 64/128-bit WEP, WPA, WPA2, WPA&WPA2 encryption methods
- 2.401 – 2.495GHz Wi-Fi frequency range
- 20dBm max WiFi TX power
- SSID stealth mode and access control based on MAC address

1.1.6 Hardware

- High performance 560 MHz CPU with 128 Mbytes of DDR2 memory
- 5.5/2.5mm DC power socket
- Reset/restore to default button
- 2 x SMA for LTE , 2 x RP-SMA for WiFi antenna connectors
- 4 x Ethernet LEDs, 1 x Power LED
- 1 x bi-color connection status LED, 5 x connection strength LEDs


1.1.7 Software

- OpenVPN, IPSec, GRE, L2TP, PPTP
- Backup WAN
- PPPoE
- Dynamic DNS
- SMS and Ping reboot, periodic reboot
- Status, configuration via SMS
- Send/read SMS via HTTP POST/GET
- Monitoring by SNMP, SNMP trap
- System log to record the status of the router
- VRRP
- Web filter
- Wireless hotspot with or without RADIUS server
- SIM card switch controlled by signal, data limit, roaming
- Configuration profiles
- Dual image with safemode firmware
- Firmware update from bootloader via WebUI
- Restore point

1.1.8 Electrical, Mechanical & Environmental

- | | |
|--------------------------|-------------------------------------|
| • Dimensions (H x W x D) | 80mm x 106mm x 46mm |
| • Weight | 250g |
| • Power supply | 100 – 240 VAC -> 9 VDC wall adapter |
| • Input voltage range | 9 – 30 VDC |
| • Power consumption | < 7 W |
| • Operating temperature | -40° to 75° C |
| • Storage temperature | -45° to 80° C |
| • Operating humidity | 10% to 90% Non-condensing |
| • Storage humidity | 5% to 95% Non-condensing |

1.1.9 Applications

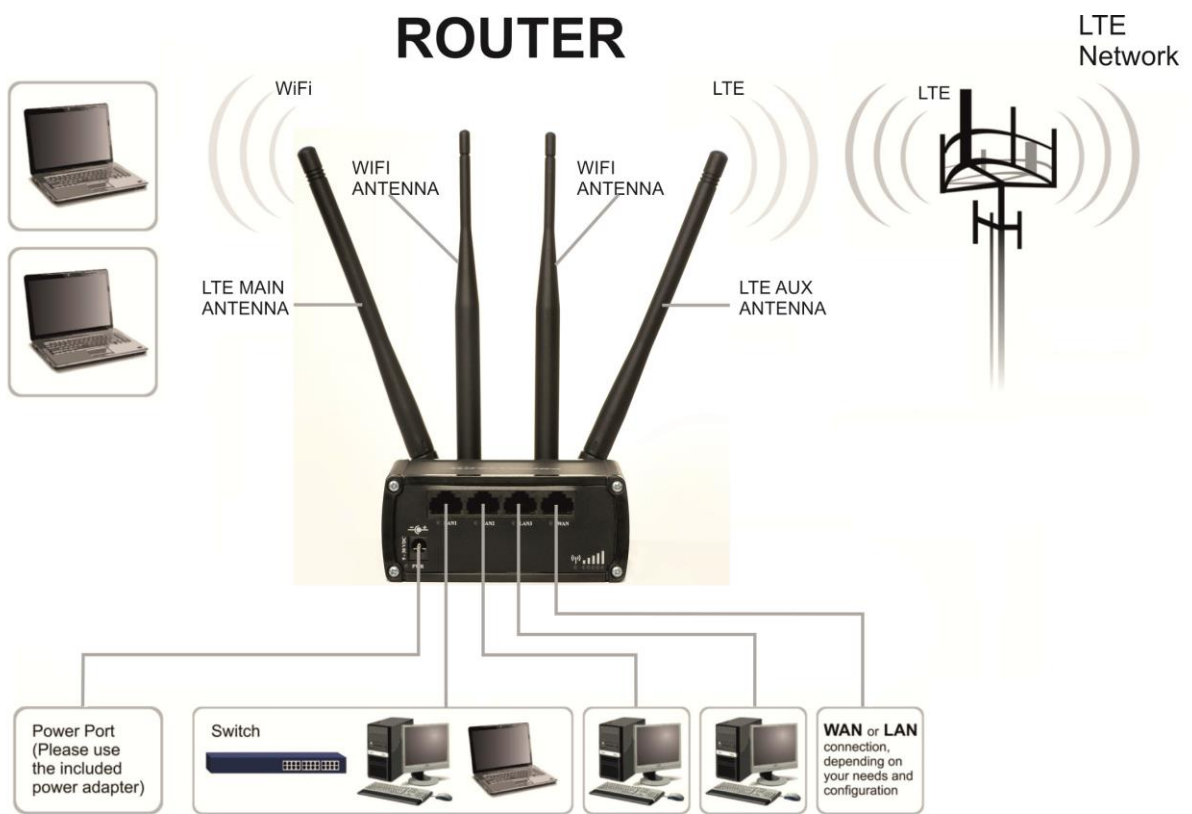


2 Setting up your router

2.1 Installation

After you unpack the box, follow the steps, documented below, in order to properly connect the device. For better Wi-Fi performance, put the device in clearly visible spot, as obstacles such as walls and door hinder the signal.

1. First assemble your router by attaching the necessary antennas and inserting the SIM card.
2. To power up your router, please use the power adapter included in the box. (IMPORTANT: Using a different power adapter can damage and void the warranty for this product.)
3. If you have a wired broadband connection you will also have to connect it to the WAN port of the router.

2.1.1 Front Panel and Back Panel

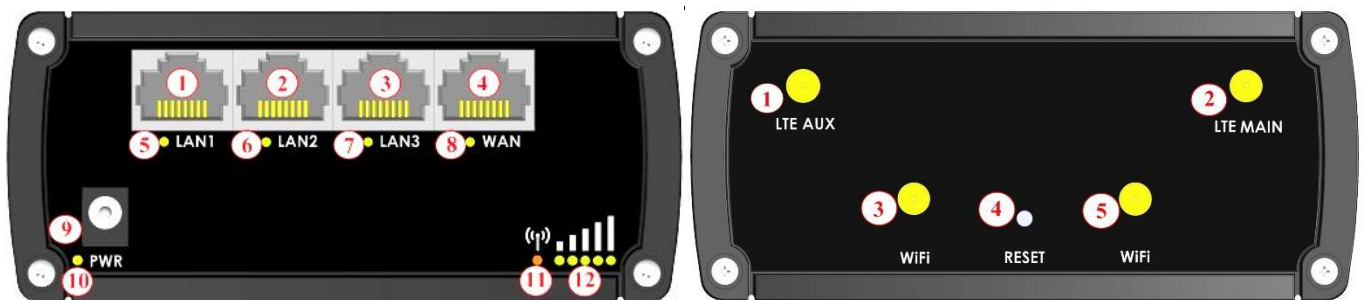


1,2,3	LAN Ethernet ports
4	WAN Ethernet port
5,6,7	LAN LEDs
8	WAN LED
9	Power socket
10	Power LED
11	Connection status LED
12	Signal strength indication LEDs

1	LTE auxiliary antenna connector
2	LTE main antenna connector
3,5	Wi-Fi antenna connectors
4	Reset button

2.1.2 Hardware installation

1. Remove back panel and insert SIM card which was given by your ISP (Internet Service Provider). Correct SIM card orientation is shown in the picture.

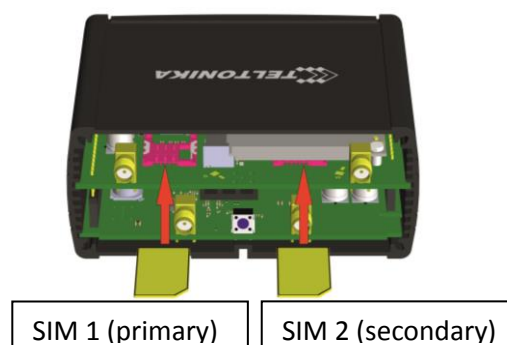


2. Attach LTE main and Wi-Fi antennas.
3. Connect the power adapter to the socket on the front panel of the device. Then plug the other end of the power adapter into a wall outlet or power strip.
4. Connect to the device wirelessly (SSID: **Teltonika_Router**) or use Ethernet cable and plug it into any LAN Ethernet port.

2.2 Logging in


After you're complete with the setting up as described in the section above, you are ready to start logging into your router and start configuring it. This example shows how to connect on Windows 7. On windows Vista: click Start -> Control Panel -> Network and Sharing Centre -> Manage network Connections -> (Go to step 4). On Windows XP: Click Start -> Settings -> Network Connections -> (see step 4). You won't see "Internet protocol version 4(TCP/IPv4)", instead you'll have to select "TCP/IP Settings" and click options -> (Go to step 6)

We first must set up our network card so that it could properly communicate with the router.


1. Press the start button

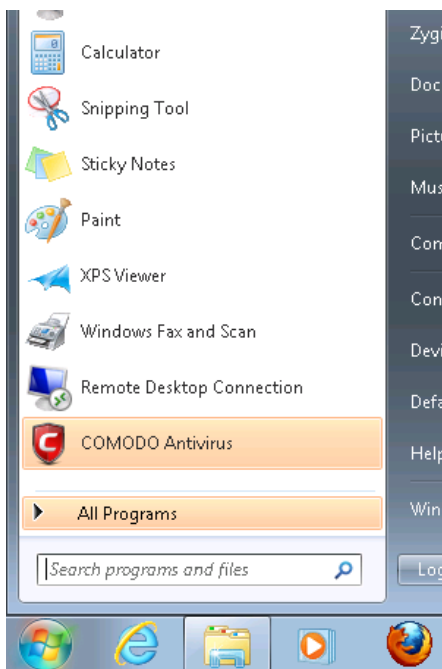


2. Type in "network connections", wait for the results to pop up.

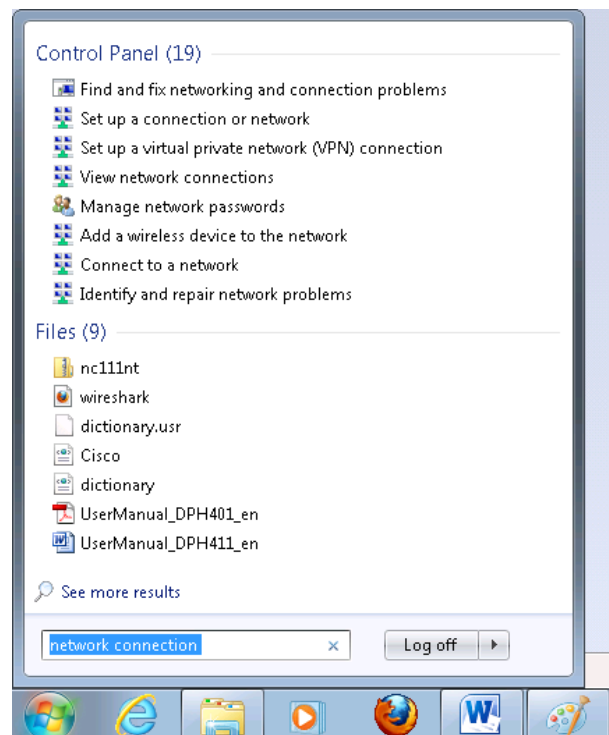


3. Click "View network connections"

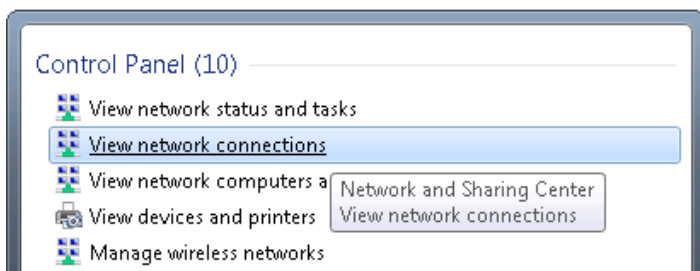


4. Then right click on your wireless device that you use to connect to other access points (It is the one with the name "Wireless Network Connection" and has signal bars on its icon).

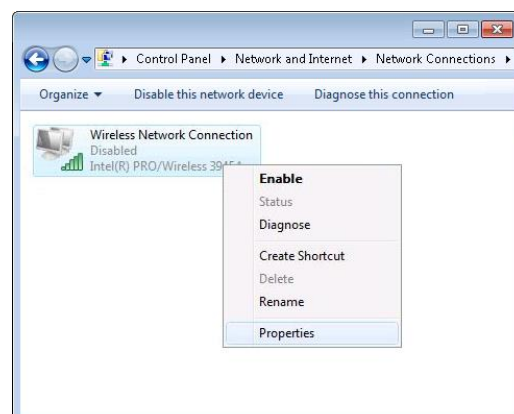

5. Select Internet Protocol Version 4 (TCP/IPv4) and then click Properties

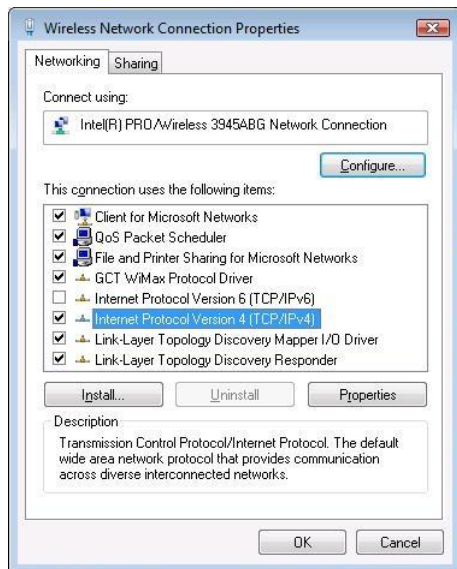


6. By default the router is going to have DHCP enabled, which means that if you select "Obtain an IP address automatically" and "Obtain DNS server address automatically", the router should lease you an IP and you should be ready to login.

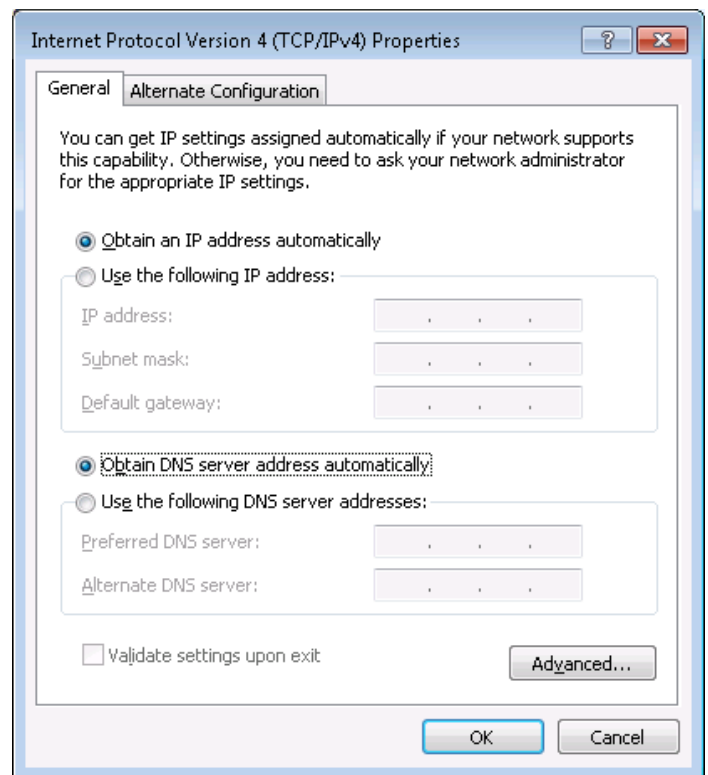

7. If you choose to configure manually here's what you do:

First select an IP address. Due to the stock settings that your router has arrived in you can only enter an IP in the form of 192.168.1.XXX , where XXX is a number in the range of 2-254 (192.168.1.2 , 192.168.1.254 , 192.168.1.155 and so on... are valid; 192.168.1.0 , 192.168.1.1 , 192.168.1.255 , 192.168.1.699 and so on... are not). Next we enter the subnet mask: this has to be "255.255.255.0". Then we enter the default gateway: this has to be "192.168.1.1". Finally we enter primary and secondary DNS server IPs. One will suffice, though it is good to have a secondary one as well as it will act as a backup if the first should fail. The DNS can be your routers IP (192.168.1.1), but it can also be some external DNS server (like the one Google provides: 8.8.8.8).

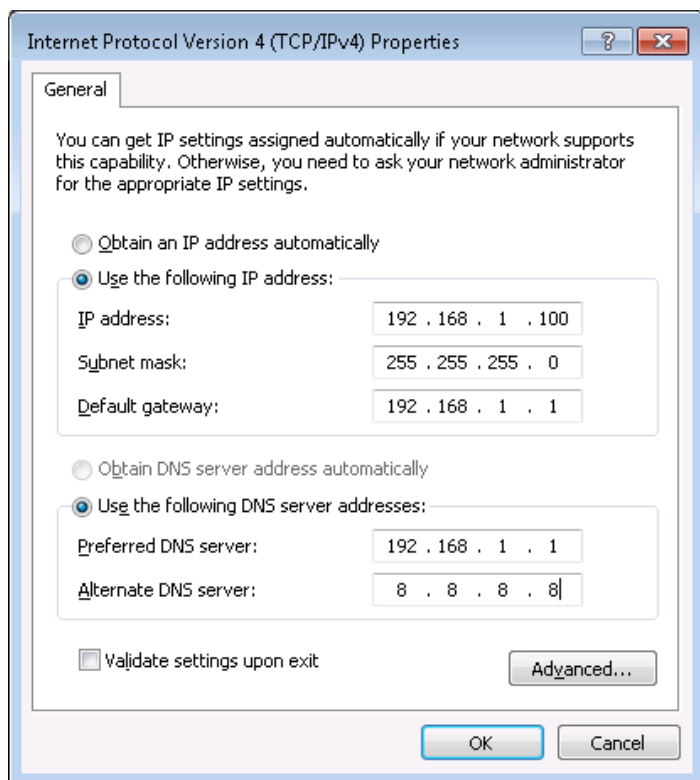

Right click on the Wireless network icon and select **Connect / Disconnect**. A list should pop up with all available wireless networks. Select “Teltonika” and click **connect**. Then we launch our favorite browser and enter the routers IP into the address field:



Press enter. If there are no problems you should be greeted with a login screen such as this:

Authorization Required

Please enter your username and password.

Username

Password

Enter the default password, which is “admin01” into the “Password” field and then either click Login with your mouse or press the Enter key. You have now successfully logged into the RUT950!

From here on out you can configure almost any aspect of your router.

3 Operation Modes


The RUT9xx series router supports various operation modes. It can be connected to the internet (WAN) via mobile, standard Ethernet cable or via a wireless network. If you connect to the internet via an Ethernet cable or Wi-Fi, you may also backup your connection with mobile for added stability. On every case except when you connect to the internet via Wi-Fi, you can distribute your internet via an Ethernet cable (3 ports) and/or a wireless network. When you connect via Wi-Fi, you cannot have Wi-Fi in your LAN.

WAN	LAN		Mobile Backup link
	Ethernet	Wi-Fi	
Mobile	✓	✓	x
Ethernet	✓	✓	✓
Wi-Fi	✓	✓	✓

In later sections it will be explained, bit by bit, how to configure your router to work in a desired mode.

4 Powering Options

The RUT9xx router can be powered from power socket or over Ethernet port. Depending on your network architecture you can use LAN 1 port to power the device.

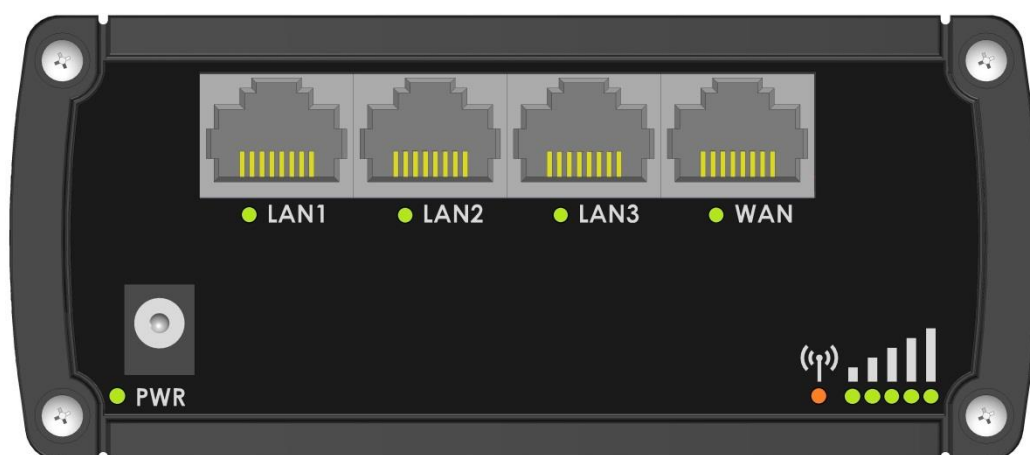

RUT9xx can be powered from power socket and over Ethernet simultaneously. Power socket has higher priority meaning that the device will draw power from power socket as long as it is available.

When RUT9xx is switching from one power source to the other it loses power for a fraction of the second and may reboot. The device will function correctly after the reboot.

Pin	Signal ID	T568A Color	T568B Color	Pins on plug face (socket is reversed)
1	TX+	 white/green stripe	 white/orange stripe	
2	TX-	 green solid	 orange solid	
3	RX+	 white/orange stripe	 white/green stripe	
4		 blue solid	 blue solid	
5	7 - 30VDC	 white/blue stripe	 white/blue stripe	
6	RX-	 orange solid	 green solid	
7	GROUND	 white/brown stripe	 white/brown stripe	
8	GROUND	 brown solid	 brown solid	

Though the device can be powered over Ethernet port it is not compliant with IEEE 802.3af-2003 standard. Powering RUT9xx from IEEE 802.3af-2003 power supply **will damage the device** as it is not rated for input voltages of PoE standard.

4.1 Powering the device from higher voltage

If you decide not to use our standard 9 VDC wall adapters and want to power the device from higher voltage (15 – 30 VDC) please make sure that you choose power supply of high quality. Some power supplies can produce voltage peaks significantly higher than the declared output voltage, especially during connecting and disconnecting them.

While the device is designed to accept input voltage of up to 30 VDC peaks from high voltage power supplies can harm the device. If you want to use high voltage power supplies it is recommended to also use additional safety equipment to suppress voltage peaks from power supply. One of the options is to use “Teltonika” PR1000 overvoltage protection device conforming ISO 7637-2.

5 Status

The status section contains various information, like current IP addresses of various network interfaces; the state of the routers memory; firmware version; DHCP leases; associated wireless stations; graphs indicating load, traffic, etc.; and much more

5.1 Overview

Overview section contains various summary information.



Status ▾Network ▾Services ▾System ▾Logout

Overview

System

7.0% CPU load

Router uptime	0d 2h 21m 28s (since 2015-05-11, 11:35:24)
Local device time	2015-05-11, 13:56:52
Free memory	87 MB (70%) RAM0.9 MB (75%) FLASH
Firmware version	RUT9XX_R_00.01.290

Mobile

-79 dBm

Data connection	Disconnected
State	Registered (home); LT BITE GSM; 3G (WCDMA)
SIM card slot in use	SIM 1 (Ready)
Bytes received/sent *	2.7 KB / 3.1 KB

WirelessON

SSID	Teltonika_Router (AP)
Mode	1- AP; 11 CH (2.462 GHz)

WANWired

IP address	192.168.99.110
Backup WAN status	Backup link is disabled

Local Network

IP / netmask	192.168.1.1/255.255.255.0
Clients connected	0

Access Control

LAN	SSH;HTTP;HTTPS;
WAN	HTTP;

Recent System Events

1	2015-05-11, 13:52:14 - Port: Wired WAN connection operational
2	2015-05-11, 13:51:09 - Config: Network configuration has been ...
3	2015-05-11, 11:56:27 - Config: Access Control configuration ha ...
4	2015-05-11, 11:56:27 - Config: Firewall configuration has been ...

Recent Network Events

1	2015-05-11, 13:51:07 - Mobile data disconnected
2	2015-05-11, 11:36:17 - Mobile data connected, IP: 10.1.12.123 ...
3	2015-03-18, 16:32:14 - Joined 3G (WCDMA)
4	2015-03-18, 16:04:26 - Joined 3G (WCDMA)

* Your carrier's data usage accounting may differ. Teltonika is not liable should any accounting discrepancies occur.

5.2 System Information

The System Information tab contains data that pertains to the routers operating system.

System Information	
System	
Router name	Teltonika
Host name	Teltonika
Router model	Teltonika RUT9XX
Firmware version	RUT9XX_T_00.00.372
Kernel version	3.10.36
Local device time	2014-11-03, 14:29:09
Uptime	0h 35m 56s (since 2014-11-03, 13:53:13)
Load average	1 min: 10%; 5 mins: 18%; 15 mins: 17%
Temperature	-
Memory	
Free	94556 kB / 126452 kB (74%)
Cached	10828 kB / 126452 kB (8%)
Buffered	4308 kB / 126452 kB (3%)

System explanation:

	Field Name	Sample value	Explanation
1.	Router Name	Teltonika	Name of the router (hostname of the routers system). Can be changed in System -> Administration.
2.	Host name	Teltonika	Indicates how router will be seen by other devices on the network. Can be changed in System -> Administration.
3.	Router Model	Teltonika RUT9xx	Routers model.
4.	Firmware Version	RUT9XX_T_00.00.372	Shows the version of the firmware that is currently loaded in the router. Newer versions might become available as new features are added. Use this field to decide whether you need a firmware upgrade or not.
5.	Kernel Version	3.10.36	The version of the Linux kernel that is currently running on the router.
6.	Local Time	2014-11-03, 14:33:14	Shows the current system time. Might differ from your computer, because the router synchronizes it's time with an NTP server. Format [year-month-day, hours:minutes:seconds].
7.	Uptime	0h 40m 46s (since 2014-11-03, 13:53:13)	Indicates how long it has been since the router booted up. Reboots will reset this timer to 0.Format [day's hours minutes seconds (since year-month-day, hours: minutes: seconds)].
8.	Load Average	1 min: 11%; 5 mins: 18%; 15 mins: 17%	Indicates how busy the router is. Let's examine some sample output: "1 min: 11%, 5 mins: 18%, 15 mins: 17%". The first number mean past minute and second number 11% means that in the past minute there have been, on average, 11% processes running or waiting for a resource.
9.	Temperature		Device's temperature

Memory explanation:

	Field Name	Sample Value	Explanation
1.	Free	94532 kB / 126452 kB (74%)	The amount of memory that is completely free. Should this rapidly decrease or get close to 0, it would indicate that the router is running out of memory, which could cause crashes and unexpected reboots.
2.	Cached	10828 kB / 126452 kB (8%)	The size of the area of memory that is dedicated to storing frequently accessed data.
3.	Buffered	4308 kB / 126452 kB (3%)	The size of the area in which data is temporarily stored before moving it to another location.

5.3 Network Information

5.3.1.1 Mobile

Displays information about mobile modem connection.

 Status ▾ Network ▾ Services ▾ System ▾ Logout ↗

Mobile

WAN

LAN

Wireless

OpenVPN

VRRP

Topology

Access

Mobile Information

Mobile 

SIM card slot in use: **SIM 1**

Data connection state	Connected
IMEI	860461024164561
IMSI	246021004265840
Sim card state	Ready
Signal strength	-74 dBm
Operator	LT BITE GSM
Operator state	Registered (home)
Connection type	3G (WCDMA)
Bytes received *	7.2 KB (7357 bytes)
Bytes sent *	8.0 KB (8146 bytes)

Refresh ↺

*Your carrier's data usage accounting may differ. Teltonika is not liable should any accounting discrepancies occur.

Mobile information:

	Field Name	Sample Value	Explanation
1.	Data connection state	Connected	Mobile data connection status
2.	IMEI	860461024164561	Modem's IMEI (International Mobile Equipment Identity) number
3.	IMSI	246021004265840	IMSI (International Mobile Subscriber Identity) is used to identify the user in a cellular network
4.	SIM card state	Ready	Indicates the SIM card's state, e.g. PIN required, Not inserted, etc.

5.	Signal strength	-74 dBm	Received Signal Strength Indicator (RSSI). Signal's strength measured in dBm
6.	Operator state	LT BITE GSM	Operator's name of the connected GSM network
7.	Operator	Registered (home)	GSM network's status
8.	Connection type	3G (WCDMA)	Indicates the GSM network's access technology
9.	Bytes received	7357	How many bytes were received via mobile data connection
10.	Bytes sent	8146	How many bytes were sent via mobile data connection

5.3.1.2 WAN

Displays information about WAN connection.

Mobile	WAN	LAN	Wireless	OpenVPN	VRRP	Topology	Access
WAN Information							
WAN							
Interface				Wired			
Type				Static			
IP address				192.168.99.108			
WAN MAC				00:1E:42:00:11:02			
Netmask				255.255.255.0			
Gateway				192.168.99.254			
DNS 1				8.8.8.8			
Connected				0h 0m 19s			

WAN information:

	Field Name	Sample Value	Explanation
1.	Interface	Wired	Specifies through what medium the router is connecting to the internet. This can either be Wired, Mobile or Wi-Fi.
2.	Type	Static	Specifies the type of connection. This can either be static or DHCP.
3.	IP address	192.168.99.108	The IP address that the routers uses to connect the internet.
4.	WAN MAC	00:1E:42:00:11:02	MAC (Media Access Control) address used for communication in a Ethernet WAN (Wide Area Network)
5.	Netmask*	255.255.255.0	Specifies a mask used to define how large the WAN network is
6.	Gateway*	192.168.99.254	Indicates the default gateway, an address where traffic destined for the internet is routed to.
7.	DNS#*	8.8.8.8	Domain name server(s).
8.	Connected*	0h 0m 29s	How long the connection has been successfully maintained.

*-These fields show up on other connection modes.

**-Exclusive to other Modes with DHCP.

5.3.1.3 LAN

Displays information about LAN connection.

Mobile	WAN	LAN	Wireless	OpenVPN	VRRP	Topology	Access	
LAN Information								
LAN								
IP address				192.168.1.1				
Ethernet LAN MAC address				00:1E:42:00:11:01				
Netmask				255.255.255.0				
Connected for				3h 18m 40s				
DHCP Leases								
Hostname				IP address		MAC address		Lease time remaining
android-9aed2b2077a54c74				192.168.1.232		FC:C2:DE:91:36:A6		11h 59m 49s

LAN information:

	Field Name	Sample Value	Explanation
1.	IP address	192.168.1.1	Address that the router uses on the LAN network.
2.	Ethernet LAN MAC address	00:1E:42:00:11:01	MAC (Media Access Control) address used for communication in a Ethernet LAN (Local Area Network)
2.	Netmask	255.255.255.0	A mask used to define how large the LAN network is
3.	Connected	3h 18m 40s	How long LAN has been successfully maintained.

DHCP Leases

If you have enabled a DHCP server this field will show how many devices have received an IP address and what those IP addresses are.

	Field Name	Sample Value	Explanation
1.	Hostname	Android-9aed2b2077a54c74	DHCP client's hostname
2.	IP address	192.168.1.232	Each lease declaration includes a single IP address that has been leased to the client
3.	MAC address	FC:C2:DE:91:36:A6	The MAC (Media Access Control) address of the network interface on which the lease will be used. MAC is specified as a series of hexadecimal octets separated by colons
4.	Lease time remaining	11h 59m 49s	Remaining lease time for addresses handed out to clients

5.3.1.4 Wireless

Wireless can work in two modes, Access Point (AP) or Station (STA). AP is when the wireless radio is used to create an Access Point that other devices can connect to. STA is when the radio is used to connect to an Access Point via WAN.

5.3.1.4.1 Station

Displays information about wireless connection (Station mode).

Mobile	WAN	LAN	Wireless	OpenVPN	VRRP	Topology	Access
Wireless Information							
Wireless Information							
Channel		1 (2.41 GHz)					
Country code		00 (World)					
Wireless Status							
SSID	Mode	Encryption	Wireless MAC	Signal quality	Bit rate		
Teltonika_Router	Station (STA)	no encryption	00:1E:42:10:80:22	61%	43.3 MBit/s		
Teltonika_Router_Test	Access Point (AP)	no encryption	02:1E:42:00:11:03	79%	1.0 MBit/s		
Associated Stations							
MAC Address	Device Name	Signal	RX Rate	TX Rate			
00:1E:42:10:80:22	?	-67 dBm	1.0 Mbit/s, MCS 0, 20MHz	43.3 Mbit/s, MCS 10, 20MHz			
Refresh 							

Client mode information

	Field Name	Sample Value	Explanation
1.	Channel	1 (2.41 GHz)	The channel that the AP, to which the routers is connected to, uses. Your wireless radio is forced to work in this channel in order to maintain the connection.
2.	Country	00	Country code.
3.	SSID	Teltonika_Router	The SSID that the AP, to which the routers is connected to, uses.
4.	Mode	Station (STA)	Connection mode – Client indicates that the router is a client to some local AP.
5.	Encryption	WPA2 PSK (CCMP)	The AP, to which the router is connected to, dictates the type of encryption.
6.	Wireless MAC	00:1E:42:10:80:22	The MAC address of the access points radio.
7.	Signal Quality	61%	The quality between routers radio and some other device that is connecting to the router. Will show 0% if no devices are trying to connect or are currently maintaining a connection.
8.	Bit rate	43.3 MBit/s	The physical maximum possible throughput that the routers radio can handle. Keep in mind that this value is cumulative - The bitrate will be shared between the router and other possible devices that connect to the local AP.

5.3.1.4.2 Access Point

Displays information about wireless connection (Access Point mode).

Mobile	WAN	LAN	Wireless	OpenVPN	VRRP	Topology	Access	
Wireless Information								
Wireless Information								
Channel				11 (2.46 GHz)				
Country code				00 (World)				
Wireless Status								
SSID		Mode		Encryption	Wireless MAC		Signal quality	Bit rate
Teltonika_Router_Test		Access Point (AP)		no encryption	00:1E:42:00:11:03		80%	54.0 MBit/s
Associated Stations								
MAC Address		Device Name		Signal	RX Rate		TX Rate	
FC:C2:DE:91:36:A6		android-9aed2b2077a54c74		-54 dBm	24.0 Mbit/s, MCS 0, 20MHz		54.0 Mbit/s, MCS 0, 20MHz	
Refresh 								

Wireless AP information

	Field Name	Sample Value	Explanation
1.	Channel	11 (2.46 GHz)	The channel which is used to broadcast the SSID and to establish new connections to devices.
2.	Country code	00(World)	Country code.
3.	SSID	Teltonika_Router_Test	The SSID that is being broadcast. Other devices will see this and will be able to use to connect to your wireless network.
4.	Mode	Access Point (AP)	Connection mode – Master indicates that you router is an access point.
5.	Encryption	No Encryption	The type of encryption that the router will use to authenticate, establish and maintain a connection.
6.	Wireless MAC	00:1E:42:00:00:03	MAC address of your wireless radio.
7.	Signal Quality	80%	The quality between routers radio and some other device that is connecting to the router. Will show 0% if no devices are trying to connect or are currently maintaining a connection.
8.	Bit rate	54.0 MBit/s	The bitrate will be shared between all devices that connect to the routers wireless network.

Additional note: MBit/s indicates the bits not bytes. To get the throughput in bytes divide the bit value by 8, for e.g. 54Mbits/s would be 6.75MB/s (Mega Bytes per second).

5.3.1.5 Associated Stations

Outputs a list of all devices and their MAC addresses that are maintain a connection with your router right now.

This can either be the information of the Access Point that the router is connecting to in STA mode or a list of all devices that are connecting to the router in AP mode:

	Field Name	Sample Value	Explanation
1.	MAC Address	FC:C2:DE:91:36:A6	Associated station's MAC (Media Access Control) address
2.	Device Name	Android-9aed2b2077a54c74	DHCP client's hostname
3.	Signal	-54dBm	Received Signal Strength Indicator (RSSI). Signal's strength measured in dBm
4.	RX Rate	24.0Mbit/s, MCS 0, 20MHz	The rate at which packets are received from associated station
5.	TX Rate	54.0Mbit/s, MCS 0, 20MHz	The rate at which packets are sent to associated station

5.3.1.6 OpenVPN Client (must be updated)

Displays openVPN connection client side information.

Mobile	WAN	LAN	Wireless	OpenVPN	VRRP	Topology	Access
--------	-----	-----	----------	---------	------	----------	--------

OpenVPN Information

Client_Client

OpenVPN	
Status	Enabled
Type	Client
IP	172.16.1.6
Mask	255.255.255.255
Server IP	172.16.1.0
Time	0h 48m 43s

	Field Name	Sample Value	Explanation
1.	Status	Enabled	OpenVPN status
2.	Type	Client	A type of OpenVPN instance that has been created
3.	IP	172.16.1.6	Remote virtual network's IP address
4.	Mask	255.255.255.255	Remote virtual network's subnet mask
5.	Server IP	172.16.1.0	Remote virtual server's IP address
6.	Time	0h 48m 43s	For how long the connection has been established

5.3.1.7 OpenVPN Server

Displays openVPN connection server side information.

Mobile	WAN	LAN	Wireless	OpenVPN	VRRP	Topology	Access
OpenVPN Information							
Server_Server							
OpenVPN							
Status		Enabled					
Type		Server					
IP		172.16.1.1					
Mask		255.255.255.255					
Time		20h 13m 9s					
Clients Information							
Common Name		Real Address			Virtual Address		Connection Since
Client1		192.168.99.91:50850			172.16.1.6		2015-05-15 08:07:15

	Field Name	Sample Value	Explanation
1.	Status	Enabled	OpenVPN status
2.	Type	Server	A type of OpenVPN instance that has been created
3.	IP	172.16.1.1	Remote virtual network's IP address
4.	Mask	255.255.255.255	Remote virtual network's subnet mask
5.	Time	20h 13m 9s	For how long the connection has been established

5.3.1.8 Client information

	Field Name	Sample Value	Explanation
1.	Common Name	Client1	Client connection
2.	Real Address	192.168.99.91:50850	Client's IP address and port number
3.	Virtual Address	172.16.1.6	Virtual address which has been given to a client
4.	Connection Since	2015-05-15 08:07:15	Since when connection has been established

5.3.1.9 VRRP

VRRP (Virtual Router Redundancy Protocol) for LAN

Mobile	WAN	LAN	Wireless	OpenVPN	VRRP	Topology	Access
--------	-----	-----	----------	---------	------	----------	--------

VRRP Information

VRRP LAN Status	
Status	Enabled
Virtual ip	192.168.1.253
Priority	100
Router	Master


Refresh 

	Field Name	Sample Value	Explanation
1.	Status	Enabled	VRRP status
2.	Virtual IP	192.168.1.253	Virtual IP address(es) for LAN's VRRP (Virtual Router Redundancy Protocol) cluster
3.	Priority	100	Router with highest priority value on the same VRRP (Virtual Router Redundancy Protocol) cluster will act as a master, range [1 - 255]
4.	Router**	Master	Since when connection has been established

**-Exclusive to other Modes with Slave.

5.3.1.10 Topology

Network scanner allowing you to quickly retrieve information about network devices.

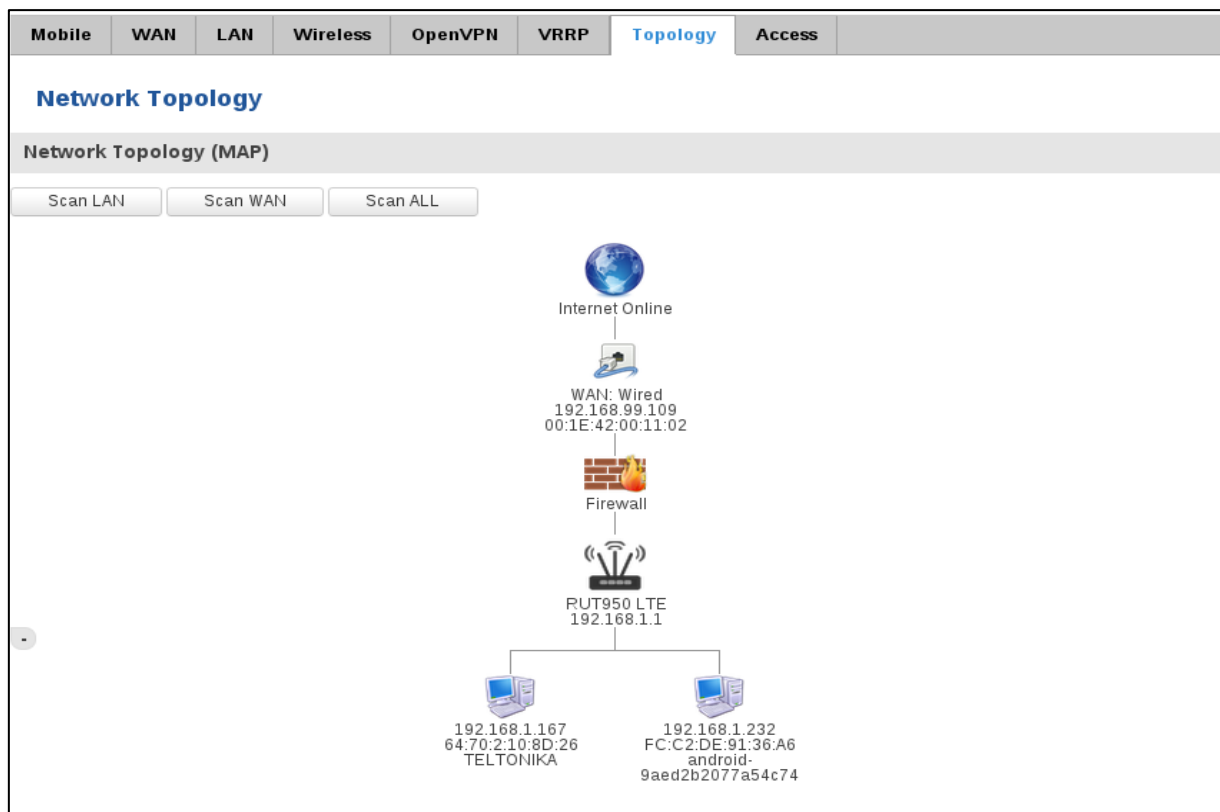

5.3.1.11 Access

Displays information about local and remote active connections status.

Mobile	WAN	LAN	Wireless	OpenVPN	VRRP	Topology	Access	
Access Status								
Access information		Last Connections						
Local Access								
Type		Status		Port		Active Connections		
SSH		Enabled		22		0 (0.00 B)		
HTTP		Enabled		80		1 (9.26 KB)		
HTTPS		Enabled		443		0 (0.00 B)		
Remote Access								
Type		Status		Port		Active Connections		
SSH		Disabled		22		0 (0.00 B)		
HTTP		Disabled		80		0 (0.00 B)		
HTTPS		Enabled		443		6 (558.12 KB)		
Refresh 								

	Field Name	Sample Value	Explanation
1.	Type	SSH;HTTP;HTTPS	Type of connection protocol
2.	Status	Disabled/Enabled	Connection status
3.	Port	22; 80; 443	Connection port used
4.	Active Connections	0(0.00B);1(9.26 KB); 6(558.12 KB)	Count of active connections and amount of data transmitted in KB

**-Exclusive to other Modes with Slave.

5.3.1.11.1 Last Connections

Displays information about local and remote last 3 connections status

Access Status

Access information

Last Connections

Last Local Connections

Type	Date	IP	Authentications Status
SSH	2015-05-11, 10:36:59	192.168.1.167	Succeeded
	2015-05-11, 10:37:54	192.168.1.167	Succeeded
	2015-05-11, 10:38:41	192.168.1.167	Succeeded
HTTP	2015-03-18, 15:56:44	192.168.1.167	Succeeded
	2015-03-18, 16:31:47	192.168.1.167	Succeeded
	2015-05-11, 11:36:23	192.168.1.167	Succeeded
HTTPS	2015-05-07, 09:07:22	192.168.1.167	Succeeded
	2015-05-08, 10:48:52	192.168.1.167	Succeeded
	2015-05-08, 13:39:11	192.168.1.167	Succeeded

Last Remote Connections

Type	Date	IP	Authentications Status
SSH	2015-05-07, 10:36:01	192.168.99.109	Failed
	2015-05-07, 10:36:13	192.168.99.109	Failed
	2015-05-07, 10:36:16	192.168.99.109	Succeeded
HTTP	2015-05-07, 09:07:17	192.168.99.109	Succeeded
	2015-05-08, 08:44:13	192.168.99.109	Succeeded
	2015-05-08, 09:45:21	192.168.99.109	Succeeded
HTTPS	There are no records yet.		

Refresh

	Field Name	Sample Value	Explanation
1.	Type	SSH;HTTP;HTTPS	Type of connection protocol
2.	Date	2015-05-11, 10:36:59	Date and time of connection
3.	IP	192.168.1.167	IP address from which the connection was made
4.	Authentications Status	Failed; Succeeded	Status of authentication attempt

5.4 Device information

The page displays factory information that was written into the device during manufacturing process.

Device Information	
Device	
Serial number	12345678
Product code	RUT950 012345
Batch number	002
Hardware revision	001
IMEI	860461024168398
IMSI	246021004072223
Ethernet LAN MAC address	00:1E:42:00:00:44
Ethernet WAN MAC address	00:1E:42:00:00:45
Wireless MAC address	00:1E:42:00:00:46

	Field Name	Sample Value	Explanation
1.	Serial number	12345678	Serial number of the device
2.	Product code	RUT950 012345	Product code of the device
3.	Batch number	002	Batch number used during device's manufacturing process
4.	Hardware revision	001	Hardware revision of the device
5.	IMEI	860461024168398	Identification number of the internal modem
6.	IMSI	246021004072223	Subscriber identification number of the internal modem
6.	Ethernet LAN MAC	00:1E:42:00:00:44	MAC address of the Ethernet LAN ports
7.	Ethernet WAN MAC	00:1E:42:00:00:45	MAC address of the Ethernet WAN port
8.	Wireless MAC	00:1E:42:00:00:46	MAC address of the Wi-Fi interface

5.5 Services

The page displays usage of the available services.

Services			
Services Status			
VRRP LAN	Disabled	DDNS	Disabled
OpenVPN servers	Disabled	Site blocking	Disabled
OpenVPN clients	Disabled	Privoxy	Enabled
SNMP agent	Disabled	SMS utils rules	Enabled
SNMP trap	Disabled	Hotspot	Disabled
NTP client	Enabled	Hotspot logging	Disabled
IPsec	Disabled	GRE tunnel	Disabled
Ping reboot	Disabled	QoS	Disabled
			Refresh 

5.6 Routes

The page displays ARP table active IP routes of the device.

5.6.1 ARP

Shows the routers active ARP table. An ARP table contains recently cached MAC addresses of every immediate device that was communicating with the router.

ARP		
IP Address	MAC Address	Interface
10.0.207.217	02:50:F3:00:00:00	eth2
192.168.99.17	00:25:22:D7:CA:A7	br-lan
192.168.99.36	38:2C:4A:64:2D:E5	br-lan
192.168.99.155	00:00:00:00:00:00	br-lan

	Field Name	Sample Value	Explanation
1.	IP Address	192.168.99.17	Recently cached IP addresses of every immediate device that was communicating with the router
2.	MAC Address	00:25:22:D7:CA:A7	Recently cached MAC addresses of every immediate device that was communicating with the router
3.	Interface	br-lan	Interface used for connection

5.6.2 Active IP-Routes

Shows the routers routing table. The routing table indicates where a TCP/IP packet, with a specific IP address, should be directed to.

Active IP Routes			
Network	Target	IP Gateway	Metric
ppp	0.0.0.0/0	10.0.207.217	0
ppp	10.0.207.216/29	0.0.0.0	0
ppp	10.0.207.217	0.0.0.0	0
lan	192.168.99.0/24	0.0.0.0	0

	Field Name	Sample Value	Explanation
1.	Network	ppp	Interface to be used to transmit TCP/IP packets through
2.	Target	192.168.99.0/24	Indicates where a TCP/IP packet, with a specific IP address, should be directed
3.	IP Gateway	0.0.0.0	Indicates through which gateway a TCP/IP packet should be directed
4.	Metric	0	Metric number indicating interface priority of usage

5.6.3 Active IPv6-Routes

Displays active IPv6 routes for data packet transmission

Active IPv6-Routes			
Network	Target	IPv6-Gateway	Metric
loopback	0:0:0:0:0:0:0:0	0:0:0:0:0:0:0:0	FFFFFFFF
loopback	0:0:0:0:0:0:0:0	0:0:0:0:0:0:0:0	FFFFFFFF
loopback	0:0:0:0:0:0:0:1	0:0:0:0:0:0:0:0	00000000
ppp	FF00:0:0:0:0:0:0:8	0:0:0:0:0:0:0:0	00000100
loopback	0:0:0:0:0:0:0:0	0:0:0:0:0:0:0:0	FFFFFFFF


	Field Name	Sample Value	Explanation
1.	Network	loopback	Network interface used
2.	Target	0:0:0:0:0:0:0:0	Indicates where a TCP/IP packet, with a specific IP address, should be directed
3.	IPv6-Gateway	0:0:0:0:0:0:0:0	Indicates through which gateway a TCP/IP packet should be directed
4.	Metric	FFFFFFFF	Metric number indicating interface priority of usage

5.7 Realtime Graphs

Real-time graphs show how various statistical data changes over time.

5.7.1 Mobile Signal Strenght


Displays mobile signal strength variation in time (measured in dBm)

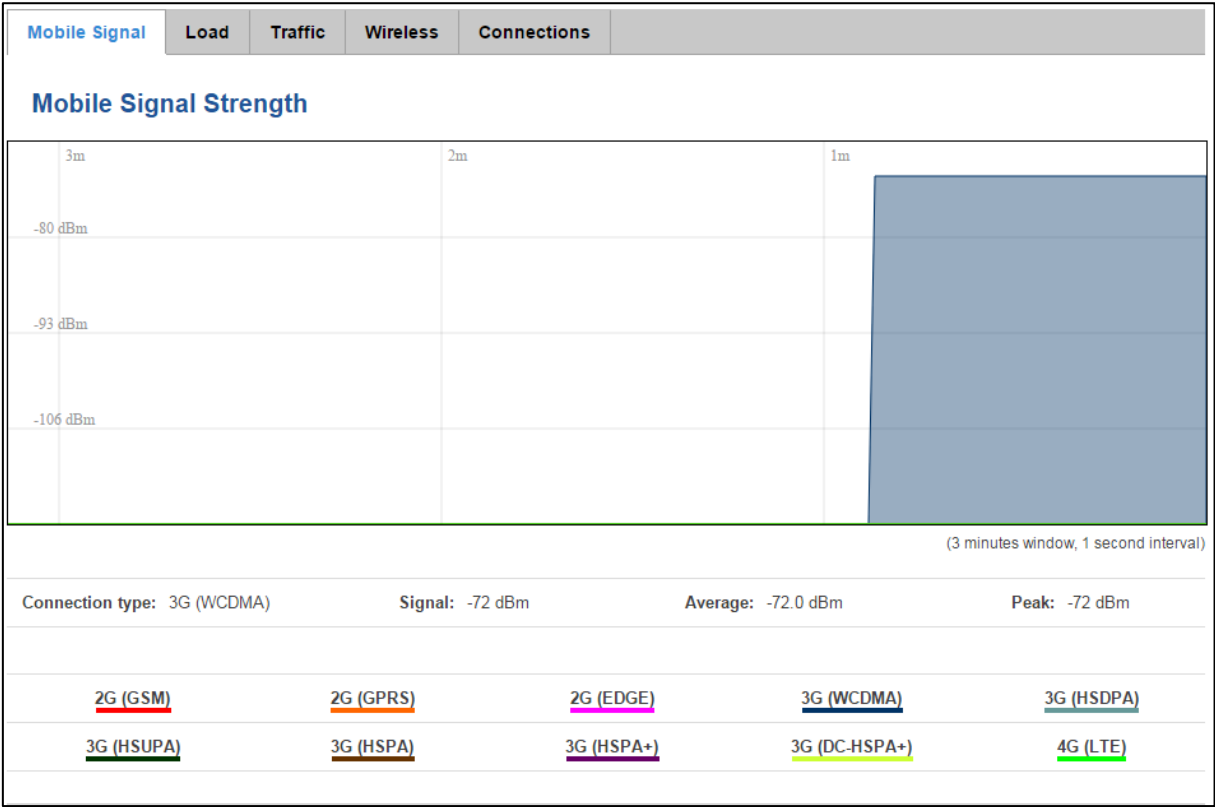

	Field Name	Sample Value	Explanation
1.	Connection type	3G (WCDMA)	Type of mobile connection used
2.	Signal	-72 dBm	Current signal strength value
3.	Average	-72.0 dBm	Average signal strength value
4.	Peak	-72 dBm	Peak signal strength value

5.7.2 Realtime Load


This tri-graph illustrates average CPU load values in real time. The graph consists out of three color coded graphs, each one corresponding to the average CPU load over 1 (red), 5 (orange) and 15 (yellow) most recent minutes.

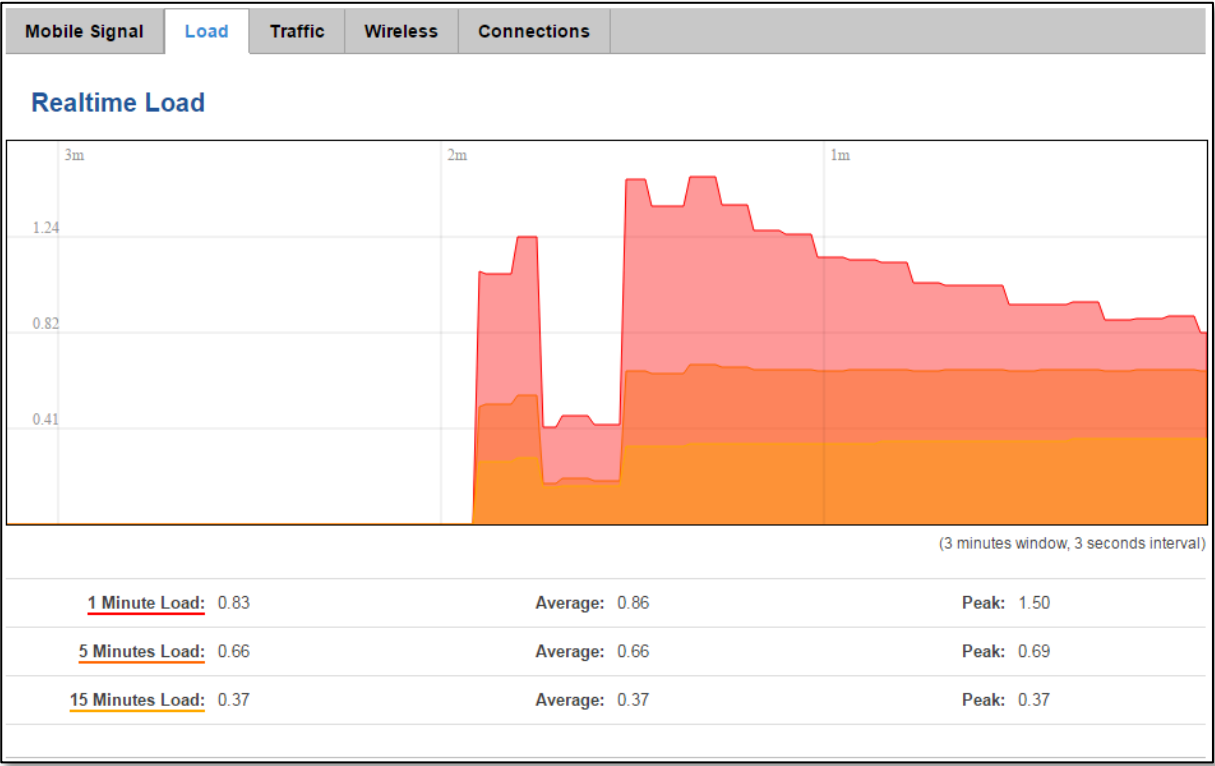

	Field Name	Sample Value	Explanation
1.	1/5/15 Minutes Load	0.83	Time interval for load averaging, color of the diagram
2.	Average	0.86	Average CPU load value over time interval (1/5/15 Minute)
3.	Peak	1.50	Peak CPU load value of the time interval

5.7.3 Traffic

This tri-graph illustrates average system load over the course of ~3 minutes; each new measurement is taken every 3 seconds. The graph consists out of three color coded graphs, each one corresponding to the average system load over 1 (red), 5 (orange) and 15 (yellow) most recent minutes. Although not graphed, the page also displays peak loads over 1, 5 and 15 minutes.

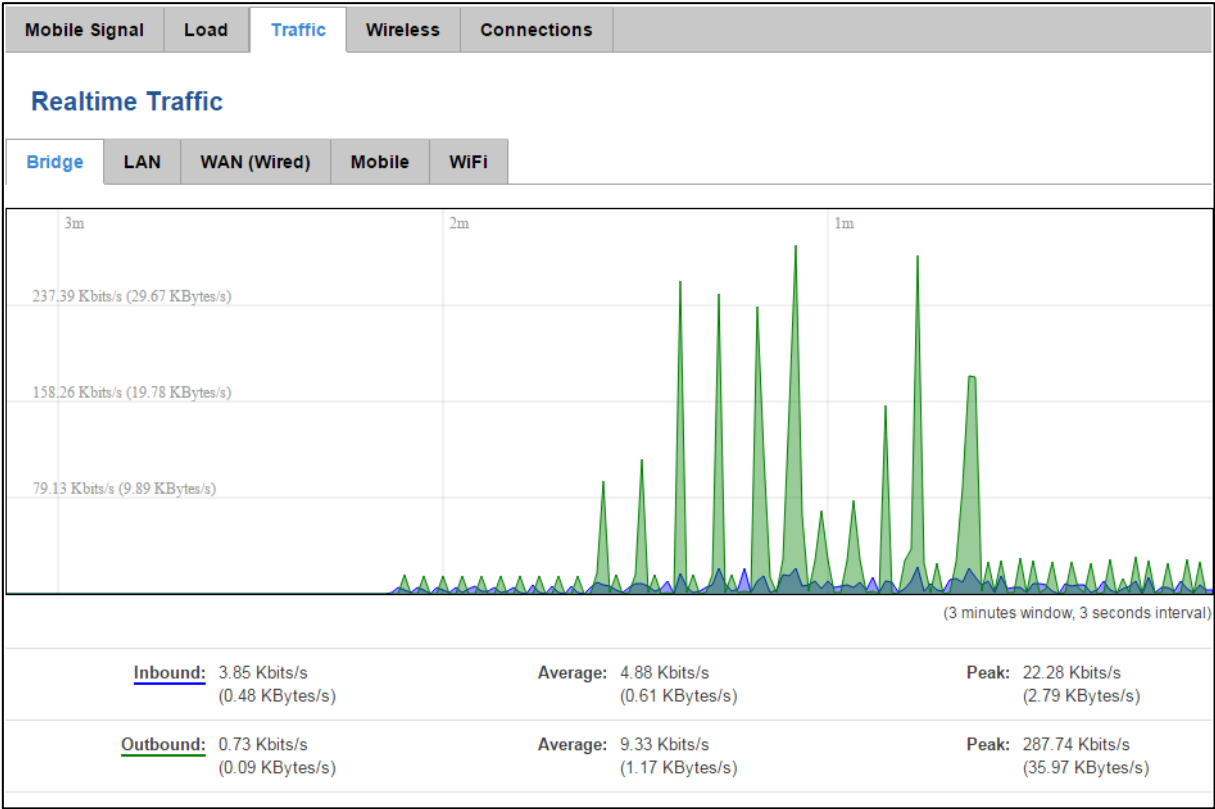

	Field Name	Explanation
1.	Bridge	Cumulative graph, which encompasses wired Ethernet LAN and the wireless network.
2.	LAN	Graphs the total traffic that passes through both LAN network interfaces.
3.	WAN (Wired)	Graphs the amount of traffic which passed through the current active WAN connection.
4.	Mobile	Graphs the amount of traffic which passed through the mobile network connection.
5.	Wi-Fi	Shows the amount of traffic that has been sent and received through the wireless radio.


5.7.4 Realtime Wireless

Displays the wireless radio signal, signal noise and theoretical maximum channel permeability. Average and peak signal levels are displayed.




5.7.5 Realtime Connections

Displays currently active network connections. With the information on network, protocol, source and destination addresses, transfer speed.

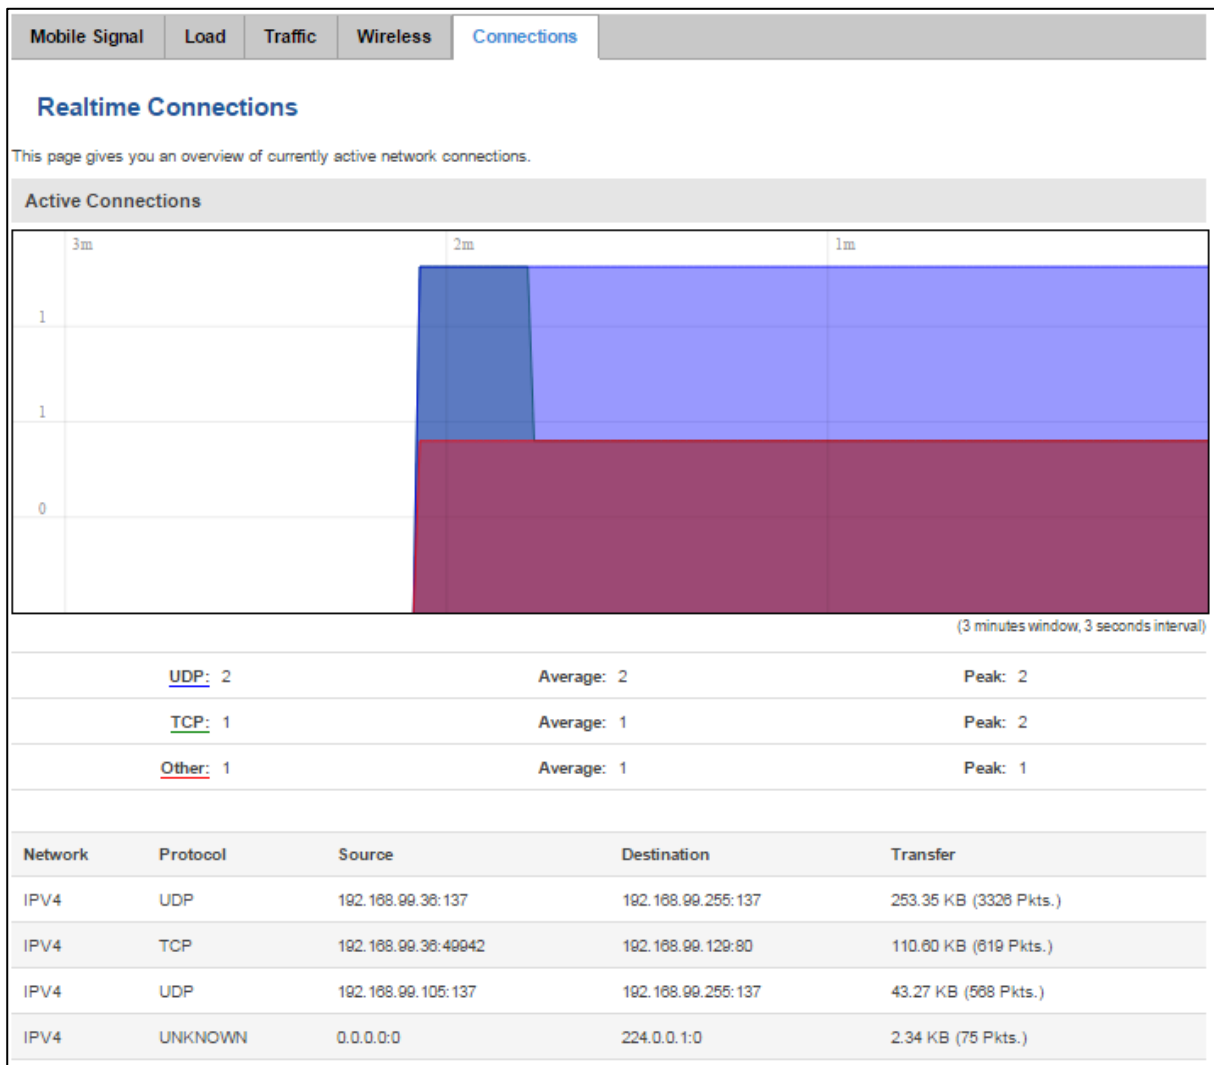


5.8 Mobile Traffic

Displays mobile connection data sent and received in KB of this day, week, month.

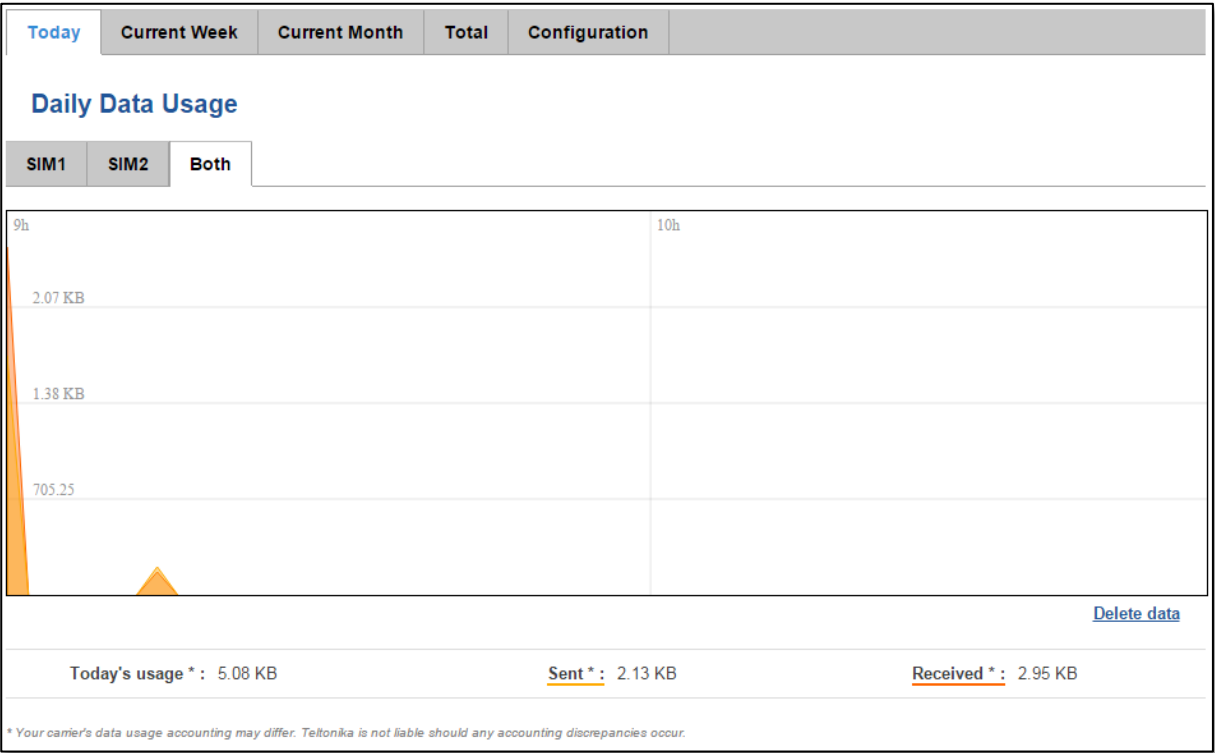

5.9 Speed Test

Speed test is a tool for measuring your internet connection upload and download speeds. You can select servers for manual testing, or use auto test.

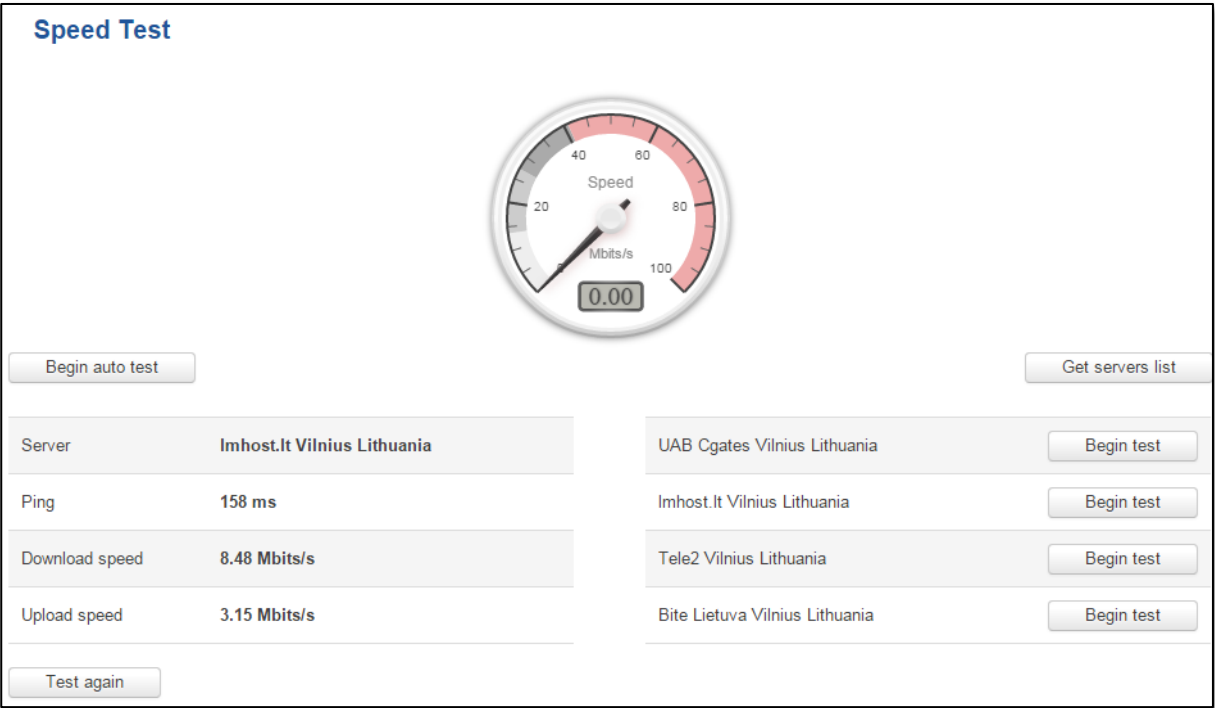

5.10 Events Log

Event log displays such actions as: login, reboot, firmware flashing and reset.

5.10.1 All Events

Displays all router events, their type and time of occurrence.

All Events	System Events	Network Events	Events Reporting	Reporting Configuration
Events Log				
Events Log				
Events per page 10 ▼			Search	
ID ↕	Date ↕	Event type ↕	Event ↕	
3181S	2015-05-11, 16:11:47	Config	Firewall configuration has been changed	
3180S	2015-05-11, 16:09:29	Port	Wired WAN connection operational	
3179S	2015-05-11, 16:05:13	Port	Wired WAN connection non operational	
3178S	2015-05-11, 16:02:39	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi	
3177S	2015-05-11, 16:02:39	Port	Wired WAN connection operational	
3176S	2015-05-11, 16:02:38	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi	
3175S	2015-05-11, 16:02:37	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi	
3174S	2015-05-11, 16:02:36	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi	
3173S	2015-05-11, 16:02:36	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi	
3172S	2015-05-11, 16:02:35	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi	
Showing 1 to 10 of 1912 entries				Next >>

5.10.2 System Events

Displays all system events, their type and time of occurrence. Events include authentication or reboot requests, safemode, incoming and outgoing SMS and calls, configuration changes, DHCP events.

All Events	System Events	Network Events	Events Reporting	Reporting Configuration	
System Log					
All	Authentication	Reboot	Safemode	SMS/Call	Configuration DHCP
Events Log					
Events per page		10	Search		
ID	Date	Event type	Event		
3181	2015-05-11, 16:11:47	Config	Firewall configuration has been changed		
3180	2015-05-11, 16:09:29	Port	Wired WAN connection operational		
3179	2015-05-11, 16:05:13	Port	Wired WAN connection non operational		
3178	2015-05-11, 16:02:39	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi		
3177	2015-05-11, 16:02:39	Port	Wired WAN connection operational		
3176	2015-05-11, 16:02:38	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi		
3175	2015-05-11, 16:02:37	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi		
3174	2015-05-11, 16:02:36	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi		
3173	2015-05-11, 16:02:36	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi		
3172	2015-05-11, 16:02:35	DHCP	Leased 192.168.1.232 IP address for client FC:C2:DE:91:36:A6 - android-9aed2b2077a54c74 in WiFi		
Showing 1 to 10 of 1600 entries					Next >>

5.10.3 Network Events

Displays information about recent network events like connection status change, lease status change, network type or operator change.

All Events	System Events	Network Events	Events Reporting	Reporting Configuration
Connections Log				
All	Wireless	Mobile Data	Network Type	Network Operator
Connections Log				
Events per page 10		Search		
ID	Date	Action	Result	
312	2015-05-11 15:48:49	WiFi	WiFi client connected: FC:C2:DE:91:36:A6 android-9aed2b2077a54c74	
311	2015-05-11 15:48:43	WiFi	WiFi client disconnected: FC:C2:DE:91:36:A6 android-9aed2b2077a54c74	
310	2015-05-11 15:48:37	WiFi	WiFi client connected: FC:C2:DE:91:36:A6 android-9aed2b2077a54c74	
309	2015-05-11 15:48:31	WiFi	WiFi client disconnected: 20:34:47:41:4B:45	
308	2015-05-11 15:36:56	WiFi	WiFi client connected: 20:34:47:41:4B:45	
307	2015-05-11 15:36:55	WiFi	WiFi client disconnected: 00:1E:42:10:80:22	
306	2015-05-11 15:30:32	WiFi	WiFi client connected: 00:1E:42:10:80:22	
305	2015-05-11 15:30:26	WiFi	WiFi client disconnected: 00:1E:42:10:80:22	
304	2015-05-11 15:19:58	WiFi	WiFi client connected: 00:1E:42:10:80:22	
303	2015-05-11 15:19:52	WiFi	WiFi client disconnected: FC:C2:DE:91:36:A6 android-9aed2b2077a54c74	
Showing 1 to 10 of 312 entries				Next >>

5.10.4 Events Reporting

Allows to view, enable, disable or modify created rules for events reporting.

All Events	System Events	Network Events	Events Reporting	Reporting Configuration
------------	---------------	----------------	------------------	-------------------------

Events Reporting

Create rules for events reporting.

Events Reporting Rules

Event type	Event subtype	Action	Enable	Sort
FW upgrade	From file	Send SMS	☒	↑ ↓ Edit Delete
New DHCP client	Connected from LAN	Send SMS	☒	↑ ↓ Edit Delete
Config change	All	Send SMS	☐	↑ ↓ Edit Delete

** All rules are executed in current list order.*

Events Reporting Configuration

Event type	Event subtype	Action
Config change ▼	All ▼	Send SMS ▼

Add

5.10.4.1 Events Reporting Configuration

Allows to view created rules details and modify them, so after event occurrence, messages or emails are sent to specified address or phone numbers with information about the event.

All EventsSystem EventsNetwork EventsEvents ReportingReporting Configuration

Event Reporting Configuration

Modify event reporting rule

Enable ☒

Event type Reboot ▼

Event subtype After unexpected shut down ▼

Action Send SMS ▼

Custom message ☐

Recipient's phone number +123456789 

	Field Name	Sample Value	Explanation
1.	Enable	Enable/Disable	Make a rule active/inactive
2.	Event type	Reboot	Select event type about which occurrence information will be sent
3.	Event subtype	After unexpected shut down	Specifie event subtype to activate the rule
4.	Action	Send SMS	Action to perform when an event occurs
5.	Custom message	Enable/Disable	When action occurs, custom message will be send
6.	Recipient's phone number	+123456789	For whom you want to send a SMS

5.10.5 Reporting Configuration

Displays configured services for event reporting, allows to enable, disable, view and modify the parameters.

All EventsSystem EventsNetwork EventsEvents ReportingReporting Configuration

Events Log Files Report

Create rules for Events Log reporting.

Events Log Report Rules

Events log	Transfer type	Enable	Sort	
System	Email	☒	⬆⬇⬆	EditDelete
Network	FTP	☒	⬆⬇⬆	EditDelete

** All rules are executed in current list order.*

Events Log Reporting Configuration:

Events log	Transfer type	
System ▾	Email ▾	Add

5.10.5.1 Events Log Report Configuration

Allows to change the configuration of periodic events reporting to email or ftp.

All EventsSystem EventsNetwork EventsEvents ReportingReporting Configuration

Events Log Report Configuration

Modify events log file report rule

Enable☒

Events logSystem

Transfer typeFTP

Compress file☒

Host192.168.123.123

User nameUsername

Password*****

Interval between reportsWeek

WeekdayMonday

Hour12

	Field Name	Sample Value	Explanation
1.	Enable	Enable/Disable	Make a rule active/inactive
2.	Events log	System	Event type for which the rule is applied
3.	Transfer type	FTP	Event subtype for which the rule is applied: Email/ftp
4.	Compress file	Enable	Action to perform when an event occurs
5.	Host	192.168.123.123	FTP (File transfer Protocol) host name, e.g. ftp.example.com , 192.168.123.123. Allowed characters (a-z-A-Z0-9!@#\$\$%^&*+_/=?_`{ }~.)
6.	User name	Username	User name for authentication on SMTP(Simple Mail Transfer Protocol) or FTP (File Transfer Protocol) server. Allowed characters (a-z-A-Z0-9!@#\$\$%^&*+_/=?_`{ }~.)
7.	Password	password	Password for authentication on SMTP(Simple Mail Transfer Protocol) or FTP (File Transfer Protocol) server . Allowed characters (a-z-A-Z0-9!@#\$\$%^&*+_/=?_`{ }~.)
8.	Interval between reports	Week	Send report every select time interval
9.	Weekday	Monday	Day of the week to get events log report
10.	Hour	12	Hour of the day to get events log report

6 Network

6.1 Mobile

6.1.1 General

6.1.1.1 Mobile configuration

Here you can configure the mobile specific settings which are used when connecting to your local 3G/LTE network.

The screenshot shows the 'Mobile Configuration' page for SIM 2. The 'General' tab is selected. The configuration fields are as follows:

- Mobile connection: Use NDIS mode (dropdown)
- APN: APN (text input)
- PIN number: 1234 (text input)
- Dialing number: *99# (text input)
- Authentication method: CHAP (dropdown)
- Username: username (text input)
- Password: masked with dots (text input)
- Service mode: 4G (LTE) preferred (dropdown)
- Deny data roaming: unchecked checkbox

	Field Name	Sample value	Explanation
1.	Mobile connection	Use PPPD mode/Use NDIS mode/Use bridge mode	PPPD mode uses dialling number to establish data connection. NDIS mode (default) does not use dialling and PPP protocol to establish data connection and is usually faster than PPPD mode. Bridge mode bridges LTE data connection with LAN. In this mode the router does not have internet connection as ISP provides IP directly to end device (PC, tablet or smartphone). Using Bridge mode will disable most of the router capabilities and you can access your router's settings only by using static IP address on your end device.
2.	APN	"APN"	Access Point Name (APN) is a configurable network identifier used by a mobile device when connecting to a GSM carrier.
3.	PIN number	"1234" or any number that falls between 0000 and 9999	A personal identification number is a secret numeric password shared between a user and a system that can be used to authenticate the user to the system.
4.	Dialling number	*99***1#	Dialling number is used to establish a mobile PPP (Point-to-Point-Protocol) connection.
5.	Authentication method	CHAP, PAP or none	Authentication method, which your carrier uses to authenticate new connections. (This selection is unavailable on the alternate model)
6.	Username	"username"	Your username and password that you would use to connect to your carriers network. These field become available when you select an

			authentication method (i.e. authentication method is not “none”). These fields are always enabled on the alternate model.
7.	Password	“password”	Shows the current system time. Might differ from your computer, because the router synchronizes it's time with an NTP server. Format [year-month-day, hours: minutes: seconds].
8.	Service mode	2G only, 2G preferred, 3G only, 3G preferred, 4G (LTE) only, 4G (LTE) preferred or automatic.	Your network preference. If your local mobile network supports 2G, 3G and 4G (LTE) you can specify to which network you wish to connect. E.g.: if you choose 2G, the router will connect to a 2G network, so long as it is available, otherwise it will connect to a network that provides better connectivity. If you select auto, then the router will connect to the network that provides better connectivity.
9.	Deny data roaming	Enable/Disable	If enabled this function prevents the device from establishing mobile data connection while not in home network.

Warning: If an invalid PIN number was entered (i.e. the entered PIN does not match the one that was used to protect the SIM card), your SIM card will get blocked. To avoid such mishaps it is highly advised to use an unprotected SIM. If you happen to insert a protected SIM and the PIN number is incorrect, your card won't get blocked immediately, although after a couple of reboots OR configuration saves it will.

6.1.1.2 Mobile Data On Demand

Mobile Data On Demand

Enable ☐

No data timeout (sec)

Save

	Field name	Possible values	Explanation
1.	Enable	Enable/Disable	Mobile Data On Demand function enables you to keep mobile data connection on only when it's in use
2.	No data timeout(sec)	1-99999999	A mobile data connection will be terminated if no data is transferred during the timeout period

6.1.1.3 Force LTE network

Force LTE network

Enable ☐

Interval (sec)

	Field name	Possible values	Explanation
1.	Enable	Enable/Disable	Force LTE network function periodically disables mobile data connection (for a few seconds) to allow the device to switch to LTE network. This could because some operators do not support switching from 3G to LTE networks while data is being transferred.
2.	Interval (sec)	180 - 3600	Interval in seconds the device will use to periodically disable mobile data connection.

6.1.2 SIM Management

General
SIM Management
Network Operators
Mobile Data Limit
SIM Idle Protection

SIM Switching

Primary Card

Primary SIM card SIM 1 ▼

SIM Switching

Enable automatic switching ☐

Check interval 20

SIM1 to SIM2

SIM2 to SIM1

On weak signal ☐

On data limit ☐

On sms limit ☐

On roaming ☐

On data connection fail ☐

	Field name	Possible values	Explanation
1.	Primary SIM card	SIM 1 / SIM 2	SIM card that will be used in the system as a primary SIM card
2.	Enable automatic switching	Enable/Disable	Automatically switch between primary and secondary SIM cards based on the various rules and criterions defined below
3.	Check interval	20-3600	Check interval in seconds
4.	On weak signal	Enable/Disable	Perform a SIM card switch when a signal's strength drops below a certain threshold
5.	On data limit	Enable/Disable	Perform a SIM card switch when mobile data limit for your current SIM card is exceeded
6.	On sms limit	Enable/Disable	Perform a SIM card switch when sms limit for your current SIM card is exceeded
7.	On roaming	Enable/Disable	Perform a SIM card switch when roaming is detected
8.	On data connection fail	Enable/Disable	Perform a SIM card switch when data connection fails
9.	Switch back to primary SIM card after timeout	Enable/Disable	Switch back to primary SIM card after timeout has been reached

6.1.3 Network Operators

This function lets you Scan, Select and enter manual Network Operator to which router should connect. Function will provide great utility when router is in Roaming conditions. Operator is selected only for the active SIM card. In order to specify operator for the other SIM card it must first be selected as primary SIM in “SIM Management”.

Network Operators

Current SIM

SIM card in use

SIM 1

Current operator

TELE2

Scan For Network Operators

Status	Operator name	Short name	Numeric name	Network access type	Connect
Available	Tele2 LT	Tele2 LT	24603	3G/2G	Connect
Forbidden	LT BITE GSM	BITE	24602	3G/2G	Connect
Available	OMNITEL LT	OMT	24601	2G/3G/4G	Connect

Scan

Connect

Auto ▼

	Field Name	Sample Value	Explanation
1.	SIM card in use	SIM 1 / SIM 2	Shows current SIM card's in use
2.	Current operator	„TELE2“	Operator's name of the connected GSM network

Note: **after clicking Scan button - You will lose current mobile connection!** For changing network operator status have to be available. There is manual connection to network operator, you have to fill numeric name, and it's have to be available.

6.1.4 Mobile Data Limit

This function lets you limit maximum amount of data transferred on WAN interface in order to minimize unwanted traffic costs.

6.1.4.1 Data Connection Limit Configuration

GeneralSIM ManagementNetwork OperatorsMobile Data LimitSIM Idle Protection

Mobile Data Limit Configuration

SIM1SIM2

Data Connection Limit Configuration

Enable data connection limit☒

Data limit* (MB)

200

Period

Month

Start day

1

	Field Name	Sample value	Explanation
1.	Enable data connection limit	Enable/Disable	Disables mobile data when a limit for current period is reached
2.	Data limit (MB)	200	Disable mobile data after limit value in MB is reached
3.	Period	Month/Week/Day	Period for which mobile data limiting should apply
4.	Start day/ Start hour	1	A starting time for mobile data limiting period

6.1.4.2 SMS Warning Configuration

SMS Warning Configuration

Enable SMS warning☒

Data limit (MB)

300

Period

Month

Start day

1

Phone number

+37012345678

	Field Name	Sample value	Explanation
1.	Enable SMS warning	Enable/Disable	Enables sending of warning SMS message when mobile data limit for current period is reached
2.	Data limit (MB)	200	Send warning SMS message after limit value in MB is reached
	Period	Month/Week/Day	Period for which mobile data limiting should apply
4.	Start day/ Start hour		A starting time for mobile data limiting period
3.	Phone number	+37012345678	A phone number to send warning SMS message to, e.g. +37012345678

6.2 WAN

6.2.1 Operation Mode

WAN

Your WAN configuration determines how the router will be connecting to the internet.

Operation Mode

Interface

☐  Wired

☒  Mobile

☐  WiFi

	Type	Explanation
1.	Wired	An Ethernet cable connected to the WAN port of the router.
2.	Wi-Fi	The router will be able to connect to a local wireless access point and reach the internet through it.
3.	Mobile	The router will connect to your local mobile network for Mobile access.

6.2.2 Common configuration

Common configuration allows you to configure your TCP/IP settings for the wan network.

Common Configuration

General Setup

Advanced Settings

Protocol

DHCP

Really switch protocol?

Switch protocol

You can switch between the Static, DHCP or PPPoE protocol by selecting the protocol that you want to use and then pressing **Switch Protocol**

Note: Mobile connection does not use either DHCP or Static protocol therefore it displays “none” in the dropdown menu.

6.2.2.1 General Setup

6.2.2.1.1 Static:

Common Configuration

General Setup

Advanced Settings

Protocol

Static

IPv4 address

192.168.99.162

IPv4 netmask

255.255.255.0

IPv4 gateway

192.168.99.254

IPv4 broadcast

192.168.99.255

Use custom DNS servers

8.8.8.8

8.8.6.6

This is the configuration setup for when you select the static protocol.

	Filed name	Sample	Explanation
1.	IPv4 address	192.168.99.162	Your routers address on the WAN network
2.	IPv4 netmask	255.255.255.0	A mask used to define how “large” the WAN network is
3.	IPv4 gateway	192.168.99.254	Address where the router will send all the outgoing traffic
4.	IPv4 broadcast	192.168.99.255	Broadcast address (autogenerated if not set). It is best to leave this blank unless you know what you are doing.
5.	custom DNS servers	8.8.8.8 8.8.6.6	Usually the gateway has some predefined DNS servers. As such the router, when it needs to resolve a hostname (“www.google.com”, “www.cnn.com”, etc...) to an IP address, it will forward all the DNS requests to the gateway. By entering custom DNS servers the router will take care of host name resolution. You can enter multiple DNS servers to provide redundancy in case the one of the server fails.

6.2.2.1.2 DHCP:

General Setup

Advanced Settings

Protocol

DHCP

Hostname to send when requesting DHCP

Teltonika

IP Aliases

IP aliases are a way of defining or reaching a subnet that works in the same space as the regular network

There are no IP aliases created yet

Add

Save

When you select the DHCP protocol you can use it as is, because most networks will not require any additional advanced configuration.

6.2.2.1.3 PPPoE

This protocol is mainly used by DSL providers:

Common Configuration

General Setup

Advanced Settings

Protocol

PPPoE

PAP/CHAP username

test

PAP/CHAP password

...

Access Concentrator

auto

Service Name

auto

This is the configuration setup for when you select PPPoE protocol.

	Filed name	Sample	Explanation
1.	PAP/CHAP username	test	Your username and password that you would use to connect to your carriers network.
2.	PAP/CHAP password	your_password	A mask used to define how “large” the WAN network is
3.	Access Concentrator	isp	Specifies the name of access concentrator. Leave empty to auto detect.
4.	Service Name	isp	Specifies the name of the service. Leave empty to auto detect.

6.2.2.2 Advanced

These are the advanced settings for each of the protocols, if you are unsure of how to alter these attributes it is highly recommended to leave them to a trained professional:

6.2.2.2.1 Static

Common Configuration

General Setup

Advanced Settings

Disable NAT

☐

Override MAC address

Override MTU

Use gateway metric

	Field name	Sample value	Explanation
1.	Disable NAT	On/Off	Toggle NAT on and off.
2.	Override MAC address	86:48:71:B7:E9:E4	Override MAC address of the WAN interface. If your ISP gives you a static IP address it might also bind it to your computers MAC address (i.e. that IP will only work with your computer). In this field you can enter your computers MAC address and fool the gateway in thinking that it is communicating with your computer.
3.	Override MTU	1500	Maximum transmission unit – specifies the largest possible size of a data packet.
4.	Use gateway metric	0	The WAN configuration by default generates a routing table entry. With this field you can alter the metric of that entry.

6.2.2.2.2 DHCP

Common Configuration

General Setup

Advanced Settings

Disable NAT

☐

Use broadcast flag

☐

Use default gateway

☒

Use DNS servers advertised by peer

☒

Use gateway metric

Client ID to send when requesting DHCP

Vendor Class to send when requesting DHCP

Override MAC address

Override MTU

	Field name	Sample value	Explanation
1.	Disable NAT	Enable/Disable	If checked, router will not perform NAT (masquerade) on this interface
2.	Use broadcast flag	Enable/Disable	Required for certain ISPs, e.g. Charter with DOCSIS 3

3.	Use default gateway	Enable/Disable	If unchecked, no default route is configured
4.	Use DNS server advertised by peer	Enable/Disable	If unchecked, the advertised DNS server addresses are ignored
5.	User gateway metric	0	The WAN configuration by default generates a routing table entry With this field you can alter the metric of that entry
6.	Client ID to send when requesting DHCP		
7.	Vendor Class to send when requesting DHCP		
8.	Override MAC address	86:48:71:B7:E9:E4	Override MAC address of the WAN interface. If your ISP gives you a static IP address it might also bind it to your computers MAC address (i.e. that IP will only work with your computer). In this field you can enter your computers MAC address and fool the gateway in thinking that it is communicating with your computer.
9.	Override MTU	1500	Maximum transmission unit – specifies the largest possible size of a data packet.

6.2.2.2.3 PPPoE

Common Configuration

General Setup

Advanced Settings

Disable NAT ☐

Use default gateway ☒

Use gateway metric

Use DNS servers advertised by peer ☒

LCP echo failure threshold

LCP echo interval

Inactivity timeout

	Field name	Sample value	Explanation
1.	Disable NAT	Enable/Disable	If checked, router will not perform NAT (masquerade) on this interface
2.	Use default gateway	Enable/Disable	If unchecked, no default route is configured
3.	Use gateway metric	0	
4.	Use DNS servers advertised by peer	Enable/Disable	If unchecked, the advertised DNS server addresses are ignored
5.	LCP echo failure threshold	0	Presume peer to be dead after given amount of LCP echo failures, use 0 to ignore failures
6.	LCP echo interval	5	Send LCP echo requests at the given interval in seconds, only effective in conjunction with failure threshold
7.	Inactivity timeout	0	Close inactive connection after the given amount of seconds, use 0 to persist connection

6.2.2.2.4 IP Aliases

IP aliases are a way of defining or reaching a subnet that works in the same space as the regular network.

The screenshot shows a configuration window with two tabs: "General Setup" (active) and "Advanced Settings". Under "General Setup", there are three input fields: "IP Address" with the value "192.168.99.161", "Netmask" with a dropdown menu showing "255.255.255.0", and "Gateway" with the value "192.168.99.254". Below these fields are two buttons: "Delete" and "Add". At the bottom right of the window is a "Save" button.

As you can see, the configuration is very similar to the static protocol; only in the example a 99th subnet is defined. Now if some device has an IP in the 99 subnet (192.168.99.xxx) and the subnets gateway metric is “higher” and the device is trying to reach the internet it will reroute it’s traffic not to the gateway that is defined in common configurations but through the one that is specified in IP aliases.

The screenshot shows a configuration window with two tabs: "General Setup" (active) and "Advanced Settings". Under "General Setup", there are two input fields: "IP Broadcast" and "DNS Server". Below these fields are two buttons: "Delete" and "Add". At the bottom right of the window is a "Save" button.

You may also optionally define a broadcast address and a custom DNS server.

6.3 LAN

This page is used to configure the LAN network, where all your devices and computers that you connect to the router will reside.

6.3.1 Configuration

6.3.1.1 General Setup

Configuration

General Setup **Advanced Settings**

IP address

IP netmask

IP broadcast

	Field name	Sample value	Explanation
1.	IP address	192.168.1.1	Address that the router uses on the LAN network
2.	IP netmask	255.255.255.0	A mask used to define how large the LAN network is
3.	IP broadcast	0	IP broadcasts are used by BOOTP and DHCP clients to find and send requests to their respective servers

6.3.1.2 Advanced settings

LAN

Configuration

General Setup **Advanced Settings**

Override MTU

Use gateway metric

	Field name	Sample value	Explanation
1.	Enable LAN interface	Enable/Disable	
2.	Use custom DNS servers	8.8.8.8	Multiple DNS servers can be entered by clicking new entry button near a text input field
3.	Override MTU	1500	MTU (Maximum Transmission Unit) specifies the largest possible size of a data packet
4.	Use gateway metric	0	With this field you can alter the metric of that entry

6.3.2 DHCP Server

The DHCP server is the router side service that can automatically configure the TCP/IP settings of any device that requests such a service. If you connect a device that has been configured to obtain IP address automatically the DHCP server will lease an address and the device will be able to fully communicate with the router.

6.3.2.1 General Setup

DHCP Server

General Setup

Advanced Settings

DHCP

Enable

Start

100

Limit

150

Lease time

12

Hours

	Field Name	Sample value	Explanation
1.	DHCP	Enable/Disable	Manage DHCP server
2.	Start	100	The starting address of the range that the DHCP server can use to give out to devices. E.g.: if your LAN IP is 192.168.2.1 and your subnet mask is 255.255.255.0 that means that in your network a valid IP address has to be in the range of [192.168.2.1 – 192.168.2.254](192.168.2.0 and 192.168.2.255 are special unavailable addresses). If the Start value is set to 100 then the DHCP server will only be able to lease out addresses starting from 192.168.2.100
3.	Limit	150	How many addresses the DHCP server gets to lease out. Continuing on the above example: if the start address is 192.168.2.100 then the end address will be 192.168.2.254 ($100 + 150 - 1 = 254$).
4.	Lease time	12	How long can a leased IP be considered valid. An IP address after the specified amount of time will expire and the device that leased it out will have to request for a new one. Select Hour or Minute (minimum 2min).

6.3.2.2 Advanced settings

You can also define some advanced options that specify how the DHCP server will operate on your LAN network.

DHCP Server

General Setup

Advanced Settings

Dynamic DHCP

☒

Force

☐

IP netmask

DHCP Options



	Field Name	Sample Value	Explanation
1.	Dynamic DHCP	Checked/Unchecked	Dynamically allocate client addresses, if set to 0 only clients present in the <code>ethers</code> files are served
2.	Force	Checked/Unchecked	Forces DHCP serving even if another DHCP server is detected on the same network segment.
3.	IP netmask		You can override your LAN netmask here to make the DHCP server think it's serving a larger or a smaller network than it actually is.
4.	DHCP-Options		Additional options to be added for this <i>DHCP</i> server. For example with '26,1470' or 'option:mtu, 1470' you can assign an MTU per DHCP. Your client must accept MTU by DHCP for this to work.

6.4 Wireless

On this page you can configure your wireless settings. Depending on whether your WAN mode is set to Wi-Fi or not, the page will display either the options for configuring an **Access Point** or options for configuring a **connection** to some local access point.

Access Point:

Wireless General

Site Survey

Wireless Access Point

Here you can configure your wireless settings like radio frequency, mode, encryption etc...

Device Configuration

General Setup

Advanced Settings

Enable wireless

☒

Channel

auto



Interface Configuration

General Setup

Wireless Security

MAC Filter

Advanced Settings

SSID

Teltonika_Router

Hide SSID

☐

Here you can see the Overview of the wireless configuration. It is divided into two main sections – device and interface. One is dedicated to configuring hardware parameters other – software.

Here you can toggle the availability of the wireless radio and the physical channel frequency.


Important note: As seen in the picture you should always **Save** before toggling the radio on and off.

ESSID – Your wireless networks identification string. This is the name of your Wi-Fi network. When other Wi-Fi capable computers or devices scan the area for Wi-Fi networks they will see your network with this name.

Hide ESSID – Will render your SSID hidden from other devices that try to scan the area.

6.4.1.1 Device

6.4.1.1.1 Advanced Settings

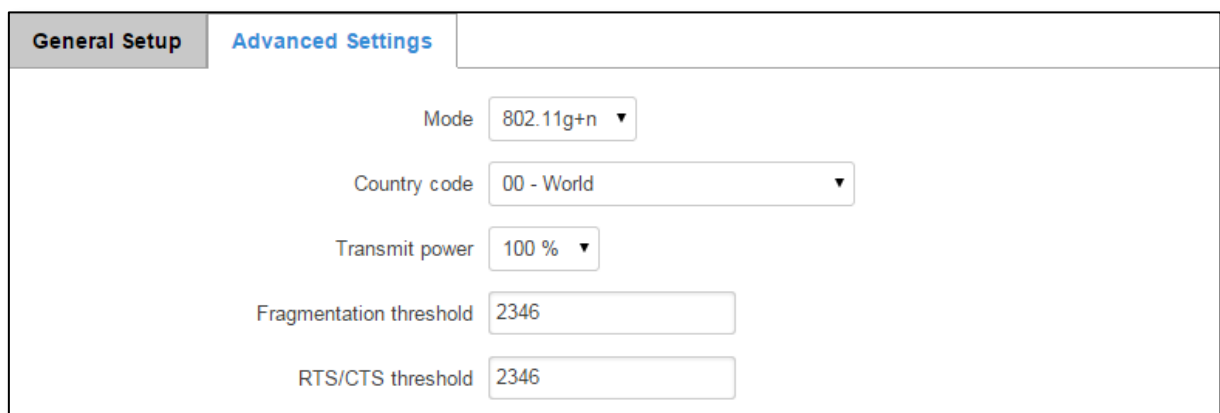

Here you can configure more advanced parameters:

	Field name	Sample value	Explanation
1.	Mode	Auto, b, g, g+n	Different modes provide different throughput and security options.
2.	Country Code	Any ISO/IEC 3166 alpha2 country code	Selecting this will help the wireless radio configure its internal parameters to meet your countries wireless regulations.
3.	Transmit power	20%/40%/60%/80%/100%	Select WiFi signal power
4.	Frag. Threshold	2346	The smallest packet size that can be fragmented and transmitted by multiple frames. In areas where interference is a problem, setting a lower fragment threshold might help reduce the probability of unsuccessful packet transfers, thus increasing speed.
5.	RTS/CTS Threshold	2346	Request to send threshold. It can help resolve problems arising when several access points are in the same area, contending.

6.4.1.2 Interface

6.4.1.2.1 Security

Encryption – There are many modes of encryption, a distinctive class is pointed out below.

Interface Configuration			
General Setup	Wireless Security	MAC Filter	Advanced Settings
Encryption		WPA-PSK/WPA2-PSK mixed mode ▼	
Cipher		Auto ▼	
Key		 	

First select an encryption method: TKIP, CCMP, TKIP&CCMP and auto. Note: Some authentication methods won't support TKIP (and TKIP&CCMP) encryption. After you've selected your encryption method, you should enter your passphrase, which must be at least 8 characters long.

6.4.1.2.2 MAC-Filter

Interface Configuration			
General Setup	Wireless Security	MAC Filter	Advanced Settings
MAC address filter		Allow listed only ▼	
MAC list		00:11:22:33:44:55 	

Filter – you can define a rule for what to do with the MAC list you've defined. You can either allow only the listed MACs or allow ALL, but forbid only the listed ones.

6.4.1.2.3 Advanced settings

Separate clients – prevents Wi-Fi clients from communicating with each other on the same subnet.

Interface Configuration			
General Setup	Wireless Security	MAC Filter	Advanced Settings
Separate clients ☐			

6.4.1.3 Client

RUT9xx can work as a Wi-Fi client (check **6.5 Chapter** of this manual). Client mode is nearly identical to AP, except for the fact that most of the options are dictated by the wireless access point that the router is connecting to. Changing them can result in an interrupted connection to an AP.

In addition to standard options you can also click the **Scan** button to rescan the surrounding area and attempt to connect to a new wireless access point.

6.5 Backup WAN

Backup WAN is a function that allows you to back up your wired OR wireless connection in case they go down. At the current moment you can only backup wired and Wi-Fi.

Backup WAN

Backup Link

Enable ☐

Backup Configuration

If mobile is selected as WAN, you cannot enable backup link. Timing and other parameters will indicate how and when it will be determined that your conventional connection has gone down.

Health monitor interval 5 sec.

Health monitor ICMP host(s) DNS Server(s)

Health monitor ICMP timeout 1 sec.

Attempts before WAN failover 1

Attempts before WAN recovery 1

Backup Check

A remote host that will be used to test whether your backup link is alive.

ICMP host 8.8.4.4

The majority of the options consist of timing and other important parameters that help determine the health of your primary connection. Regular health checks are constantly performed in the form of ICMP packets (Pings) on your primary connection. When the connection's state starts to change (READY->NOT READY and vice versa) a necessary amount of failed or passed health checks has to be reached before the state changes completely. This delay is instituted so as to mitigate "spikes" in connection availability, but it also extends the time before the backup link can be brought up or down.

	Field Name	Sample value	Explanation
1.	Enable	Enable/Disable	Here you can setup your backup WAN. If your conventional WAN connection, such as wired Ethernet or Wireless, fails, the backup link will be enabled and take over to keep the router connected
2.	Health monitor Interval	Disable/5/10/20/30/60/120 Seconds	The interval at which health checks are performed
3.	Health monitor ICMP host(s)	Disable/DNS/WAN GW/Custom	Where to Ping for a health check. As there is no definitive way to determine when the connection to internet is down for good, you'll have to define

			a host whose availability that of the internet as a whole.
4.	Health monitor ICMP timeout	1/3/4/5/10 Seconds	How long to wait for an ICMP request to come back. Set a higher value if your connection has high latency or high jitter (latency spikes).
5.	Attempts before WAN failover	1/3/5/10/15/20	How many checks should fail for your WAN connection to be declared DOWN for good.
6.	Attempts before WAN recovery	1/3/5/10/15/20	How many checks should pass for your WAN connection to be declared UP.
7.	ICMP host	8.8.4.4	This is where the address of an ICMP host, that will be used to check the health of your Mobile backup link, goes. This has to be a Ping-able host.

6.5.1.1 How do I set up a backup link?


First we must pick a main link: Wired or Wi-Fi, and ensure that the link is working. Configure your WAN settings to use that link and see whether you have internet access. If the main link is working we can continue configuring our Backup Link.

Now, go to Backup WAN page and configure the settings to your liking. Click Save and wait until the settings are applied.

Now in the Status -> Network Information -> WAN page there should be a status indication for the backup WAN. If everything is working correctly you should see this:



The above picture shows the status for Backup WAN configured on a wired main link. You can now simulate a downed link by simply unplugging your Ethernet WAN cable. When you've done so you should see this:

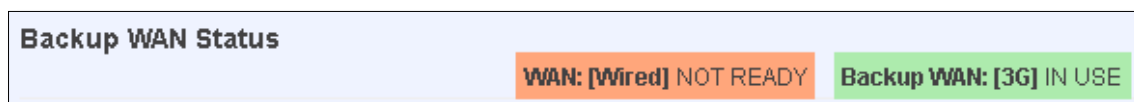

And, if you plug the cable back in you should, again, see this:



If you do not witness the above sequence, your backup link is working!

6.6 Firewall

In this section we will look over the various firewall features that come with RUT950.

6.6.1 General Settings

The routers firewall is a standard Linux iptables package, which uses routing chains and policies to facilitate control over inbound and outbound traffic.

The screenshot shows the 'Firewall' configuration page with the 'General Settings' tab selected. The page title is 'Firewall'. Below the title, a subtitle reads: 'General settings allows you to set up default firewall policy.' The 'General Settings' section contains the following options:

- 'Drop invalid packets' with an unchecked checkbox.
- 'Input' chain policy set to 'Accept' (dropdown menu).
- 'Output' chain policy set to 'Accept' (dropdown menu).
- 'Forward' chain policy set to 'Reject' (dropdown menu).

	Field Name	Sample value	Explanation
1.	Drop Invalid packets	Checked/Unchecked	A “Drop” action is performed on a packet that is determined to be invalid
2.	Input	Reject/Drop/Accept	DEFAULT* action that is to be performed for packets that pass through the Input chain.
3.	Output	Reject/Drop/Accept	DEFAULT* action that is to be performed for packets that pass through the Output chain.
4.	Forward	Reject/Drop/Accept	DEFAULT* action that is to be performed for packets that pass through the Forward chain.

*DEFAULT: When a packet goes through a firewall chain it is matched against all the rules for that specific chain. If no rule matches said packet, an according Action (either Drop or Reject or Accept) is performed.

Accept – Packet gets to continue down the next chain.

Drop – Packet is stopped and deleted.

Reject – Packet is stopped, deleted and, differently from Drop, an ICMP packet containing a message of rejection is sent to the **source** of the dropped packet.

6.6.2 DMZ

DMZ Configuration

Enable ☐

DMZ host IP address

By enabling DMZ for a specific internal host (for e.g.: your computer), you will expose that host and its services to the routers WAN network (i.e. - internet).

6.6.3 Port Forwarding

Here you can define your own port forwarding rules.

General SettingsPort ForwardingTraffic RulesCustom Rules

Firewall - Port Forwarding

Port forwarding allows remote computers on the Internet to connect to a specific computer or service within the private LAN.

Port Forwarding Rules

Name	Protocol	Source	Via	Destination	Enable	Sort	
localWebsite	TCP	From any host in wan	To any router IP at port 12345	Forward to IP 192.168.1.109, port 80 in lan	☒	↑↓	EditDelete

New Port Forward Rule

Name	Protocol	External port	Internal IP	Internal port	
localWebsite	TCP	12345	192.168.1.109	80	Add

You can use port forwarding to set up servers and services on local LAN machines. The above picture shows how you can set up a rule that would allow a website that is being hosted on 192.168.1.109, to be reached from the outside by entering `http://routersExternalIp:12345/`.

	Field Name	Sample value	Explanation
1.	Name	"localWebsite"	Name of the rule. Used purely to make it easier to manage rules.
2.	Protocol	TCP/UDP/TCP+UDP/Other	Type of protocol of incoming packet.
3.	External Port	1-65535	From what port on the WAN network will the traffic be forwarded.
4.	Internal IP address	IP address of some computer on your LAN	The IP address of the internal machine that hosts some service that we want to access from the outside.
5.	Internal port	1-65535	To what port on the internal machine would the rule redirect the traffic.

When you click **edit** you can fine tune a rule to near perfection, if you should desire that.

Rule is enabled

Name

Protocol

Source zone ☐ lan: lan: ☐ vpn: (empty) ☒ wan: wan: ppp: wan2:

Source MAC address

Source IP address

Source port

External IP address

External port

Internal zone ☒ lan: lan: ☐ vpn: (empty) ☐ wan: wan: ppp: wan2:

Internal IP address

Internal port

Enable NAT loopback ☒

Extra arguments

	Field Name	Sample value	Explanation
1.	Name	"localWebsite"	Name of the rule. Used purely to make it easier to manage rules.
2.	Protocol	TCP/UDP/TCP+ UDP/ICMP/Custom	You may specify multiple by selecting (custom) and then entering protocols separated by space
3.	Source zone	LAN/VPN/WAN	Match incoming traffic from this zone only
4.	Source MAC address	Any	Match incoming traffic from these MACs only
5.	Source IP address	any	Match incoming traffic from this IP or range only
7.	Source port	any	Match incoming traffic originating from the given source port or port range on the client host only
8.	External IP address	any	Match incoming traffic directed at the given IP address only

9.	External port	12345	Match incoming traffic directed at the given destination port or port range on this host only
10.	Internal zone	LAN/VPN/WAN	Redirect matched incoming traffic to the specified internal zone
11.	Internal IP address	192.168.1.109	Redirect matched incoming traffic to the specified internal host
12.	Internal port	80	Redirect matched incoming traffic to the given port on the internal host
13.	Enable NAT loopback	Enable/Disable	NAT loopback enables your local network (i.e. behind your router/modem) to connect to a forward-facing IP address (such as 208.112.93.73) of a machine that it also on your local network
14.	Extra arguments		Passes additional arguments to iptables. Use with care!

6.6.4 Traffic Rules

The traffic rule page contains a more generalised rule definition. With it you can block or open ports, alter how traffic is forwarded between LAN and WAN and many more things.

General Settings
Port Forwarding
Traffic Rules
Custom Rules
DDOS Prevention

Firewall - Traffic Rules

Traffic rules define policies for packets traveling between different zones, for example to reject traffic between certain hosts or to open WAN ports on the router.

Name	Protocol	Source	Destination	Action	Enable	Sort	
Allow-DHCP-Relay	UDP	From any host in wan	To any router IP at port 67 on this device	Accept input	☐		Edit Delete
Allow-DHCP-Renew	UDP	From any host in wan	To any router IP at port 68 on this device	Accept input	☒		Edit Delete
Allow-Ping	ICMP with type echo-request	From any host in wan	To any router IP on this device	Accept input	☒		Edit Delete

	Field Name	Explanation
1.	Name	Name of the rule. Used for easier rules management purpose only
2.	Protocol	Protocol type of incoming or outgoing packet
3.	Source	Match incoming traffic from this IP or range only
4.	Destination	Redirect matched traffic to the given IP address and destination port
5.	Action	Action to be taken for the packet if it matches the rule
6.	Enable	Self-explanatory. Uncheck to make the rule inactive. The rule will not be deleted, but it also will not be loaded into the firewall.
7.	Sort	When a packet arrives, it gets checked for a matching rule. If there are several rules that match the rule, the first one is applied i.e. the order of the rule list impacts how your firewall operates, therefore you are given the ability to sort your list as you wish.

You can configure firewall rule by clicking edit button.

Rule is disabled

Name

Restrict to address family

Protocol

Match ICMP type

Source zone
☐ Any zone
☐ lan: lan:
☐ vpn: (empty)
☒ wan: wan: ppp: wan2:

Source MAC address

Source address

Source port

Destination zone
☒ Device (input)
☐ Any zone (forward)
☐ lan: lan:
☐ vpn: (empty)
☐ wan: wan: ppp: wan2:

Destination address

Destination port

Action

Extra arguments

	Field Name	Sample value	Explanation
1.	Name	"Allow-DHCP-Relay"	Used to make rule management easier
2.	Restrict to address family	IPv4-only	Match traffic from selected address family only
3.	Protocol	TCP/UDP/Any/ICMP/Custom	Protocol of the packet that is being matched against traffic rules.
4.	Match ICMP type	any	Match traffic with selected ICMP type only
5.	Source zone	Any zone/LAN/VPN/WAN	Match incoming traffic from this zone only
6.	Source MAC address	any	Match incoming traffic from these MACs only
7.	Source address	any	Match incoming traffic from this IP or range only

8.	Source port	any	Match incoming traffic originating from the given source port or port range on the client host only
9.	Destination zone	Device/Any zone/LAN/VPN/WAN	Match forwarded traffic to the given destination zone only
10.	Destination address	any	Match forwarded traffic to the given destination IP address or IP range only
11.	Destination port	67	Match forwarded traffic to the given destination port or port range only
12.	Action	Drop/Accept/Reject + chain + additional rules	Action to be taken on the packet if it matches the rule. You can also define additional options like limiting packet volume, and defining to which chain the rule belongs

6.6.4.1 Open Ports On Router

Open Ports On Router

Name	Protocol	External port	
Open_Port_rule	TCP	22	Add

	Field Name	Sample value	Explanation
1.	Name	Open_Port_rule	Used to make rule management easier
2.	Protocol	TCP/UDP/Any/ICMP/Custom	Protocol of the packet that is being matched against traffic rules.
3.	External port	1-65535	Match incoming traffic directed at the given destination port or port range on this host.

6.6.4.2 New Forward Rule

New Forward Rule

Name	Source	Destination	
Forward rule new	LAN	WAN	Add

	Field Name	Sample value	Explanation
1.	Name	Forward_rule_new	Used to make rule management easier
2.	Source	LAN/VPN/WAN	Match incoming traffic from selected address family only
3.	Protocol	TCP/UDP/Any/ICMP/Custom	Protocol of the packet that is being matched against traffic rules.

6.6.4.3 Source NAT

Source NAT

Source NAT is a specific form of masquerading which allows fine grained control over the source IP used for outgoing traffic, for example to map multiple WAN addresses to internal subnets.

Name	Protocol	Source	Destination	SNAT	Enable
SNAT	TCP+UDP	From any host in lan	To any host, port 22 in wan	Rewrite to source IP 10.101.1.10, port 22	☒ Edit Delete

New Source NAT

Name	Source	Destination	Source IP	Source port
SNAT	LAN	WAN	10.101.1.10	22

Add

	Field Name	Sample value	Explanation
1.	Name	Forward_rule_new	Used to make rule management easier
2.	Protocol	TCP/UDP/Any/ICMP/Custom	Protocol of the packet that is being matched against traffic rules.
3.	Source	LAN/VPN/WAN	Match incoming traffic from selected address family only
4.	Destination		Redirect matched traffic to the given IP address and destination port
5.	SNAT		SNAT (Source Network Address Translation) rewrite packet\'s source IP address and port
6.	Enable	Enable/Disable	Make a rule active/inactive

You can configure firewall source NAT rule, by clicking edit button.

Rule is enabled

Name

Protocol

Source zone ☒ lan: lan:  ☐ vpn: (empty) ☐ wan: wan:  ppp:  wan2: 

Source MAC address 

Source IP address

Source port

Destination zone ☐ lan: lan:  ☐ vpn: (empty) ☒ wan: wan:  ppp:  wan2: 

Destination IP address

Destination port

SNAT IP address

SNAT port

Extra arguments

	Field Name	Sample value	Explanation
1.	Name	"Allow-DHCP-Relay"	Used to make rule management easier
2.	Protocol	TCP/UDP/Any/ICMP/Custom	Protocol of the packet that is being matched against traffic rules.
3.	Source zone	LAN/VPN/WAN	Match incoming traffic from this zone only
4.	Source MAC address	any	Match incoming traffic from these MACs only
5.	Source address	any	Match incoming traffic from this IP or range only
6.	Source port	any	Match incoming traffic originating from the given source port or port range on the client host only
7.	Destination zone	LAN/VPN/WAN	Match forwarded traffic to the given destination zone only

8.	Destination address	Select from the list	Match forwarded traffic to the given destination IP address or IP range only
9.	Destination port	any	Match forwarded traffic to the given destination port or port range only
10.	SNAT IP address	"10.101.1.10"	Rewrite matched traffic to the given IP address
11.	SNAT port	"22"	Rewrite matched traffic to the given source port. May be left empty to only rewrite the IP address'
12.	Extra arguments		Passes additional arguments to iptables. Use with care!

6.6.5 Custom Rules

Here you have the ultimate freedom in defining your rules – you can enter them straight into the iptables program. Just type them out into the text field and it will get executed as a Linux shell script. If you are unsure of how to use iptables, check the internet out for manuals, examples and explanations.

General Settings
Port Forwarding
Traffic Rules
Custom Rules

Firewall - Custom Rules

Custom rules allow you to execute arbitrary iptables commands which are not otherwise covered by the firewall framework. The commands are executed after each firewall restart, right after the default ruleset has been loaded.

```
# This file is interpreted as shell script.
# Put your custom iptables rules here, they will
# be executed with each firewall (re-)start.

# Internal uci firewall chains are flushed and recreated on reload, so
# put custom rules into the root chains e.g. INPUT or FORWARD or into the
# special user chains, e.g. input_wan_rule or postrouting_lan_rule.
```

Reset
Submit

6.6.6 DDOS Prevention

6.6.6.1 SYN Flood Protection

SYN Flood Protection allows you to protect from attack that exploits part of the normal TCP three-way handshake to consume resources on the targeted server and render it unresponsive. Essentially, with SYN flood DDoS, the offender sends TCP connection requests faster than the targeted machine can process them, causing network saturation.

General Settings

Port Forwarding

Traffic Rules

Custom Rules

DDOS Prevention

DDOS Prevention

SYN Flood Protection

Enable SYN flood protection

☒

SYN flood rate

25

SYN flood burst

50

TCP SYN cookies

☐

	Field Name	Sample value	Explanation
1.	Enable SYN flood protection	Enable/Disable	Makes router more resistant to SYN flood attacks.
2.	SYN flood rate	"25"	Set rate limit (packets/second) for SYN packets above which the traffic is considered a flood.
3.	SYN flood burst	"50"	Set burst limit for SYN packets above which the traffic is considered a flood if it exceeds the allowed rate.
4.	TCP SYN cookies	Enable/Disable	Enable the use of SYN cookies(particular choices of initial TCP sequence numbers by TCP servers).

6.6.6.2 Remote ICMP requests

Attackers are using ICMP echo request packets directed to IP broadcast addresses from remote locations to generate denial-of-service attacks.

Remote ICMP requests

Enable ICMP requests ☒

Enable ICMP limit ☐

Limit period

Second ▼

Limit

10

Limit burst

5

	Field Name	Sample value	Explanation
1.	Enable ICMP requests	Enable/Disable	Blocks remote ICMP echo-request type
2.	Enable ICMP limit	Enable/Disable	Enable ICMP echo-request limit in selected period
3.	Limit period	Second/Minute/Hour/Day	Select in what period limit ICMP echo-request
4.	Limit	"10"	Maximum ICMP echo-request during the period
5.	Limit burst	"5"	Indicating the maximum burst before the above limit kicks in.

6.6.6.3 SSH Attack Prevention

Prevent SSH(Allows a user to run commands on a machine's command prompt without them being physically present near the machine.) attacks by limiting connections in defined period

SSH Attack Prevention

Enable SSH limit ☐

Limit period

Second ▼

Limit

10

Limit burst

5

	Field Name	Sample value	Explanation
1.	Enable SSH limit	Enable/Disable	Enable ssh connections limit in selected period
2.	Limit period	Second/Minute/Hour/Day	Select in what period limit ssh connections
3.	Limit	"10"	Maximum ssh connections during the period
4.	Limit burst	"5"	Indicating the maximum burst before the above limit kicks in.

6.6.6.4 HTTP Attack Prevention

HTTP attack sends a complete, legitimate HTTP header, which includes a 'Content-Length' field to specify the size of the message body to follow. However, the attacker then proceeds to send the actual message body at an extremely slow rate (e.g. 1 byte/110 seconds). Due to the entire message being correct and complete, the target server will attempt to obey the 'Content-Length' field in the header, and wait for the entire body of the message to be transmitted, hence slowing it down.

HTTP Attack Prevention

Enable HTTP limit ☐

Limit period

Second ▼

Limit

10

Limit burst

10

	Field Name	Sample value	Explanation
1.	Enable HTTP limit	Enable/Disable	Limits HTTP connections per period
2.	Limit period	Second/Minute/Hour/Day	Select in what period limit HTTP connections
3.	Limit	"10"	Maximum HTTP connections during the period
4.	Limit burst	"10"	Indicating the maximum burst before the above limit kicks in.

6.6.6.5 HTTPS Attack Prevention

HTTPS Attack Prevention

Enable HTTPS limit ☐

Limit period

Second ▼

Limit

10

Limit burst

10

	Field Name	Sample value	Explanation
1.	Enable HTTPS limit	Enable/Disable	Limits HTTPS connections per period
2.	Limit period	Second/Minute/Hour/Day	Select in what period limit HTTPS connections
3.	Limit	"10"	Maximum HTTPS connections during the period
4.	Limit burst	"10"	Indicating the maximum burst before the above limit kicks in.

6.7 Static Routes

Static routes provide a way of entering custom entries in the internal routing table of the router.

Routes

Routes specify over which interface and gateway a certain host or network can be reached.

Static IP Routes

Interface	Target	Netmask	Gateway	Metric	
LAN	192.168.55.0	255.255.255.0	192.168.55.145	0	Delete
Add					
Save					

	Field name	Value	Explanation
1.	Interface	LAN/WAN/PPP/WAN2	The zone where the 'Target' resides
2.	Target	IP address	The source of the traffic.
3.	Netmask	IP mask	Mask that is applied to the Target to determine to what actual IP addresses the routing rule applies
4.	Gateway	IP address	To where the router should send all the traffic that applies to the rule
5.	Metric	integer	Used as a sorting measure. If a packet about to be routed fits two rules, the one with the higher metric is applied.

Additional note on Target & Netmask: You can define a rule that applies to a single IP like this: Target - some IP; Netmask - 255.255.255.255. Furthermore you can define a rule that applies to a segment of IPs like this: Target – some IP that STARTS the segment; Netmask – Netmask that defines how large the segment is. E.g.:

192.168.55.161	255.255.255.255	Only applies to 192.168.55.161
192.168.55.0	255.255.255.0	Applies to IPs in range 192.168.55.0-192.168.55.255
192.168.55.240	255.255.255.240	Applies 192.168.55.240 - 192.168.55.255
192.168.55.161	255.255.255.0	192.168.55.0 - 192.168.55.255
192.168.0.0	255.255.0.0	192.168.0.0 - 192.168.255.255

7 Services

7.1 VRRP

7.1.1 VRRP LAN Configuration Settings

VRRP LAN Configuration Settings

Enable ☐

IP address 

Virtual ID

Priority

	Field name	Sample	Explanation
1.	Enable	Enable/Disable	Enable VRRP (Virtual Router Redundancy Protocol) for LAN
2.	IP address	192.168.1.253	Virtual IP address for LAN's VRRP (Virtual Router Redundancy Protocol) cluster
3.	Virtual ID	1	Routers with same IDs will be grouped in the same VRRP (Virtual Router Redundancy Protocol) cluster
4.	Priority	100	Router with highest priority value on the same VRRP (Virtual Router Redundancy Protocol) cluster will act as a master

7.1.2 Advanced settings

Check internet connection

Enable ☐

Ping IP address

Ping interval

Ping timeout (sec)

Ping packet size

Ping retry count

	Field name	Sample	Explanation
1.	Enable	Enable/Disable	Enable WAN's connection monitoring
2.	Ping IP address	8.8.4.4	A host to send ICMP (Internet Control Message Protocol) packets to
3.	Ping interval	10	Time interval in minutes between two Pings
4.	Ping timeout (sec)	1	Response timeout value, interval [1 - 9999]
5.	Ping packet size	50	ICMP (Internet Control Message Protocol) packet's size, interval [0 - 1000]
6.	Ping retry count	10	Failed Ping attempt's count before determining that connection is lost

7.2 Web filter

7.2.1 Site blocking

Site Blocking

Proxy Based Content Blocker

Site Blocking Settings

Site Blocking

Enable ☐

Mode

Whitelist ▾

Enable

Host name

☒

www.yahoo.com

Delete

Add

	Field name	Sample	Explanation
1.	Enable	Enable/Disable	Enable host name based websites blocking
2.	Mode	Whitelist/Blacklist	Whitelist - allow every site on the list and block everything else. Blacklist - block every site on the list and allow everything else

7.2.2 Proxy based URL content blocker

Site Blocking

Proxy Based Content Blocker

Proxy Based URL Content Blocker Configuration

Proxy Based URL Content Blocker

Enable ☒

Mode

Blacklist ▾

URL Filter Rules

Enable

URL content

☒

example.com

Delete

	Field name	Sample	Explanation
1.	Enable	Enable/Disable	Enable proxy server based URL content blocking. Works with HTTP protocol only
2.	Mode	Whitelist/Blacklist	Whitelist - allow every part of URL on the list and block everything else. Blacklist - block every part of URL on the list and allow everything else

7.3 NTP

NTP configuration lets you setup and synchronize routers time.

The screenshot shows the 'Time Synchronisation' configuration page. At the top, there are two tabs: 'General' (selected) and 'Time Servers'. The 'General' tab contains the following fields and controls:

- Current system time:** 2014-11-24 03:30:49
- Time zone:** A dropdown menu set to 'UTC'.
- Enable NTP:** A checkbox that is checked.
- Update interval (in seconds):** A text input field containing '3600'.
- Save time to flash:** An unchecked checkbox.
- Count of time synchronizations:** An empty text input field.
- Clock Adjustment:** A section header.
- Offset frequency:** A text input field containing '0'.
- Buttons:** 'Sync with browser' (top right) and 'Save' (bottom right).

	Field name	Description	Notes
1.	Current System time	Local time of router.	---
2.	Time zone	Time zone of your country.	---
3.	Enable NTP	Enables the functionality	---
4.	Update interval	How often router updates systems time	---
5.	Count of time synchronizations	Total amount of times that router will do the synchronization	If left blank - the count will be infinite
6.	Offset frequency	Adjust the minor drift of the clock so that it will be more accurate	

Note, that under **Time Servers** at least one server has to be present, otherwise NTP will not serve its purposes.

7.4 VPN

7.4.1 OpenVPN

VPN (Virtual Private Network) is a method for secure data transfer through unsafe public network. This section explains how to configure OpenVPN, which is implementation of VPN supported by the RUT950 router.

A picture below demonstrates default OpenVPN configurations list, which is empty, so you have to define a new configuration to establish any sort of OpenVPN connection. To create it, enter desired configuration name in **“New configuration name”** field, select device role from **“Role”** drop down list. For example, to create an OpenVPN client with configuration name Demo, select client role, name it “Demo” and press **“Add New”** button as shown in the following picture.

The screenshot shows the OpenVPN configuration interface. At the top, there are tabs for OpenVPN, IPsec, GRE Tunnel, PPTP, and L2TP. The OpenVPN tab is selected. Below the tabs, the title "OpenVPN" is displayed. Underneath, the section "OpenVPN Configuration" is shown. A table with the following headers is present: Tunnel name, TUN/TAP, Protocol, Port, and Enabled. The table is currently empty, with a message "There are no openVPN configurations yet" below it. At the bottom, there is a "Role:" dropdown menu set to "Client", a "New configuration name:" text input field containing "demo", and an "Add New" button.

The screenshot shows the OpenVPN configuration interface after a new configuration has been added. A green banner at the top states "New OpenVPN instance was created successfully. Configure it now". Below this, the "OpenVPN" title and "OpenVPN Configuration" section are visible. The table now contains one entry: "Client_demo" under Tunnel name, "Tun_c_demo" under TUN/TAP, "UDP" under Protocol, "1194" under Port, and "No" under Enabled. To the right of this entry are "Edit" and "Delete" buttons. At the bottom, the "Role:" dropdown is still "Client", and the "New configuration name:" field is empty, with an "Add New" button.

To see at specific configuration settings press **“edit”** button located in newly created configuration entry. A new page with detailed configuration appears, as shown in the picture below (TLS client example).

There can be multiple server/client instances.

OpenVPN	IPsec	GRE Tunnel	PPTP	L2TP
OpenVPN Instance: Client_demo				
Main Settings				
Enable ☐				
TUN/TAP TUN (tunnel)				
Protocol UDP				
Port 1194				
LZO ☒				
Encryption BF-CBC 128 (default)				
Authentication TLS				
Remote host/IP address 215.45.60.66				
Resolve retry Infinite				
Keep alive 10 60				
Remote network IP address 10.0.0.0				
Remote network IP netmask 255.255.255.0				
Certificate authority Browse...				
Client certificate Browse...				
Client key Browse...				

You can set custom settings here according to your VPN needs. Below is summary of parameters available to set:

	Field name	Explanation
1.	Enabled	Switches configuration on and off. This must be selected to make configuration active.
2.	TUN/TAP	Selects virtual VPN interface type. TUN is most often used in typical IP-level VPN connections, however, TAP is required to some Ethernet bridging configurations.
3.	Protocol	Defines a transport protocol used by connection. You can choose here between TCP and UDP.
4.	Port	Defines TCP or UDP port number (make sure, that this port allowed by firewall).
5.	LZO	This setting enables LZO compression. With LZO compression, your VPN connection will generate less network traffic; however, this means higher router CPU loads. Use it carefully with high rate traffic or low CPU resources.
6.	Encryption	Selects Packet encryption algorithm.
7.	Authentication	Sets authentication mode, used to secure data sessions. Two possibilities you have here: "Static" means, that OpenVPN client and server will use the same secret key, which must be uploaded to the router using "Static pre-shared key" option. "Tls" authentication mode uses

		X.509 type certificates. Depending on your selected OpenVPN mode (client or server) you have to upload these certificates to the router: For client: Certificate Authority (CA), Client certificate, Client key. For server: Certificate Authority (CA), Server certificate, Server key and Diffie-Hellman (DH) certificate used to key exchange through unsafe data networks. All mention certificates can be generated using OpenVPN or OpenSSL utilities on any type host machine. Certificate generation and theory is out of scope of this user manual.
8.	Remote host IP address	IP address of OpenVPN server (applicable only for client configuration).
9.	Resolve Retry	Sets time in seconds to try resolving server hostname periodically in case of first resolve failure before generating service exception.
10.	Keep alive	Defines two time intervals: one is used to periodically send ICMP request to OpenVPN server, and another one defines a time window, which is used to restart OpenVPN service, if no ICMP request is received during the window time slice. Example Keep Alive "10 60"
11.	Remote network IP address	IP address of remote network, an actual LAN network behind another VPN endpoint.
12.	Remote network IP netmask	Subnet mask of remote network, an actual LAN network behind another VPN endpoint.
13.	Certificate authority	Certificate authority is an entity that issues digital certificates. A digital certificate certifies the ownership of a public key by the named subject of the certificate.
14.	Client certificate	Client certificate is a type of digital certificate that is used by client systems to make authenticated requests to a remote server. Client certificates play a key role in many mutual authentication designs, providing strong assurances of a requester's identity.
15.	Client key	Authenticating the client to the server and establishing precisely who they are

After setting any of these parameters press **"Save"** button. Some of selected parameters will be shown in the configuration list table. You should also be aware of the fact that router will launch separate OpenVPN service for every configuration entry (if it is defined as active, of course) so the router has ability to act as server and client at the same time.

7.4.2 IPsec

The IPsec protocol client enables the router to establish a secure connection to an IPsec peer via the Internet. IPsec is supported in two modes - transport and tunnel. Transport mode creates secure point to point channel between two hosts. Tunnel mode can be used to build a secure connection between two remote LANs serving as a VPN solution.

IPsec system maintains two databases: Security Policy Database (SPD) which defines whether to apply IPsec to a packet or not and specify which/how IPsec-SA is applied and Security Association Database (SAD), which contain Key of each IPsec-SA.

The establishment of the Security Association (IPsec-SA) between two peers is needed for IPsec communication. It can be done by using manual or automated configuration.

Note: router starts establishing tunnel when data from router to remote site over tunnel is sent. For automatic tunnel establishment used tunnel Keep Alive feature.

OpenVPN
IPsec
GRE Tunnel
PPTP
L2TP

IPsec

IPsec Configuration

Enable ☒

Mode Main ▼

Enable NAT traversal ☐

Enable initial contact ☐

My identifier type Address ▼

My identifier 100.121.122.123

Pre shared key password

Remote VPN endpoint 215.148.3.15

Enable DPD ☒

Delay (sec) 30

	Field name	Explanation
1.	Enable	Check box to enable IPsec.
2.	Mode	Select "Main", "Aggressive" or "Base" mode accordingly to your IPsec server configuration.
3.	Enable NAT traversal	Enable this function if client-to-client applications will be used.
4.	Enable initial contact	Enable this to send an INITIAL-CONTACT message.
5.	My identifier type	Set the device identifier for IPsec tunnel. E.g. You can use your IP address
6.	My identifier	Set the device identifier for IPsec tunnel. In case RUT has Private IP, its identifier should be its own LAN network address. In this way, the RoadWarrior approach is possible.
7.	Preshare key	Specify the authentication secret [string]. Secret's length depends on selected algorithm, eg. 128 bit long secret is 16 characters in length, 128 bits / 8 bits (one character) = 16.
8.	Remote VPN endpoint	Set remote IPsec server IP address.
9.	Enable DPD	If the RUT does not receive DPD-ACK message from its IPsec peer, RUT shuts the connection down.
10.	Delay (sec)	Select delay between peer acknowledgement requests

Phase 1 and **Phase 2** must be configured accordingly to the IPSec server configuration, thus algorithms, authentication and lifetimes of each phase must be identical.

Phase

The phase must match with another incoming connection to establish IPSec

Phase 1
Phase 2

Encryption algorithm
3DES

Hash algorithm
SHA1

DH group
MODP768

Lifetime (sec)
28800

Phase

The phase must match with another incoming connection to establish IPSec

Phase 1
Phase 2

Encryption algorithm
3DES

PFS group
MODP768

Authentication
HMAC_SHA1

Life time (sec)
3600

Remote Network Secure Group – Set the remote network (Secure Policy Database) information. It must be LAN **network** of remote IPSec host.

Remote Network Secure Group

IP address

Subnet mask

Tunnel Keep Alive

Allows sending ICMP echo requests to the remote tunnel network

Enable
☐


Host

Ping period (sec)

	Field name	Explanation
1.	Tunnel keep alive	Allows sending ICMP echo request (Ping utility) to the remote tunnel network. This function may be used to automatically start the IPSec tunnel. This function should be used every time.
2.	Enable	Allows sending ICMP echo requests to the remote tunnel network
3.	Host	Enter IP address to which ICMP echo requests will be sent.
4.	Ping period (sec)	Set sent ICMP request period in seconds.

7.4.3 GRE Tunnel

GRE (Generic Routing Encapsulation RFC2784) is a solution for tunneling RFC1812 private address-space traffic over an intermediate TCP/IP network such as the Internet. GRE tunneling does not use encryption it simply encapsulates data and sends it over the WAN.

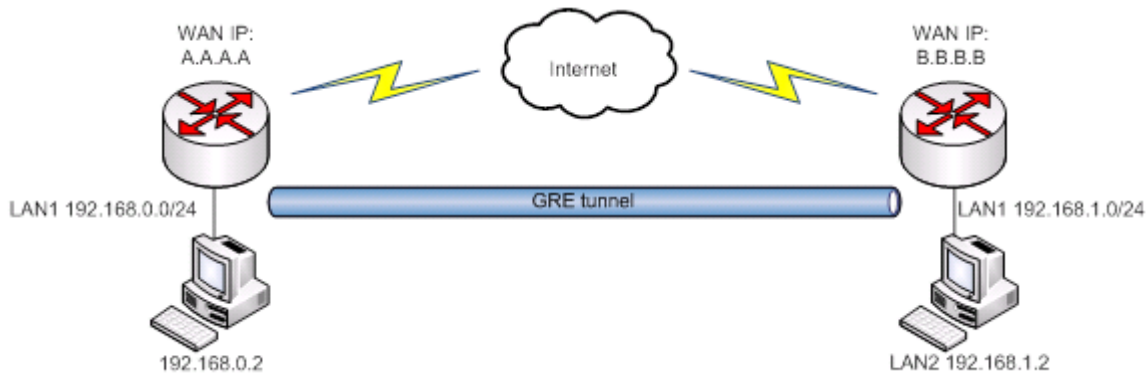

In the example network diagram two distant networks LAN1 and LAN2 are connected.

To create GRE tunnel the user must know the following parameters:

1. Source and destination IP addresses.
2. Tunnel local IP address
3. Distant network IP address and Subnet mask.

OpenVPN	IPsec	GRE Tunnel	PPTP	L2TP
Gre-tunnel Instance: Gre_tunnel				
Main Settings				
Enabled ☒				
Remote endpoint IP address		84.148.7.87		
Remote network		192.168.2.0		
Remote network netmask		24		
Local tunnel IP		10.0.0.1		
Local tunnel netmask		24		
MTU		1500		
TTL		255		
PMTUD ☒				
Enable Keep alive ☒				
Keep Alive host				
Keep Alive interval				

	Field name	Explanation
1.	Enabled	Check the box to enable the GRE Tunnel function.
2.	Remote endpoint IP address	Specify remote WAN IP address.
3.	Remote network	IP address of LAN network on the remote device.
4.	Remote network netmask	Network of LAN network on the remote device. Range [0-32].
5.	Local tunnel IP	Local virtual IP address. Can not be in the same subnet as LAN network.
6.	Local tunnel netmask	Network of local virtual IP address. Range [0-32]
7.	MTU	Specify the maximum transmission unit (MTU) of a communications protocol of a layer in bytes.
8.	TTL	Specify the fixed time-to-live (TTL) value on tunneled packets [0-255]. The 0 is a special value meaning that packets inherit the TTL value.
9.	PMTUD	Check the box to enable the Path Maximum Transmission Unit Discovery (PMTUD) status on this tunnel.
10.	Enable Keep alive	It gives the ability for one side to originate and receive keepalive packets to and from a remote router even if the remote router does not support GRE keepalives.
11.	Keep Alive host	Keep Alive host IP address. Preferably IP address which belongs to the LAN network on the remote device.
12.	Keep Alive interval	Time interval for Keep Alive. Range [0 - 255].

7.4.4 PPTP

Point-to-Point Tunneling Protocol (PPTP) is a protocol (set of communication rules) that allows corporations to extend their own corporate network through private "tunnels" over the public Internet. Effectively, a corporation uses a wide-area network as a single large local area network. A company no longer needs to lease its own lines for wide-area communication but can securely use the public networks. This kind of interconnection is known as a virtual private network (VPN).

OpenVPNIPsecGRE Tunnel**PPTP**L2TP

PPTP Server Instance: Pptpd_server

Main Settings

Enable☐

Local IP

Remote IP range start

Remote IP range end

User name	Password	User IP	
youruser	 		Delete
Add			

	Field name	Explanation
1.	Enable	Check the box to enable the PPTP function.
2.	Local IP	IP Address of this device (RUT)
3.	Remote IP range begin	IP address leases beginning
4.	Remote IP range end	IP address leases end
5.	Username	Username to connect to PPTP (this) server
6.	Password	Password to connect to PPTP server

7.4.5 L2TP

Allows setting up a L2TP server or client and should it be needed - using it with IPsec (L2TP/IPSec). Below is L2TP server configuration example.

OpenVPNIPsecGRE TunnelPPTPL2TP

L2TP Server Instance: L2tpd_server

Main Settings

Enable

Local IP

Remote IP range begin

Remote IP range end

User name

Password

user

....

Delete

Add

Save

	Field name	Explanation
1.	Enable	Check the box to enable the GRE Tunnel function.
2.	Local IP	IP Address of this device (RUT)
3.	Remote IP range begin	IP address leases beginning
4.	Remote IP range end	IP address leases end
5.	Username	Username to connect to L2TP (this) server
6.	Password	Password to connect to L2TP server

Client configuration is even simpler, which requires only **Servers IP**, **Username** and **Password**.

7.5 Dynamic DNS

Dynamic DNS (DDNS) is a domain name service allowing to link dynamic IP addresses to static hostname. To start using this feature firstly you should register to DDNS service provider (example list is given in description). You are provided with add/delete buttons to manage and use different DDNS configurations at the same time!

You can configure many different DDNS Hostnames in the main DDNS Configuration section.

DDNS Configuration			
DDNS Name	Hostname	Status	Enabled
Myddns	yourhost.example.org	N/A	No
Demo	mypersonaldomain.dyndns.org	N/A	No
New configuration name: Add New			
Save			

To edit your selected configuration, hit **Edit**.

DDNS	
Enable	☐
Status	N/A
Service	3322.org
Hostname	yourhost.example.org
User name	your_username
Password	
IP source	Custom
Network	WAN
IP renew interval (min)	10
Force IP renew (min)	472
Save	

	Field name	Value	Explanation
1.	Enable	-	Enables current DDNS configuration.
2.	Status	-	Timestamp of the last IP check or update.
3.	Service	1. dydns.org 2. 3322.org 3. no-ip.com 4. easydns.com 5. zoneedit.com	Your dynamic DNS service provider selected from the list. In case your DDNS provider is not present from the ones provided, please feel free to use "custom" and add hostname of the update URL.
4.	Hostname	Yourhost.example.org	Domain name which will be linked with dynamic IP address.

5.	User name	your_username	Name of the user account.
6.	Password	your_password	Password of the user account.
7.	IP Source	Public Private Custom	This option allows you to select specific RUT interface, and then send the IP address of that interface to DDNS server. So if, for example, your RUT has Private IP (i.e. 10.140.56.57) on its WAN (3G/LTE interface), then you can send this exact IP to DDNS server by selecting "Private", or by selecting "Custom" and "WAN" interface. The DDNS server will then resolve hostname queries to this specific IP.
8.	IP renew interval (min)	10 (minutes)	Time interval (in minutes) to check if the IP address of the device have changed.
9.	Force IP renew	472 (minutes)	Time interval (in minutes) to force IP address renew.

7.6 SNMP

SNMP settings window allows you to remotely monitor and send GSM event information to the server.

7.6.1 SNMP Settings

SNMP Configuration

SNMP Service Settings

SNMP Settings

TRAP Settings

Enable SNMP service

Enable remote access

Port

Community

Location

Contact

Name

Save

	Field name	Sample	Explanation
1.	Enable SNMP service	Enable/Disable	Run SNMP (Simple Network Management Protocol) service on system's start up
2.	Enable remote access	Enable/Disable	Open port in firewall so that SNMP (Simple Network Management Protocol) service may be reached from WAN
3.	Port	161	SNMP (Simple Network Management Protocol) service's port
4.	Community	Public/Private/Custom	The SNMP (Simple Network Management Protocol) Community is an ID that allows access to a router's SNMP data
5.	Community name	custom	Set custom name to access SNMP
6.	Location	Location	Trap named sysLocation
7.	Contact	email@example.com	Trap named sysContact
8.	Name	Name	Trap named sysName

Variables/OID

	OID	Description
1.	1.3.6.1.4.1.99999.1.1.1	Modem IMEI
2.	1.3.6.1.4.1.99999.1.1.2	Modem model
3.	1.3.6.1.4.1.99999.1.1.3	Modem manufacturer
4.	1.3.6.1.4.1.99999.1.1.4	Modem revision
5.	1.3.6.1.4.1.99999.1.1.5	Modem serial number
6.	1.3.6.1.4.1.99999.1.1.6	SIM status
7.	1.3.6.1.4.1.99999.1.1.7	Pin status
8.	1.3.6.1.4.1.99999.1.1.8	IMSI
9.	1.3.6.1.4.1.99999.1.1.9	Mobile network registration status
10.	1.3.6.1.4.1.99999.1.1.10	Signal level
11.	1.3.6.1.4.1.99999.1.1.11	Operator currently in use
12.	1.3.6.1.4.1.99999.1.1.12	Operator number (MCC+MNC)
13.	1.3.6.1.4.1.99999.1.1.13	Data session connection state
14.	1.3.6.1.4.1.99999.1.1.14	Data session connection type
15.	1.3.6.1.4.1.99999.1.1.15	Signal strength trap
16.	1.3.6.1.4.1.99999.1.1.16	Connection type trap

7.6.2 TRAP Settings

TRAP Service Settings

SNMP Trap

Host/IP

192.168.99.155

Port

162

Community

Public

TRAP Rules

Action	Enable	
Connection type trap	☒	EditDelete
Signal strength trap	☒	EditDelete

New TRAP Rule

Action

Signal strength trap

Add

	Field name	Sample	Explanation
1.	SNMP Trap	Enable/Disable	Enable SNMP (Simple Network Management Protocol) trap functionality
2.	Host/IP	192.168.99.155	Host to transfer SNMP (Simple Network Management Protocol) traffic to
3.	Port	162	Port for trap's host
4.	Community	Public/Private	The SNMP (Simple Network Management Protocol) Community is an ID that allows access to a router's SNMP data

7.7 SMS Utilities

RUT950 has extensive amount of various SMS Utilities. These are subdivided into 4 sections: general SMS Utilities, Send SMS, SMS Management and Remote Configuration.

7.7.1 SMS Utilities

SMS Utilities	Call Utilities	User Groups	SMS Management	Remote configuration
SMS Utilities				
SMS Rules				
Action	SMS Text	Enable	Sort	
Reboot	reboot	☒		<button>Edit</button> <button>Delete</button>
Get status	status	☒		<button>Edit</button> <button>Delete</button>
Switch WiFi on	wifion	☒		<button>Edit</button> <button>Delete</button>
Switch WiFi off	wifioff	☒		<button>Edit</button> <button>Delete</button>
Switch mobile data on	mobileon	☒		<button>Edit</button> <button>Delete</button>
Switch mobile data off	mobileoff	☒		<button>Edit</button> <button>Delete</button>
Change mobile data settings	cellular	☒		<button>Edit</button> <button>Delete</button>
Get list of profiles	profdisp	☒		<button>Edit</button> <button>Delete</button>

You can choose your SMS Keyword (text to be sent) and authorized phone number in the main menu. You can edit each created rule by hitting **Edit** button. All configuration options are listed below:

	Field name	Explanation	Notes
1.	Enable SMS Reboot	This check box will enable and disable SMS reboot function.	If you select Get Status, it will send routers status once it has rebooted and is operational again. For Get Status description see item No. 4 of this table.
2.	SMS text	SMS text which will reboot router.	SMS text can contain letters, numbers, spaces and special symbols. Capital letters also matters.
3.	Sender phone number	Phone number of person who can reboot router via SMS message	You can add as many phone numbers as you need. Dropdown list with additional rows will show up if you click on “add” icon at the end of phone number row.
4.	Get status	Check this to receive connection status via SMS after a reboot.	This is both separate SMS Rule and an option under SMS Reboot rule.
5.	Enable SMS Status	This check box will enable and disable SMS status function.	SMS status is disabled by default.
6.	SMS text	SMS text which will send routers status.	SMS text can contain letters, numbers, spaces and special symbols. Capital letters also matters.
7.	Sender phone number	Phone number of person who can receive router status via SMS message	You can add as many phone numbers as you need. Dropdown list with additional rows will show up if you click on “add” icon at the end of phone number row.
8.	Get Information	Data state Operator Connection type Signal Strength Connection State IP	You can select which status elements to display.
9.	Wireless On/Off via SMS	This check box will enable and disable this function	Allows Wi-Fi control via SMS
10.	Wireless on SMS text	SMS text which will turn Wi-Fi ON	SMS text can contain letters, numbers, spaces and special symbols. Capital letters also matters.
11.	Wireless on SMS text	SMS text which will turn Wi-Fi OFF	SMS text can contain letters, numbers, spaces and special symbols. Capital letters also matters.
12.	Sender Phone number	Phone number of person who can receive router status via SMS message	You can add as many phone numbers as you need. Dropdown list with additional rows will show up if you click on “add” icon at the end of phone number row.
13.	Write to config	Permanently saves Wi-Fi state	With this setting enabled, router will keep Wi-Fi state even after reboot. If it is not selected, router will revert Wi-Fi state after reboot.
14.	Mobile Settings via SMS	This check box will enable and disable mobile settings function	Allows cellular control via SMS
15.	SMS text	Key word that will precede actual configuration parameters	SMS text can contain letters, numbers, spaces and special symbols. Capital letters also matters.
16.	Sender phone number	Phone number of person who can receive router status via SMS message	You can add as many phone numbers as you need. Dropdown list with additional rows will show up if you click on “add” icon at the end of phone number row.

Mobile Settings via SMS parameters:

	Parameter	Value(s)	Explanation
1.	apn=	i.e. internet.gprs	Sets APN. i.e: apn=internet.gprs
2.	dialnumber=	i.e. *99***1#	Sets dial number
3.	auth_mode=	none pap chap	Sets authentication mode
4.	service=	auto 3gpreferred 3gonly 2gpreferred 2gonly	You can add as many phone numbers as you need. Dropdown list with additional rows will show up if you click on “add” icon at the end of phone number row.
5.	username=	user	Used only if PAP or CHAP authorization is selected
6.	password=	user	Used only if PAP or CHAP authorization is selected

All Mobile settings can be changed in one SMS. Between each <parameter=value> pair a space symbol is necessary.

Example: *cellular apn=internet.gprs dialnumber=*99***1# auth_mode=pap service=3gonly username=user password=user*

	Field name	Explanation	Notes
1.	3G On/Off via SMS	This check box will enable and disable this function	Function disabled by default
2.	3G on SMS text	Text to turn 3G connection ON	SMS text can contain letters, numbers, spaces and special symbols. Capital letters also matters.
3.	3G off SMS text	Text to turn 3G connection OFF	
4.	Write to config	Permanently saves 3G network state	With this setting enabled, router will keep 3G state even after reboot. If it is not selected, router will revert 3G state after reboot.
5.	Change profile via SMS	This check box will enable and disable this function	Function disabled by default
6.	SMS text to change profile	Keyword that must precede profile name	SMS text can contain letters, numbers, spaces and special symbols. Capital letters also matters.
7.	SMS text to get list of profiles	Upon receiving this SMS router will send list of created profiles to the sender number	
8.	Sender Phone number	Phone number of person who can control this function	You can add as many phone numbers as you need. Dropdown list with additional rows will show up if you click on “add” icon at the end of phone number row.

Important Notes:

- 3G settings must be configured correctly. If SIM card has PIN number you must enter it at “Network” > “3G” settings. Otherwise SMS reboot function will not work.
- Sender phone number must contain country code. You can check sender phone number format by reading the details of old SMS text messages you receiving usually.

7.7.2 Call Utilities

Allows users to Call the router in order to perform one of the actions: Reboot, Get Status, turn WiFi ON/OFF, turn Mobile data ON/OFF.

Only thing that is needed is to call routers SIM card number from allowed phone (user) and RUT950 will perform all actions that are assigned for this particular number.

7.7.3 User Groups

Gives possibility to group phone numbers for SMS management purposes. You can then later use these groups in all related SMS functionalities. This option helps if there are several Users who should have same roles when managing router via SMS.

7.7.4 SMS Management

You can send SMS from RUT WebUI. Under SMS Management you can read and delete received/stored SMS.

	Field name	Explanation	Notes
1.	Phone number	Recipients phone number to send SMS to	Should be preceded with country code, i.e. "+370"
2.	Message	SMS message text	All special characters are allowed.

With **storage** option you can choose for router NOT to delete SMS from SIM card. If this option is not used, router will automatically delete all incoming messages after they have been read. Message status "read/unread" is examined every 60 seconds. All "read" messages are deleted.

7.7.5 Remote Configuration

RUT9xx can be configured via SMS from another RUT9xx. You only have to select which configuration details are to be sent, generate the SMS Text, type in the phone number and Serial number of the router that you wish to configure and Send the SMS.

Total count of SMS is managed automatically. You should be aware of possible number of SMS and use this feature at your own responsibility. It should not, generally, be used if you have high cost per SMS. This is especially relevant if you will try to send whole OpenVPN configuration, which might acumulate ~40 SMS.

7.7.5.1 Receive configuration

This section controls how should configuration initiation party should identify itself. In this scenario RUT950 itself is being configured.

SMS UtilitiesCall UtilitiesUser GroupsSMS ManagementRemote configuration

ReceiveSend

Receive Configuration

Enable☒

Authorization method

No authorization

Allowed users

From all numbers

	Field name	Values	Notes
1.	Authorization method	No authorization By serial By administration password	Method on Receiving and Sending ends must match
2.	Allowed users	From all numbers From group From single number	Gives greater control and security measures

Note, that for safety reasons Authorization method should be configured before deployment of the router.

7.7.5.2 Send configuration

This section lets you configure remote RUT950 devices. The authorization settings must confirm to those that are set on the receiving party.

Generate

New

Wan☒

Interface

Wired

Protocol

Static

IP address

217.147.40.44

IP netmask

255.255.255.0

IP gateway

217.147.40.44

IP broadcast

217.147.40.255

Network
VPN

Generate
New

Wan
☒

Interface
3G

Mobile connection
Use pppd mode

APN
internet.mnc012.mcc34

Dialing number
+37060000001

Authentication method
CHAP

Username
admin

Password

Service mode
3G preferred

Lan
☒

IP address
192.168.1.1

IP netmask
255.255.255.0

IP broadcast
192.168.1.255

Send Configuration Message

Generate
Generate

Phone number
+37060000001

Serial number
12345689

Send
Send

	Field name	Values	Notes
1.	Generate SMS	New From current configuration	Generate new SMS settings or use current device configuration
2.	Mobile	Enable/Disable	Include configuration for mobile network
3.	WAN	Enable/Disable	Include configuration for WAN (Wide Area Network)
4.	LAN	Enable/Disable	Include configuration for LAN (Local Area Network)
5.	Interface	Wired Mobile	Interface type used for WAN (Wide Area Network) connection
6.	Protocol	Static/DHCP	Network protocol used for network configuration parameters management
7.	IP address	"217.147.40.44"	IP address that router will use to connect to the internet
8.	IP netmask	"255.255.255.0"	That will be used to define how large the WAN (Wide Area Network) network is
11.	IP gateway	"217.147.40.44"	The address where traffic destined for the internet is

			routed to
12.	IP broadcast	"217.147.40.255"	A logical address at which all devices connected to a multiple-access communications network are enabled to receive datagrams
13.	Primary SIM card	SIM1/SIM2	A SIM card that will be used
14.	Mobile connection	Use pppd mode Use ndis mode	An underlying agent that will be used for mobile data connection creation and management
15.	APN	"internet.mnc012.mcc345.gprs"	(APN) is the name of a gateway between a GPRS, 3G or 4G mobile network and another computer network, frequently the public Internet.
16.	Dialing number	"+37060000001"	A phone number that will be used to establish a mobile PPP (Point-to-Point Protocol) connection
17.	Authentication method	CHAP/PAP/None	Select an authentication method that will be used to authenticate new connections on your GSM carrier's network
18.	User name	"admin"	User name used for authentication on your GSM carrier's network
19.	Password	"password"	Password used for authentication on your GSM carrier's network
20.	Service mode	2G only 2G preferred 3G only 3G preferred 4G (LTE) only 4G (LTE) preferred Automatic	Select network's preference. If your local mobile network supports GSM (2G), UMTS (3G) or LTE (4G) you can specify to which network you prefer to connect to
21.	IP address	"192.168.1.1"	IP address that router will use on LAN (Local Area Network) network
22.	IP netmask	"255.255.255.0"	A subnet mask that will be used to define how large the LAN (Local Area Network) network is
23.	IP broadcast	"192.168.1.255"	A logical address at which all devices connected to a multiple-access communications network are enabled to receive datagrams

Send Configuration Message

Phone number

Authorization method
No authorization ▼

Send

	Field name	Values	Notes
1.	Phone number	“+37060000001”	A phone number of router which will receive the configuration
2.	Authorization method	No authorization By serial By router admin password	What kind of authorization to use for remote configuration

7.8 SMS Gateway

7.8.1 Post/Get Configuration

Post/Get Configuration allows you to perform actions by writing these requests URI after your device IP address.

Do not forget to change parameters in the url according to your POST/GET Configuration!

	Action	POST/GET url e.g.
1.	View mobile messages list	/cgi-bin/sms_list?username=admin&password=admin01
2.	Read mobile message	/cgi-bin/sms_read?username=admin&password=admin01&number=+37060000001
3.	Send mobile messages	/cgi-bin/sms_send?username=admin&password=admin01&number=+37060000001&text=testmessage
4.	View mobile messages total	/cgi-bin/sms_total?username=admin&password=admin01
5.	Delete mobile message	/cgi-bin/sms_delete?username=admin&password=admin01&number=+37060000001

Post/Get Configuration	Email To SMS	Scheduled Messages	Auto Reply
-------------------------------	---------------------	---------------------------	-------------------

Post/Get Configuration

SMS Post/Get Settings

Enable ☐

User name

Password 

	Field name	Values	Notes
1.	Enable	Enable/Disable	Enable SMS management functionality through POST/GET
2.	User name	admin	User name used for authorization
3.	Password	admin01	Password used for authorization

7.8.2 Email to SMS

Post/Get Configuration	Email To SMS	Scheduled Messages	Auto Reply
-------------------------------	---------------------	---------------------------	-------------------

POP3 Email To SMS Configuration

Email To SMS Settings

Enable ☐

POP3 server

Server port

User name

Password 

Secure connection (SSL) ☐

Check email every Minutes

	Field name	Values	Notes
1.	Enable	Enable/Disable	Allows to convert received Email to SMS
2.	POP3 server	"pop.gmail.com"	POP3 server address
3.	Server port	"995"	Server authentication port
4.	User name	" admin "	User name using for server authentication
5.	Password	"admin01"	Password using for server authentication
6.	Secure connection	Enable/Disable	(SSL) is a protocol for transmitting private documents

	(SLL)		via the Internet. SSL uses a cryptographic system that uses two keys to encrypt data – a public key known to everyone and a private or secret key known only to the recipient of the message.
7.	Check mail every	Minutes Hours Days	Mail checking period

7.8.3 Scheduled Messages

Scheduled messages allows to periodically send mobile messages to specified number.

Post/Get Configuration	Email To SMS	Scheduled Messages	Auto Reply
------------------------	--------------	---------------------------	------------

Scheduled Messages

Configure time and text for scheduled messages.

Messages To Send			
Recipients number	Sending Interval	Enable	Sort
There are no scheduled messages created yet			

Scheduled messages Configuration:

Phone number	Message sending interval
	Day ▼ Add

7.8.3.1 Scheduled Messages Configuration

Post/Get Configuration **Email To SMS** **Scheduled Messages** **Auto Reply**

Scheduled Messages Configuration

Modify scheduled message

Enable ☐

Recipient's phone number

Message text

Message sending Interval

Day ▼

Hour

1 ▼

Minute

1 ▼

	Field name	Values	Notes
1.	Enable	Enable/Disable	Activates periodical messages sending.
2.	Recipient's phone number	"+37060000001"	Phone number that will receive messages.
3.	Message text	"Test"	Message that will be send.
4.	Message sending interval	Day Week Month Year	Message sending period.

7.8.4 Auto Reply Configuration

Auto reply allows replying to every message that router receives to everyone or to listed numbers only.

Post/Get Configuration **Email To SMS** **Scheduled Messages** **Auto Reply** **SMS Forwarding**

Auto Reply Configuration

Reply Configuration

Enable ☐

Don't save recieved message ☒

Mode

Everyone ▼

Message

	Field name	Values	Notes
1.	Enable	Enable/Disable	Auto mobile message reply to every received message.
2.	Don't save received message	Enable/Disable	Do not save received messages.
3.	Mode	Everyone Listed numbers	Message will be auto replied to everyone or to only listed numbers.
4.	Message	"Text"	Message that will be replied.

7.9 Hotspot

Wireless hotspot provides essential functionality for managing an open access wireless network. In addition to standard RADIUS server authentication there is also the ability to gather and upload detailed logs on what each device (denoted as a MAC address) was doing on the network (what sites were traversed, etc.).

7.9.1 General settings

General

Restricted Internet Access

Logging

Landing Page

Radius Server

Wireless Hotspot Configuration

General Settings

Enable

☒

AP IP

192.168.2.254/24

Authentication mode

Without radius

Protocol

HTTP

HTTPS redirect

☐

List Of Addresses The Client Can Access Without First Authenticating

Enable	Address	Port
There are no addresses created yet.		

Add

Users Configuration

Add

	Field name	Explanation
1.	Enabled	Check this flag to enable hotspot functionality on the router.
2.	AP IP	Access Point IP address. This will be the address of the router on the hotspot network. The router will automatically create a network according to its own IP and the CIDR number that you specify after the slash. E.g. "192.168.2.254/24" means that the router will create a network with the IP address 192.168.182.0, netmask 255.255.255.0 for the express purpose of containing all the wireless clients. Such a network will be able to have 253 clients (their IP addresses will be automatically granted to them and will range from 192.168.2.1 to 192.168.2.253).
3.	Authentication mode	External radius
4.	Radius server #1	The IP address of the RADIUS server that is to be used for Authenticating your wireless clients.

5.	Radius server #2	The IP address of the second RADIUS server.
6.	Authentication port	RADIUS server authentication port.
7.	Accounting port	RADIUS server accounting port.
8.	Authentication mode	Internal radius
9.	IP address or network of the client	E.g.(192.168.1.1 or 192.168.1.0/24)
10.	Authentication mode	Without radius
11.		Doesn't require any RADIUS configuration. Allows simple user connection based on username/password.
12.	Protocol	Either HTTP or HTTPS
13.	HTTPS redirect	Redirects HTTP pages to landing page.

7.9.2 Internet Access Restriction Settings

Allows to disable internet access in current day and hour every week.

General
Restricted Internet Access
Logging
Landing Page
Radius Server

Teltonika_Router

Internet Access Restriction Settings

Select Time To Restrict Access On Hotspot Teltonika_Router

Days/Hours	0-1h	1-2h	2-3h	3-4h	4-5h	5-6h	6-7h	7-8h	8-9h	9-10h	10-11h	11-12h	12-13h	13-14h	14-15h	15-16h	16-17h	17-18h	18-19h	19-20h	20-21h	21-22h	22-23h	23-24h
Monday																								
Tuesday																								
Wednesday																								
Thursday																								
Friday																								
Saturday																								
Sunday																								

☐ Internet access allowed
☒ Internet access blocked

7.9.3 Logging

General	Restricted Internet Access	Logging	Landing Page	Radius Server
---------	----------------------------	---------	--------------	---------------

Wireless Hotspot Logging Settings

Logging To FTP Settings

Enable ☐

Server address

User name

Password 

Port

	Field name	Explanation
1.	Enable	Check this box if you want to enable wireless traffic logging. This feature will produce logs which contain data on what websites each client was visiting during the time he was connected to your hotspot.
2.	Server address	The IP address of the FTP server to which you want the logs uploaded.
3.	User name	The username of the user on the aforementioned FTP server.
4.	Password	The password of the user.
5.	Port	The TCP/IP Port of the FTP server.

FTP Upload Settings

You can configure your timing settings for the log upload via FTP feature here.

Mode

Hours

Minutes

Days ☐ Monday
☐ Tuesday
☐ Wednesday
☐ Thursday
☐ Friday
☐ Saturday
☐ Sunday

	Field name	Explanation
1.	Mode	The mode of the schedule. Use "Fixed" if you want the uploading to be done on a specific time of the day. Use "Interval" If you want the uploading to be done at fixed interval.
2.	Weekdays	This field specifies on what weekdays the uploading should be done. The entry format is numbers from 1 to 7 separated by only commas. E.g. If you want to upload the logs on Monday, Wednesday and Saturday you should enter "1,3,6".
3.	Interval	Shows up only when "Mode" is set to Interval. Specifies the interval of regular uploads on one specific day. E.g. If you choose 4 hours, the uploading will be done on midnight, 4:00, 8:00, 12:00, 16:00 and 20:00.

4.	Hours, Minutes	Shows up only when “Mode” is set to Fixed. Uploading will be done on that specific time of the day. E.g. If you want to upload your logs on 6:48 you will have to simply enter hours: 6 and minutes: 48.
----	----------------	--

7.9.4 Landing Page

General
Restricted Internet Access
Logging
Landing Page
Radius Server

Wireless Hotspot Landing Settings

Landing Page Settings

Page title

Theme

Upload login page

	Field name	Explanation
1.	Page title	Will be seen as landing page title
2.	Theme	Landing page theme selection
3.	Upload login page	Allows to upload custom landing page theme
4.	Demo preview	Allows preview theme without saving it

7.9.5 Radius server configuration

An authentication and accounting system used by many Internet Service Providers (ISPs). When you dial in to the ISP you must enter your username and password. This information is passed to a RADIUS server, which checks that the information is correct, and then authorizes access to the ISP system.

General

Restricted Internet Access

Logging

Landing Page

Radius Server

Radius Server Configuration

General Settings

Enable

Remote access

Clients Configuration Settings

Enable	Client name	IP address	Netmask	Radius shared secret
There are no clients created yet.				
Add				

Users Configuration Settings


Enable user	User name	User password	Reply-Message
There are no users created yet.			
Add			

	Field name	Explanation
1.	Enable	Activates an authentication and accounting system
2.	Remote access	Activates remote access to radius server

7.10 Auto Reboot

7.10.1 Ping Reboot

Ping Reboot function will periodically send Ping command to server and waits for echo receive. If no echo is received router will try again sending Ping command defined number times, after defined time interval. If no echo is received after the defined number of unsuccessful retries, router will reboot. It is possible to turn of the router rebooting after defined unsuccessful retries. Therefore this feature can be used as “Keep Alive” function, when router Pings the host unlimited number of times.

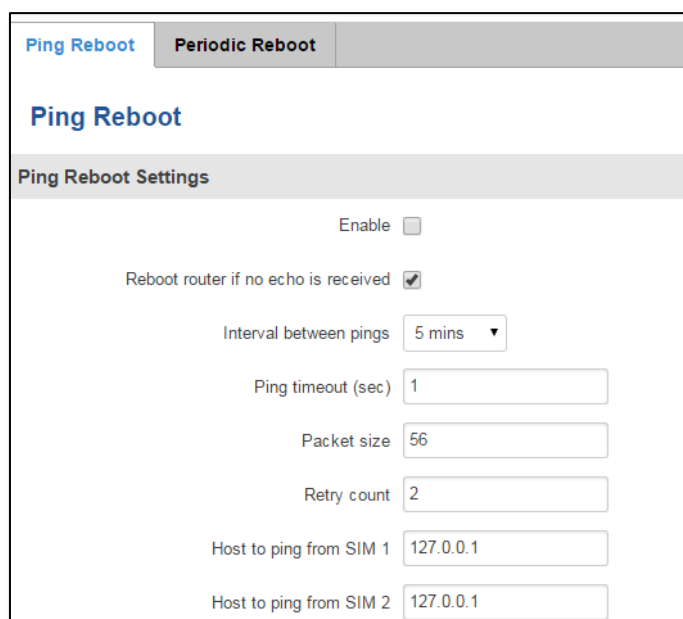

	Field name	Explanation	Notes
1.	Enable	This check box will enable or disable Ping reboot feature.	Ping Reboot is disabled by default.
2.	Reboot router if no echo received	This check box will disable router rebooting after the defined number of unsuccessful retries.	This check box must be unselected if you want to use Ping Reboot feature as “Keep Alive” function.
3.	Interval between Pings	Time interval in minutes between two Pings.	Minimum time interval is 5 minutes.
4.	Ping timeout (sec)	Time after which consider that Ping has failed.	Range(1-9999)
5.	Packet size	This box allows to modify sent packet size	Should be left default, unless necessary otherwise
6.	Retry count	Number of times to try sending Ping to server after time interval if echo receive was unsuccessful.	Minimum retry number is 1. Second retry will be done after defined time interval.
7.	Host to ping from SIM 1	IP address or domain name which will be used to send ping packets to. E.g. 192.168.1.1 (or www.host.com if DNS server is configured correctly)	Ping packets will be sending from SIM1.
8.	Host to ping from SIM 2	IP address or domain name which will be used to send ping packets to. E.g. 192.168.1.1 (or www.host.com if DNS server is configured correctly)	Ping packets will be sending from SIM2.

7.10.2 Periodic Reboot

Ping Reboot **Periodic Reboot**

Periodic Reboot

Periodic Reboot Setup

Enable ☐

Days ☐ Sunday
☐ Monday
☐ Tuesday
☐ Wednesday
☐ Thursday
☐ Friday
☐ Saturday

Hours

Minutes

	Field name	Explanation
1.	Enable	This check box will enable or disable Periodic reboot feature.
2.	Days	This check box will enable router rebooting at the defined days.
3.	Hours, Minutes	Uploading will be done on that specific time of the day

7.11 QoS

QoS (Quality of Service) is the idea that transmission rates, error rates, and other characteristics can be measured, improved, and, to some extent, guaranteed in advance. QoS is of particular concern for the continuous transmission of high-bandwidth video and multimedia information.

QoS can be improved with traffic shaping techniques such as packet, network traffic, port prioritization.

Quality of Service

With QoS you can prioritize network traffic selected by addresses, ports or services.

Interfaces

Interface	Enable	Calculate overhead	Half-duplex	Download speed (kbit/s)	Upload speed (kbit/s)	
WAN	☐	☐	☐	1024	128	<button>Delete</button>

Interface name: Add

Classification Rules

Target	Source host	Destination host	Service	Protocol	Ports	Number of bytes	Sort	
Priority	All	All	All	All	22,53			<button>Delete</button>
Normal	All	All	All	TCP	20,21,25,80			<button>Delete</button>
Express	All	All	All	All	5190			<button>Delete</button>

Add


8 System

8.1 Configuration Wizard

The configuration wizard provides a simple way of quickly configuring the device in order to bring it up to basic functionality. The wizard is comprised out of 4 steps and they are as follows:

Step 1 (General change)

First, the wizard prompts you to change the default password. Simply enter the same password into both Password and Confirmation fields and press **Next**.

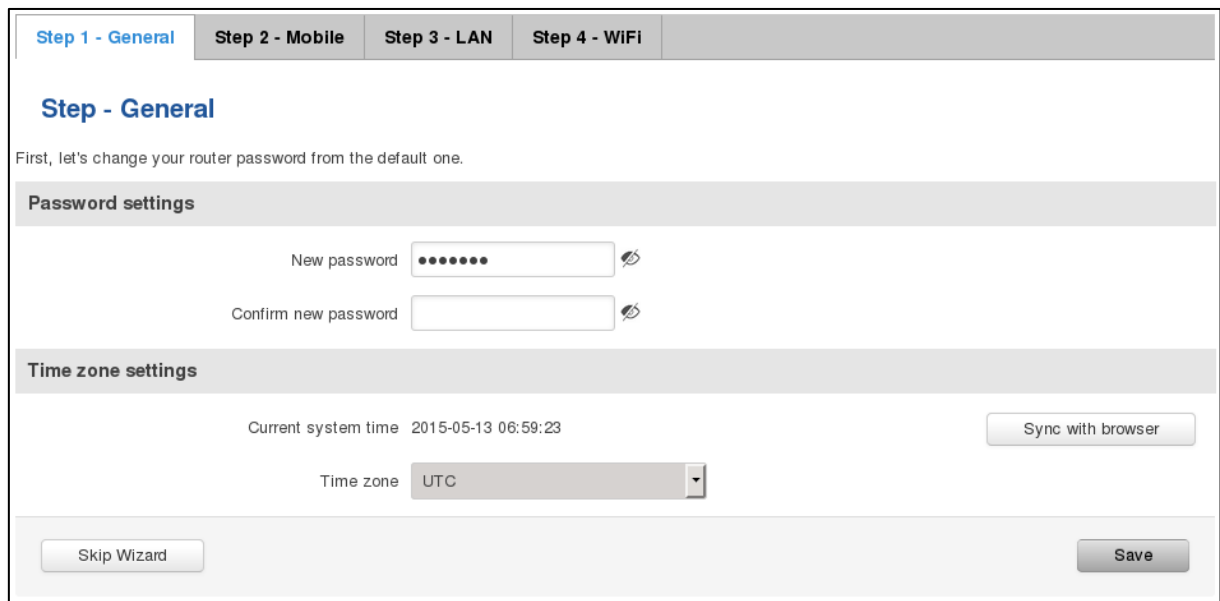

The screenshot shows the 'Step 1 - General' configuration wizard. At the top, there are four tabs: 'Step 1 - General' (active), 'Step 2 - Mobile', 'Step 3 - LAN', and 'Step 4 - WiFi'. Below the tabs, the title 'Step - General' is displayed. A message states: 'First, let's change your router password from the default one.' The 'Password settings' section contains two input fields: 'New password' (with a masked password '••••••') and 'Confirm new password' (empty). Both fields have an eye icon for toggling visibility. The 'Time zone settings' section shows the 'Current system time' as '2015-05-13 06:59:23' and a 'Time zone' dropdown menu set to 'UTC'. A 'Sync with browser' button is located to the right of the time display. At the bottom, there are two buttons: 'Skip Wizard' on the left and 'Save' on the right.

Step 2 (Mobile Configuration)

Next we have to enter your mobile configuration. On a detailed instruction on how this should be done see the Mobile section under Network

The screenshot shows the 'Mobile Configuration' step of a network setup wizard. The interface has a top navigation bar with four tabs: 'Step 1 - General', 'Step 2 - Mobile' (which is highlighted in blue), 'Step 3 - LAN', and 'Step 4 - WIFI'. Below the tabs, the title 'Mobile Configuration' is displayed in blue. A sub-header 'Mobile Configuration (SIM1)' is shown in a grey bar. The main content area contains several configuration fields: 'Operator profile' is a dropdown menu set to 'None'; 'APN' is a text input field; 'PIN number' is a text input field; 'Dialing number' is a text input field with the value '*99#'; 'Authentication method' is a dropdown menu set to 'None'; 'Service mode' is a dropdown menu set to '4G (LTE) preferred'; and 'Show mobile info at login page' is a checkbox that is currently unchecked. At the bottom of the form, there are two buttons: 'Skip Wizard' on the left and 'Save' on the right.

Step 3 (LAN)

Next, you are given the chance to configure your LAN and DHCP server options. For a detailed explanation see LAN under Network.

The screenshot shows the 'Step 3 - LAN' configuration step of a network setup wizard. The interface has a top navigation bar with four tabs: 'Step 1 - General', 'Step 2 - Mobile', 'Step 3 - LAN' (which is highlighted in blue), and 'Step 4 - WIFI'. Below the tabs, the title 'Step - LAN' is displayed in blue. A sub-header 'General Configuration' is shown in a grey bar. The main content area contains several configuration fields: 'IP address' is a text input field with the value '192.168.1.1'; 'Netmask' is a text input field with the value '255.255.255.0'; 'Enable DHCP' is a checkbox that is checked; 'Start' is a text input field with the value '100'; 'Limit' is a text input field with the value '150'; and 'Lease time' is a text input field with the value '12h'. At the bottom of the form, there are two buttons: 'Skip Wizard' on the left and 'Save' on the right.

Step 4 (Wi-Fi)

The final step allows you to configure your wireless settings in order to set up a rudimentary Access Point.

The screenshot shows the 'Step 4 - WiFi' configuration page. At the top, there are four tabs: 'Step 1 - General', 'Step 2 - Mobile', 'Step 3 - LAN', and 'Step 4 - WiFi' (which is highlighted). Below the tabs, the title 'Step - Wireless' is displayed. A note states: 'Now let's configure your wireless radio. (Note: if you are currently connecting via wireless and you change parameters, like SSID, encryption, etc. your connection will be dropped and you will have to reconnect with a new set of parameters.)' The main section is titled 'WiFi Configuration'. It contains several settings: 'Enable wireless' with a checked checkbox, 'SSID' with a text input field containing 'Teltonika_Router', 'Mode' with a dropdown menu showing '802.11g+n', 'Channel' with a dropdown menu showing 'Auto', 'Encryption' with a dropdown menu showing 'No encryption', and 'Country Code' with a dropdown menu showing '00 - World'. At the bottom, there are two buttons: 'Skip Wizard' on the left and 'Save' on the right.

When you're done with the configuration wizard, press **Save**.

8.2 Configuration profiles

Router can have virtually unlimited number of configuration profiles, which you can later apply either via WebUI or via SMS. When you add New Profile, you save **current** full configuration of the router.

Note: profile names **cannot** exceed 10 symbols.

The screenshot shows the 'Configuration Profiles' management interface. At the top, the title 'Configuration Profiles' is displayed. Below it, there is a section titled 'Manage Profiles'. This section includes a 'Profile name' input field and an 'Add profile' button. Below this, there is a table with three columns: 'Profile name', 'Created', and 'Action'. The table contains one row with the profile name 'first', the creation date '2014-12-03', and two buttons: 'Apply' and 'Delete'.

Profile name	Created	Action
first	2014-12-03	<button>Apply</button> <button>Delete</button>

8.3 Administration

8.3.1 General

General Troubleshoot Backup Access Control Diagnostics MAC Clone Overview

Administration Settings

Router Name And Host Name
Router name
Host name

Administrator Password
New password
Confirm new password

Language Settings
Language English

IPv6 support
Enable ☐

Login Page
Show mobile info at login page ☐
Show WAN IP at login page ☐

Leds Management
On/Off leds ☒

Restore Default Settings
Restore to default

	Field name	Explanation
1.	Router name	Enter your new router name.
2.	Host name	Enter your new host name
3.	Password	Enter your new administration password. Changing this password will change SSH password as well.
4.	Confirmation	Re-enter your new administration password.
5.	Language	Website will be translated into selected language.
6.	IPv6 support	Enable IPv6 support on router
7.	Show mobile info at login page	Show operator and signal strength at login page.
8.	Show WAN IP at login page	Show WAN IP at login page.
9.	On/Off leds	If uncheck, all routers leds are off.
10.	Restore to default	Router will be set to factory default settings

Important notes:

The only way to gain access to the web management if you forget the administrator password is to reset the device factory default settings. Default administrator login settings are:

User Name: **admin**

Password: **admin01**

8.3.2 Troubleshoot

Troubleshoot Settings

Troubleshoot

System log level: Debug

Save log in: RAM memory

Include GSMD information: ☒

Include PPPD information: ☐

Include chat script information: ☒

Include network topology information: ☐

System log: Show

Kernel log: Show

Troubleshoot file: Download

	Field name	Explanation
1.	System log level	Debug level should always be used, unless instructed otherwise.
2.	Save log in	Default RAM memory should always be used unless instructed otherwise.
3.	Include GSMD information	Default setting – enabled should be used, unless instructed otherwise.
4.	Include PPPD information	Default setting – disabled should be used, unless instructed otherwise.
5.	Include Chat script information	Default setting – enabled should be used, unless instructed otherwise.
6.	Include network topology information	Default setting – disabled should be used, unless instructed otherwise.
7.	System Log	Provides on-screen System logging information. It does not, however, substitute troubleshooting file that can be downloaded from System -> Backup and Firmware menu.
8.	Kernel Log	Provides on-screen Kernel logging information. It does not, however, substitute troubleshooting file that can be downloaded from System -> Backup and Firmware menu.
9.	Troubleshoot	Downloadable archive, that contains full router configuration and all System log files.

8.3.3 Backup

General

Troubleshoot

Backup

Access Control

Diagnostics

MAC Clone

Overview

Backup

Backup Configuration

Backup archive:

Download

Restore Configuration

Restore from backup:

Browse...

 No file selected.

Upload archive

	Field name	Explanation
1.	Backup archive	Download current router settings file to personal computer. This file can be loaded to other RUT900 with same Firmware version in order to quickly configure it.
2.	Restore from backup	Upload and restore router settings file from personal computer.

8.3.3.1 Access Control General

General

Troubleshoot

Backup

Access Control

Diagnostics

MAC Clone

Overview

General

Safety

Access Control

SSH Access Control

Enable SSH access ☒

Remote SSH access ☐

Port

22

Web Access Control

Enable HTTP access ☒

Enable remote HTTP access ☐

Port

80

Enable remote HTTPS access ☐

Port

443

Remote Access Control

Enable remote monitoring ☐

	Field name	Explanation
1.	Enable SSH access	Check box to enable SSH access functionality.
2.	Remote SSH access	If check box is selected – user can access the router via SSH from outside (WAN).
3.	Port	Port to listen for SSH access.
4.	Enable HTTP access	Check box to enable HTTP access functionality.

5.	Enable remote SSH access	If check box is selected users can access the router via the HTTP WEB Interface from the outside (WAN).
6.	Enable remote HTTPS access	If check box is selected users can access the router via the HTTPS WEB Interface from the outside (WAN).
7.	Enable remote monitoring	Check box to enable remote monitoring server access. Contact support to get account.

Note: The router has 2 users: “admin” for WebUI and “root” for SSH. When logging in via SSH use “root” .

8.3.3.2 Access Control Safety

General

Troubleshoot

Backup

Access Control

Diagnostics

MAC Clone

Overview

General

Safety

Block Unwanted Access

SSH Access Secure

Enable

Clean after reboot

Fail count

5

WebUI Access Secure

Enable

Clean after reboot

Fail count

5

List Of Blocked Addresses

Service

Blocked address

There are no addresses blocked

	Field name	Explanation
1.	SSH access secure enable	Check box to enable SSH access secure functionality.
2.	Clean after reboot	If check box is selected – blocked address removed after reboot.
3.	Fail count	How much time can try to connect.
4.	WebUI access secure enable	Check box to enable WebUI access secure functionality.

8.3.4 Diagnostics

General	Troubleshoot	Backup	Access Control	Diagnostics	MAC Clone	Overview
---------	--------------	--------	----------------	--------------------	-----------	----------

Diagnostics

Network Utilities

Host

Action

	Field name	Explanation
1.	Host	Enter server IP address or hostname.
2.	Ping	Utility used to test the reachability of a host on an Internet IP network and to measure the round-trip time for messages sent from the originating host to a destination server. Server echo response will be shown after few seconds if server is accessible.
3.	Traceroute	Diagnostic tool for displaying the route (path) and measuring transit delays of packets across an Internet IP network. Log containing route information will be shown after few seconds.
4.	Nslookup	Network administration command-line tool for querying the Domain Name System (DNS) to obtain domain name or IP address mapping or for any other specific DNS record. Log containing specified server DNS lookup information will be shown after few seconds.

8.3.5 MAC Clone

General	Troubleshoot	Backup	Access Control	Diagnostics	MAC Clone	Overview
---------	--------------	--------	----------------	-------------	------------------	----------

MAC Address Clone

MAC Address Clone

WAN MAC address

	Field name	Explanation
1.	WAN MAC address	Enter new WAN MAC address.

8.3.6 Overview

General

Troubleshoot

Backup

Access Control

Diagnostics

MAC Clone

Overview

Overview Page Configuration

Overview Tables

System

Mobile

Wireless

WAN

Local network

Access control

Recent system events

Recent network events

	Field name	Explanation
1.	System	Check box to show System table in Overview page
2.	Mobile	Check box to show Mobile table in Overview page
3.	Wireless	Check box to show Wireless table in Overview page
4.	WAN	Check box to show WAN table in Overview page
5.	Local network	Check box to show Local network table in Overview page
6.	Access control	Check box to show Access control table in Overview page
7.	Recent system events	Check box to show Recent system events table in Overview page
8.	Recent network events	Check box to show Recent network events table in Overview page

8.4 User scripts

Advanced users can insert their own commands to execute at the end of the boot process.

8.5 Safe mode

Router contains two firmware images in its internal flash memory. One is master firmware which is the default firmware on is constantly used by the user. Another is safe mode firmware which plays the role of the backup to the master firmware.

Safe mode firmware has most function of master firmware but to reduce its size some function were removed. Removed functions are: Wireless Hotspot, VRRPD, SNMP, Web Filter

Safe mode firmware can be recognized from different logo and reduced menu in the WebUI. The sole purpose of safe mode firmware is to allow the user to update master firmware so all configuration options are removed. To make safe mode useful it is strongly recommended to back up configuration of master firmware when the user is satisfied with the setup. After configuration backup is created it can be tested by requesting safe mode.

Safe Mode

Status

Safe mode FW version RUT9XX_SM_00.01.292

Safe mode config backup date 2015-05-12, 12:12:09

Safe Mode Configuration

Write configuration to config partition

Delete configuration from config partition

Request safemode after reboot

8.6 Firmware

8.6.1 Firmware

Firmware

FOTA

Firmware

Current Firmware Information		Firmware Available On Server	
Firmware version	RUT9XX_R_00.01.299	Firmware version	RUT9XX_R_00.01.50
Firmware build date	2015-05-13, 11:26:59		
Kernel version	3.10.36		

Check for New FW ↻

Firmware Upgrade Settings	
Keep all settings	☐
Keep network settings	☐
Keep mobile settings	☐
Keep LAN settings	☐
Keep dynamic DNS settings	☐
Keep wireless settings	☐
Keep firewall settings	☐
Keep OpenVPN settings	☐

Upgrade from file ▾

Firmware image file

Browse...

No file selected.

Upgrade

Keep settings – when check box is selected router will keep saved user configuration settings after firmware upgrade. When check box is not selected all router settings will be restored to factory defaults after firmware upgrade. When upgrading firmware, you can choose settings that you wish to keep after the upgrade. This function is useful when firmware is being upgraded via Internet (remotely) and you must not lose connection to the router afterwards. In such case: **cellular settings** should be kept.

FW image – router firmware upgrade file.

Warning: Do not ever remove router power supply and do not press reset button during upgrade process! This will totally damage your router and it won't be accessible. If you have any problems related to firmware upgrade you should always consult with local dealer.

8.6.2 FOTA

Firmware

FOTA

Firmware Over The Air Configuration

Server Settings

Server address

http://teltonika.sritis.lt/rut9

User name

admin

Password

••••••

Enable auto check

☒

Auto check mode

On router startup

WAN wired

☐

Save

	Field name	Explanation
1.	Server address	Specify server address where to check for firmware updates. E.g. "http://teltonika.sritis.lt/rut9xx_auto_update/clients/"
2.	User name	Use user name for server authorization.
3.	Password	Use password name for server authorization.
4.	Enable auto check	Check box to automatically check for new firmware updates.
5.	Auto check mode	Select when to perform auto check function.
6.	WAN wired	Allows to update firmware from server only if routers WAN is wired (if box is checked).

8.7 Restore point

8.7.1 Restore point create

Create

Load

Create Restore Point


Create Restore Point And Download

Title

Download


Allows create firmware with all custom configuration.

8.7.2 Restore point load

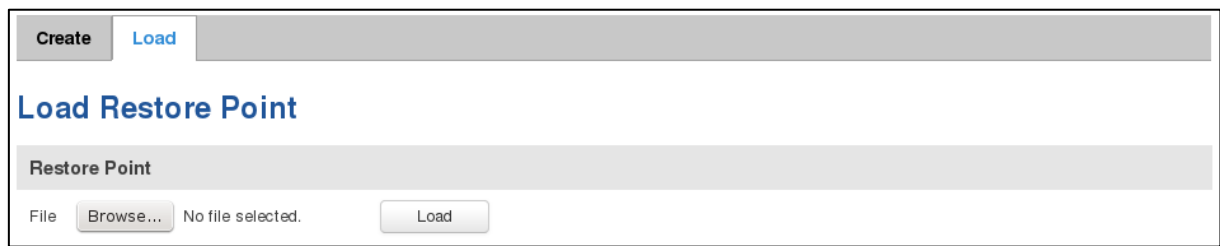

Allows restoring firmware and configuration from restore point.

8.8 Reboot

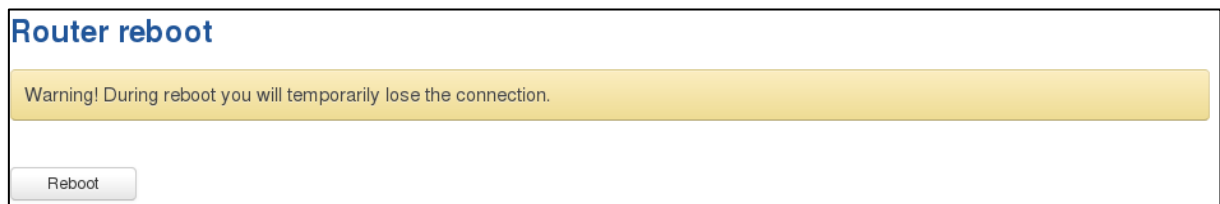

Reboot router by pressing button “Reboot”.

9 Functionality not listed in menu

9.1 SMS by HTTP POST/GET

It is possible to read and send SMS by using valid HTTP POST/GET syntax. Use web browser or any other compatible software to submit HTTP POST/GET string to router. Router must be connected to GSM network when using “SMS send” feature.

9.1.1 Syntax of HTTP POST/GET string

HTTP POST/GET string		Explanation
http://{IP_ADDRESS}	/cgi-bin/sms_read?number={MESSAGE_INDEX}	Read message
	/cgi-bin/sms_send?number={PHONE_NUMBER}&text={MESSAGE_TEXT}	Send message
	/cgi-bin/sms_delete?number={MESSAGE_INDEX}	Delete message
	/cgi-bin/sms_list?	List all messages
	/cgi-bin/sms_total?	Number of messages in memory

Note: parameters of HTTP POST/GET string are in capital letters inside curly brackets. Curly brackets (“{ }”) are not needed when submitting HTTP POST/GET string.

9.1.2 Parameters of HTTP POST/GET string

	Parameter	Explanation
1.	IP_ADDRESS	IP address of your router
2.	MESSAGE_INDEX	SMS index in memory
3.	PHONE_NUMBER	Phone number of the message receiver. Note: Phone number must contain country code. Phone number format is: 00{COUNTRY_CODE}{RECEIVER_NUMBER}.

		E.g.: 0037062312345 (370 is country code and 62312345 is receiver phone number)
4.	MESSAGE_TEXT	Text of SMS. Note: Maximum number of characters per SMS is 160. You cannot send longer messages. It is suggested to use alphanumeric characters only.

After every executed command router will respond with return status.

9.1.3 Possible responses after command execution

	Response	Explanation
1.	OK	Command executed successfully
2.	ERROR	An error occurred while executing command
3.	TIMEOUT	No response from the module received
4.	WRONG_NUMBER	SMS receiver number format is incorrect or SMS index number is incorrect
5.	NO MESSAGE	There is no message in memory by given index
6.	NO MESSAGES	There are no stored messages in memory

9.1.4 HTTP POST/GET string examples

http://192.168.1.1/cgi-bin/sms_read?number=3

http://192.168.1.1/cgi-bin/sms_send?number=0037061212345&text=test

http://192.168.1.1/cgi-bin/sms_delete?number=4

http://192.168.1.1/cgi-bin/sms_list

http://192.168.1.1/cgi-bin/sms_total

10 Device Recovery

The following section describes available option for recovery of malfunctioning device. Usually device can become unreachable due to power failure during firmware upgrade or if core files were wrongly modified in the file system. Teltonika's router does offer several ways to recover from these situations

10.1 Reset button

Reset button is located on the back panel of the device. Reset button has several functions:

Reboot the device. After the device has started if the reset button is pressed for up to 4 seconds the device will reboot. Start of the reboot will be indicated by flashing of all 5 signal strength LEDs together with green connection status LED.

Reset to defaults. After the device has started if the reset button is pressed for at least 5 seconds the device will reset all user changes to factory defaults and reboot. To help the user to determine how long should reset button be pressed signal strength LEDs count elapsed time. All 5 lit LEDs mean that 5 seconds have elapsed and reset button can be released. Start of the reset to defaults will be indicated by flashing of all 5 signal strength LEDs together with red connection status LED.

SIM PIN on the main SIM card (SIM1) is the only parameter that is kept after reset to defaults.

10.2 Safemode

Router contains two firmware images in its internal flash memory. One is master firmware which is the default firmware on is constantly used by the user. Another is safemode firmware which plays the role of the backup to the master firmware.

Safemode firmware has most function of master firmware but to reduce its size some function were removed. Removed functions are:

- Wireless Hotspot
- VRRPD
- SNMP
- Web Filter

Safemode firmware can be recognized from different logo and reduced menu in the WebUI. The sole purpose of safemode firmware is to allow the user to update master firmware so all configuration options are removed. To make safemode useful it is strongly recommended to back up configuration of master firmware when the user is satisfied with the setup (described in *Error! Reference source not found.* section). After configuration backup is created it can be ested by requesting safemode.

10.3 Bootloader's WebUI

Bootloader also provides a way to recover the router from damaged firmware. To make it easy for the user bootloader has its own webserver that can be accessed with any web browser.

Bootloader's webserver can be started:

Automatically. It happens when bootloader does not detect neither master nor safemode firmware. Flashing all 4 Ethernet LEDs indicate that bootloader's webserver has started.

Manually. Bootloader's webserver can be requested by holding reset button for 3 seconds while powering the device on. Flashing all 4 Ethernet LEDs indicate that bootloader's webserver has started.

Bootloader's WebUI can be accessed by typing this address in the web browser:

<http://192.168.1.1/index.html>

Note: it may be necessary to clear web browser's cache and to use incognito/anonymous window to access bootloader's WebUI

11 Glossary:

WAN – Wide Area Network is a telecommunication network that covers a broad area (i.e., any network that links across metropolitan, regional, or national boundaries). Here we use the term WAN to mean the external network that the router uses to reach the internet.

LAN – A local area network (LAN) is a computer network that interconnects computers in a limited area such as a home, school, computer laboratory, or office building.

DHCP – The Dynamic Host Configuration Protocol (DHCP) is a network configuration protocol for hosts on Internet Protocol (IP) networks. Computers that are connected to IP networks must be configured before they can communicate with other hosts. The most essential information needed is an IP address, and a default route and routing prefix. DHCP eliminates the manual task by a network administrator. It also provides a central database of devices that are connected to the network and eliminates duplicate resource assignments.

ETHERNET CABLE – Refers to the CAT5 UTP cable with an RJ-45 connector.

AP – Access point. An access point is any device that provides wireless connectivity for wireless clients. In this case, when you enable Wi-Fi on your router, your router becomes an access point.

DNS – Domain Name Resolver. A server that translates names such as www.google.it to their respective IPs. In order for your computer or router to communicate with some external server it needs to know it's IP, its name "www.something.com" just won't do. There are special servers set in place that perform this specific task of resolving names into IPs, called Domain Name servers. If you have no DNS specified you can still browse the web, provided that you know the IP of the website you are trying to reach.

ARP – Short for Address Resolution Protocol, a network layer protocol used to convert an IP address into a physical address (called a *DLC address*), such as an Ethernet address.

PPPoE – Point-to-Point Protocol over Ethernet. PPPoE is a specification for connecting the users on an Ethernet to the internet through a common broadband medium, such as DSL line, wireless device or cable modem.

DSL – digital subscriber line - it is a family of technologies that provide internet access by transmitting digital data using a local telephone network which uses the public switched telephone network.

NAT – network address translation – an internet standard that enables a local-area network (LAN) to use one set of IP addresses for internet traffic and a second set of addresses for external traffic.

LCP – Link Control Protocol – a protocol that is part of the PPP (Point-to-Point Protocol). The LCP checks the identity of the linked device and either accepts or rejects the peer device, determines the acceptable packet size for transmission, searches for errors in configuration and can terminate the link if the parameters are not satisfied.

BOOTP – Bootstrap Protocol – an internet protocol that enables a diskless workstation to discover its own IP address, the IP address of a BOOTP server on the network, and a file to be loaded into memory to boot the machine. This enables the workstation to boot without requiring a hard or floppy disk drive.

TCP – Transmission Control Protocol – one of the main protocols in TCP/IP networks. Whereas the IP protocol deals only with packets, TCP enables two hosts to establish a connection and exchange streams of data. TCP guarantees delivery of data and also guarantees that packets will be delivered in the same order in which they were sent.

TKIP – Temporal Key Integrity Protocol – scrambles the keys using hashing algorithm and, by adding an integrity-checking feature, ensure that the keys haven't been tampered with.

CCMP – Counter Mode Cipher Block Chaining Message Authentication Code Protocol – encryption protocol designed for Wireless LAN products that implement the standards of the IEEE 802.11i amendment to the original IEEE802.11 standard. CCMP is an enhanced data cryptographic encapsulation designed for data confidentiality and based upon the Counter Mode with CBC-MAC (CCM) of the AES (Advanced Encryption Standard) standard.

MAC – Media Access Control – hardware address that uniquely identifies each node of a network. In IEEE 802 networks, the Data Link Control (DCL) layer of the ISO Reference Model is divided into two sub-layers: the Logical Link Control (LLC) layer and the Media Access Control layer. The MAC layer interfaces directly with the network medium. Consequently, each different type of network medium requires a different MAC layer.

DMZ – Demilitarized Zone – a computer or small subnetwork that sits between a trusted internal network, such as a corporate private LAN, and an untrusted external network, such as the public internet.

UDP – User Datagram Protocol – a connectionless protocol that, like TCP, runs on top of IP networks. Provides very few error recovery services, offering instead a direct way to send and receive datagrams over IP network.

VPN – Virtual Private Network – a network that is constructed by using public wires — usually the Internet — to connect to a private network, such as a company's internal network.

VRRP – Virtual Router Redundancy Protocol - an election protocol that dynamically assigns responsibility for one or more virtual router(s) to the VRRP router(s) on a LAN, allowing several routers on a multiaccess link to utilize the same virtual IP address.

GRE Tunnel – Generic Routing Encapsulation - a tunneling protocol developed by Cisco Systems that can encapsulate a wide variety of network layer protocols inside virtual point-to-point links over an Internet Protocol internetwork.

PPPD – Point to Point Protocol Daemon – it is used to manage network connections between two nodes on Unix-like operating systems. It is configured using command-line arguments and configuration files.

SSH – Secure SHell - a program to log into another computer over a network, to execute commands in a remote machine, and to move files from one machine to another. It provides strong authentication and secure communications over insecure channels.

VRRPD – Virtual Router Redundancy Protocol – it is designed to eliminate the single point of failure associated with statically routed networks by automatically providing failover using multiple LAN paths through alternate routers.

SNMP – Simple Network Management Protocol - a set of protocols for managing complex networks. SNMP works by sending messages, called *protocol data units (PDUs)*, to different parts of a network.